



ASSEMBLY INSTRUCTION

Step 1:

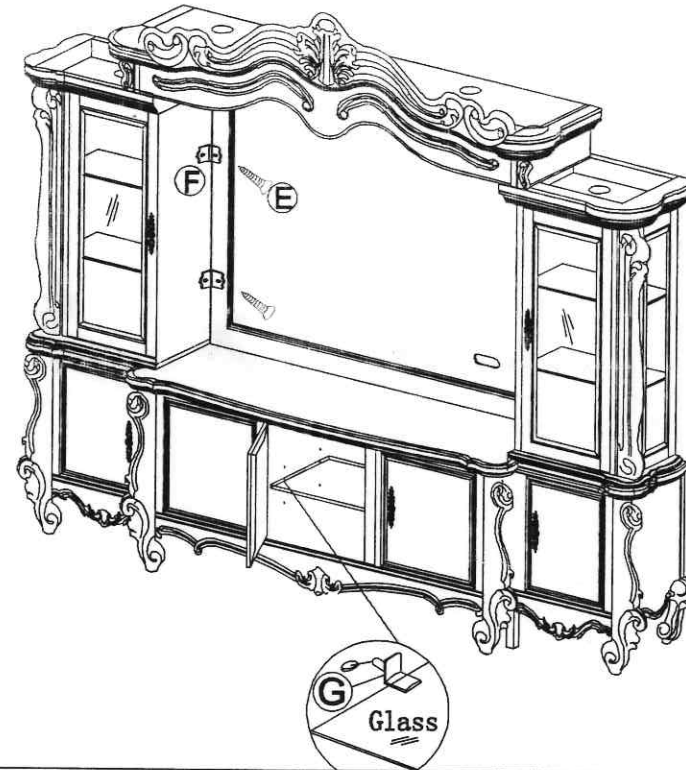

Finish:

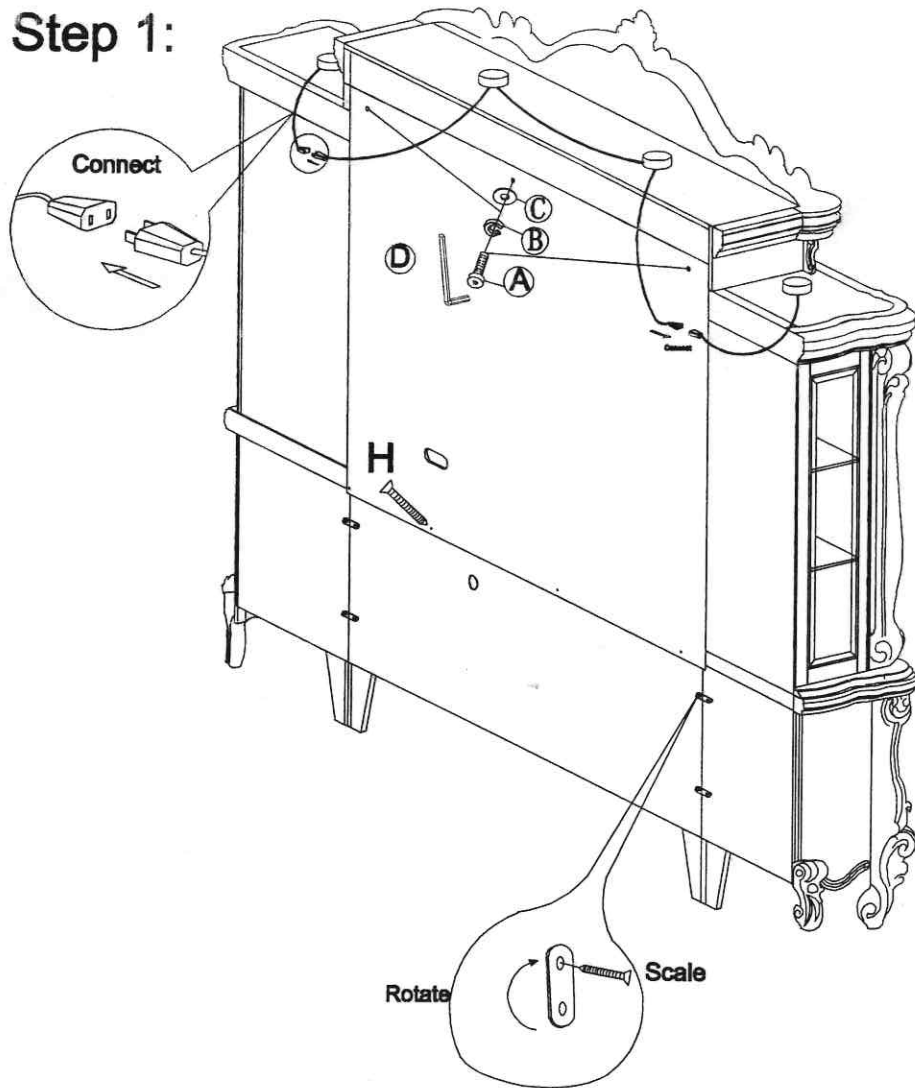

Hardware List:

| No.: | Description | Drawing | Size | Q'ty |
|------|--------------|---------|-------------|------|
| A | Blot | | ø5/16"X1" | 3 |
| B | Lock Washer | | ø5/16"X12mm | 3 |
| C | Flat Washer | | ø5/16"X22mm | 3 |
| D | Allen Wrench | | 6mm | 1 |
| E | Wood Screw | | 7"X12mm | 8 |
| F | Metal Conner | | 18X18X16 | 4 |
| G | Pins | | ø6 | 4 |
| H | Wood Screw | | 8X1" | 4 |