







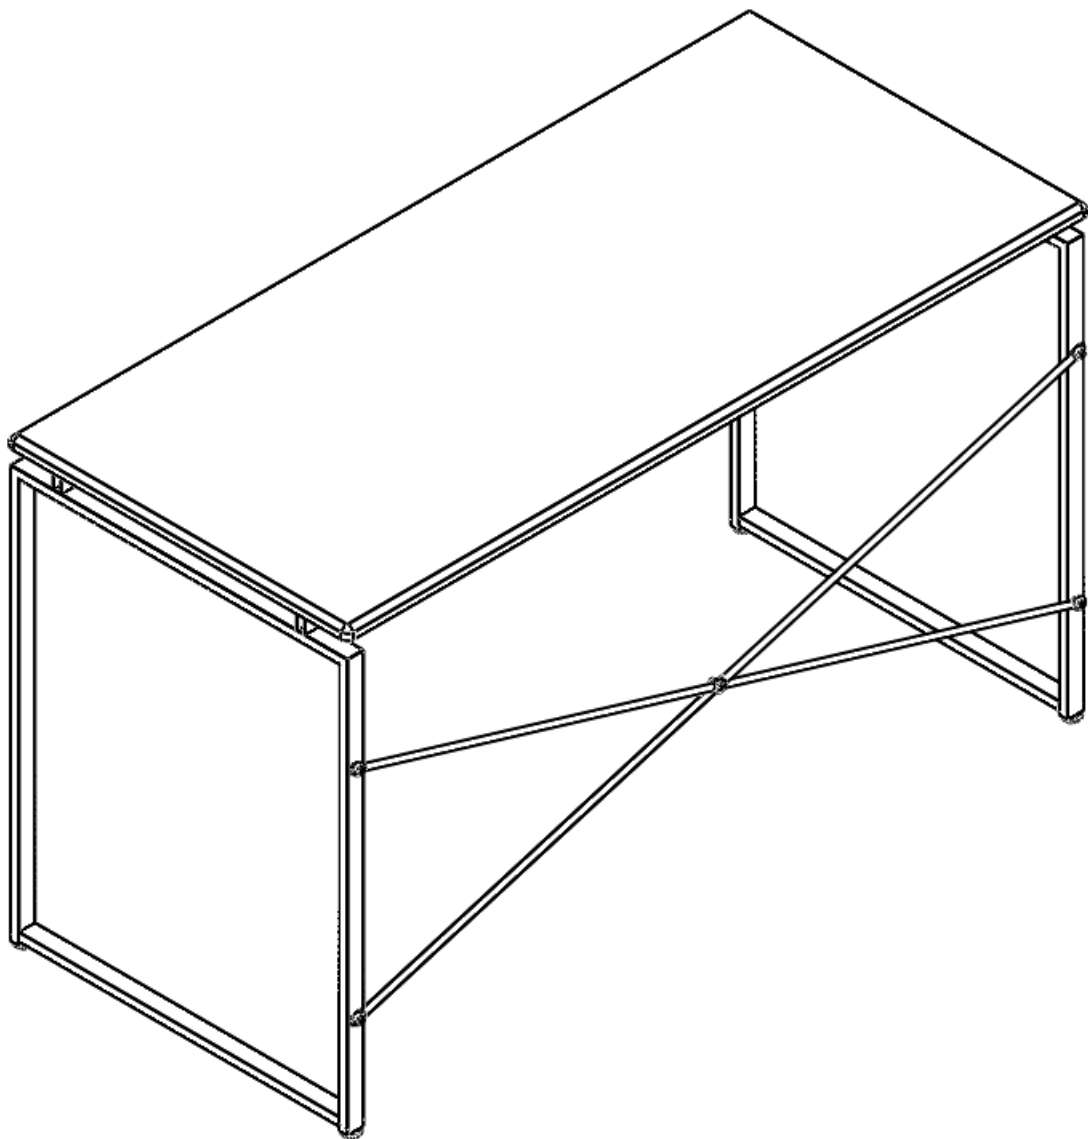


ASSEMBLY INSTRUCTION ACME FURNITURE  
MODEL # 92905, 92910

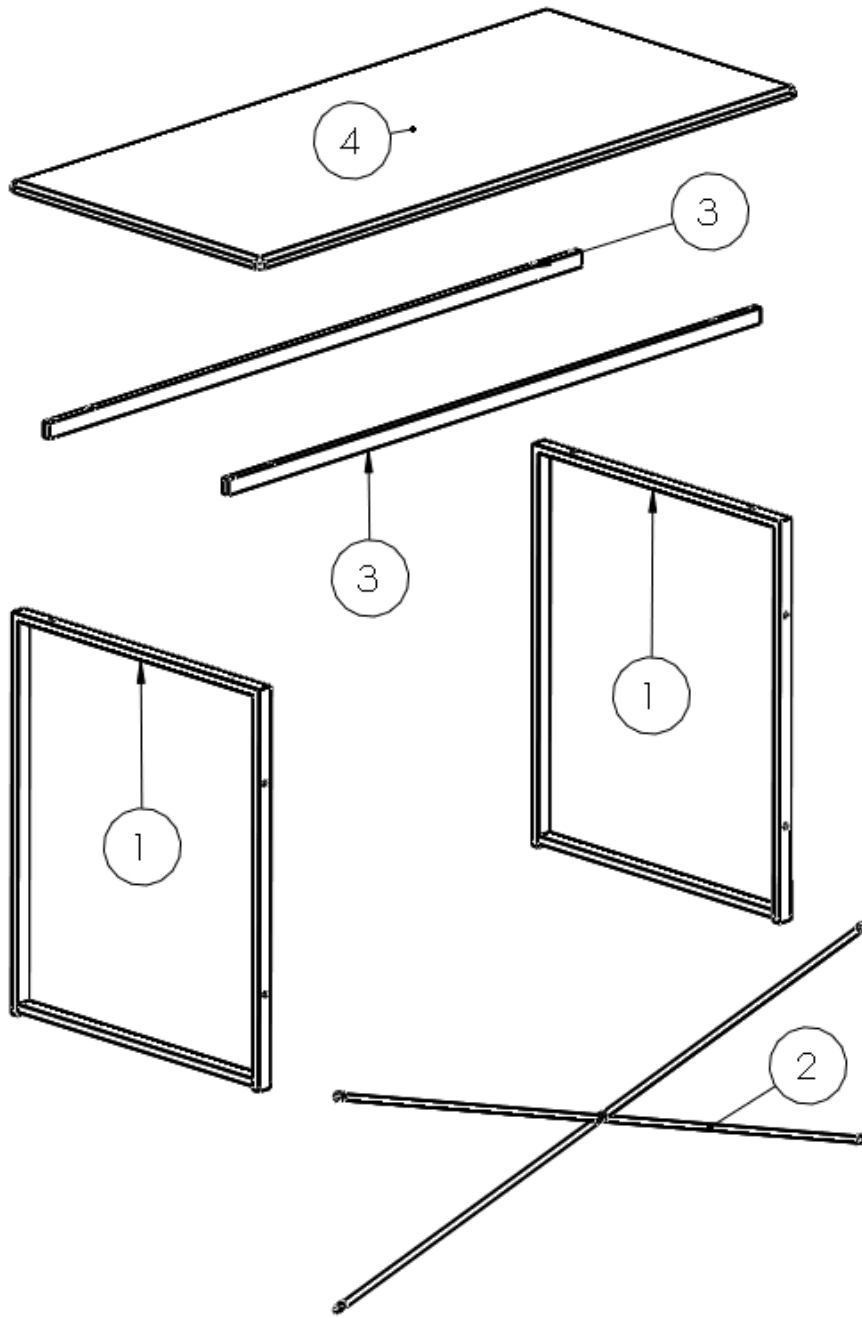


# PARTS




No.		No.		No.		No.					
(A)		5	(B)		4	(C)		4	(D)		1
(E)		4	(F)		1	(G)		4			





# STEP.1

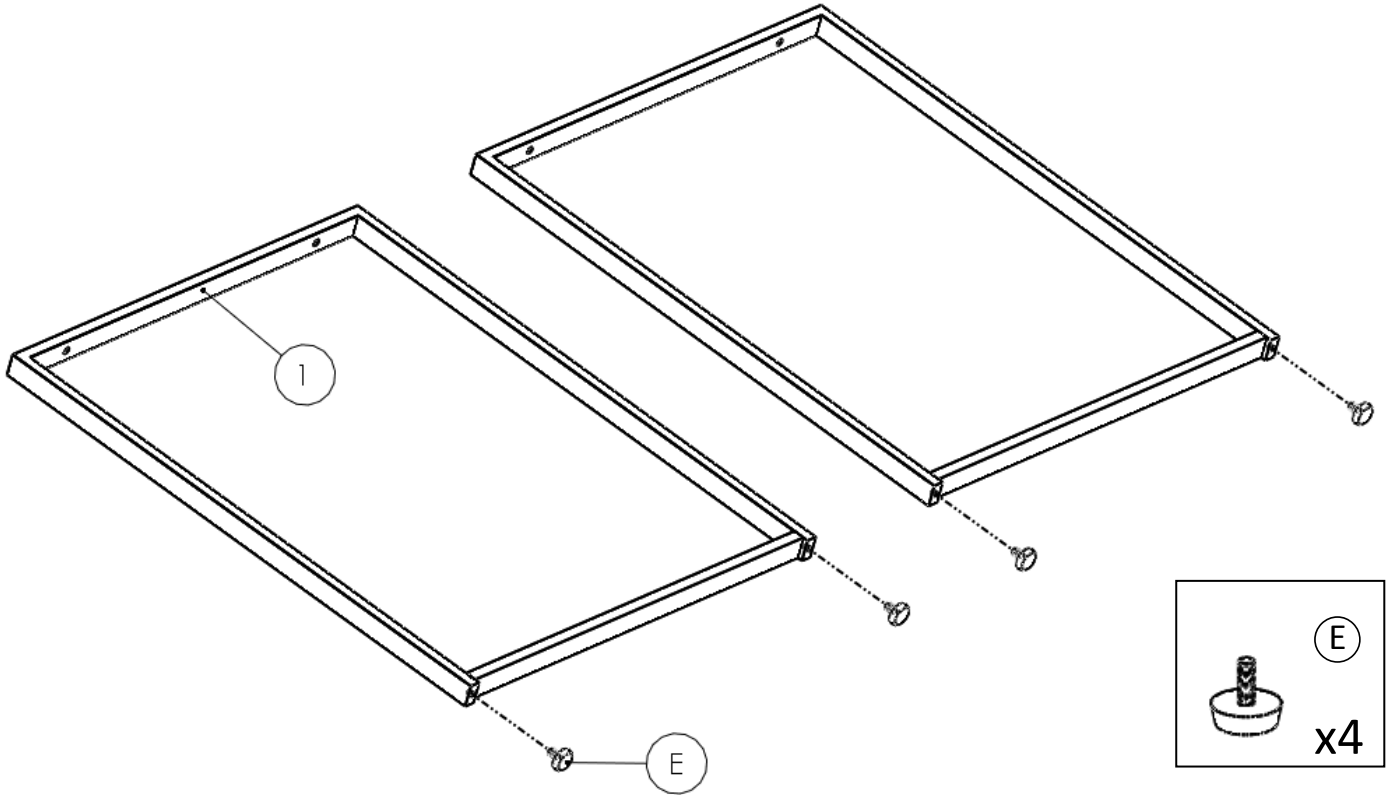

# STEP.2

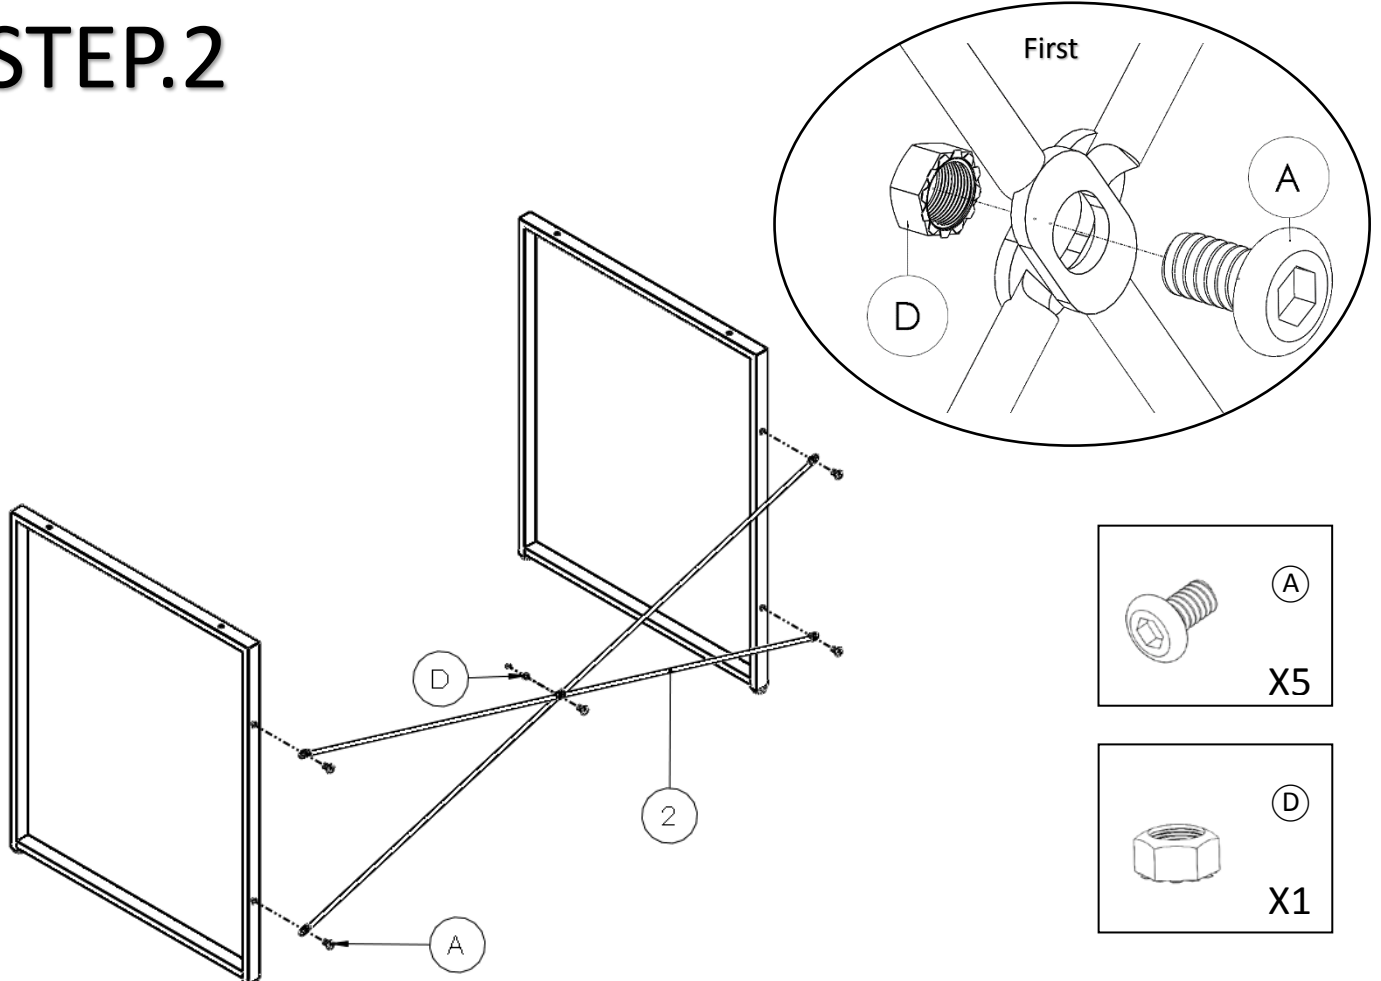

# STEP.3

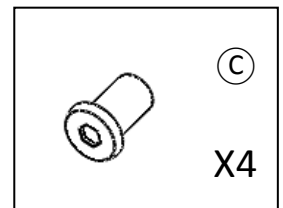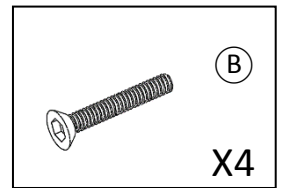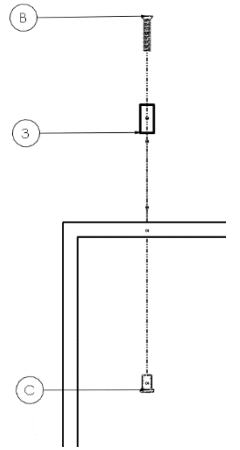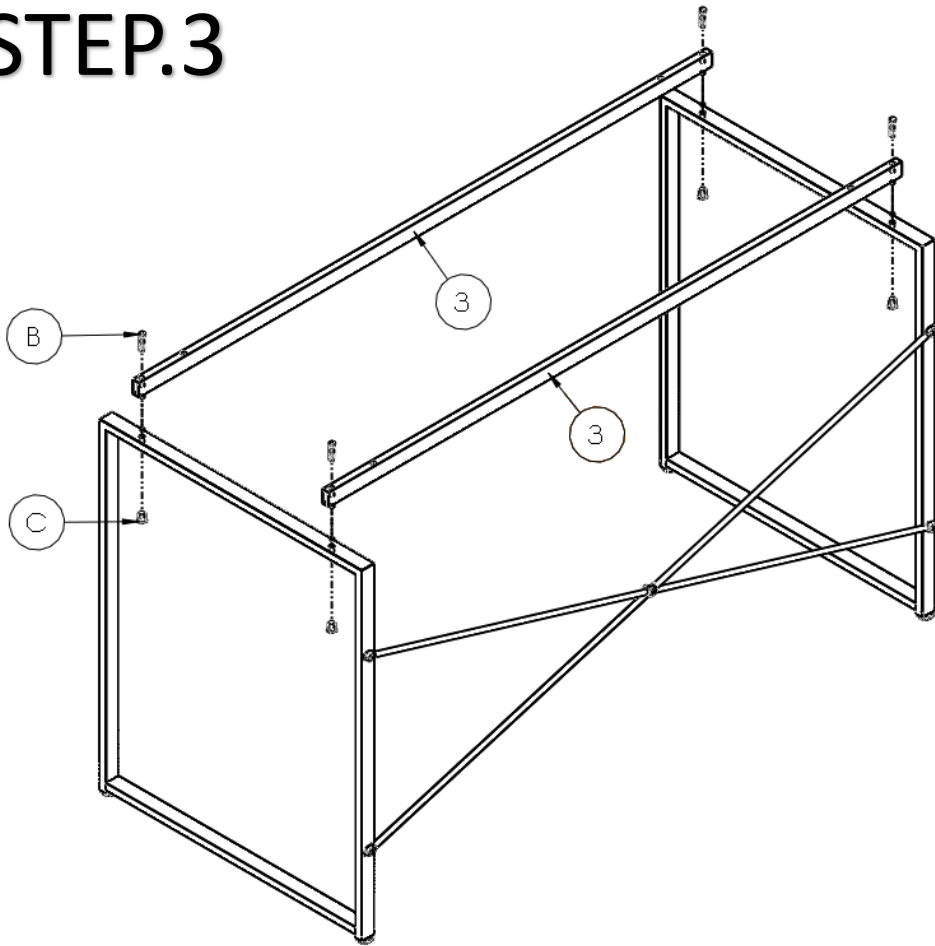

# STEP.4

