






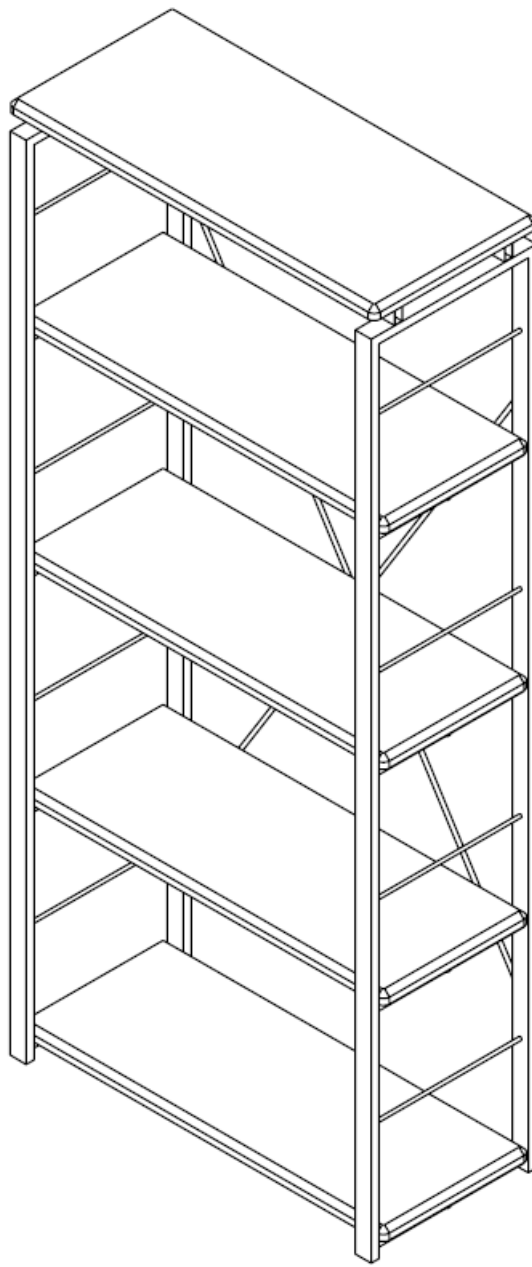

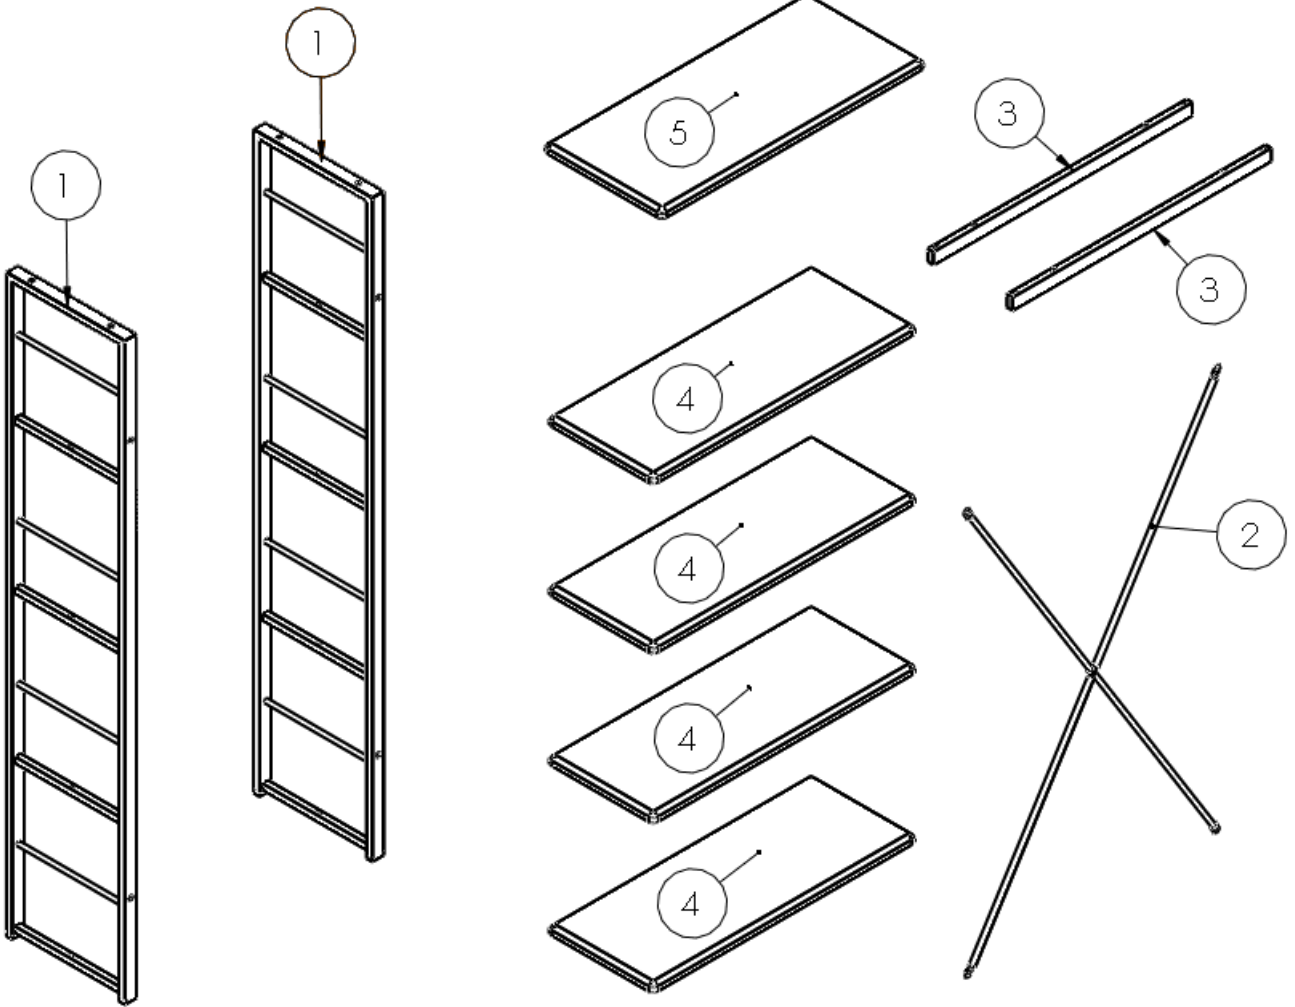


ASSEMBLY INSTRUCTION ACME FURNITURE
MODEL # 92907, 92912





PARTS







No.		No.		No.		No.		No.			
(A)		8	(B)		5	(C)		4	(D)		4
(E)		1	(F)		4	(G)		1	(H)		4





STEP.1

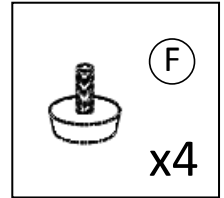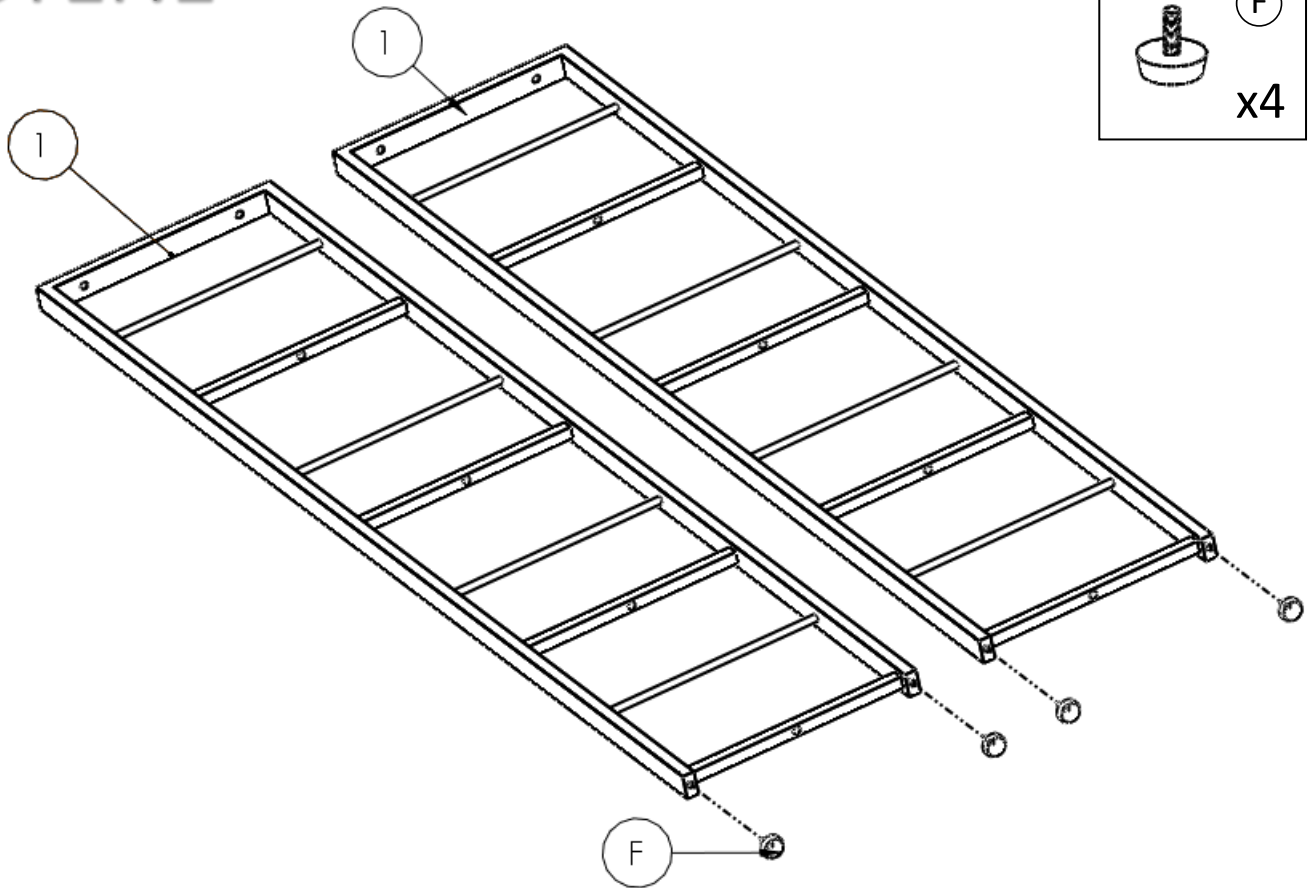




STEP.2

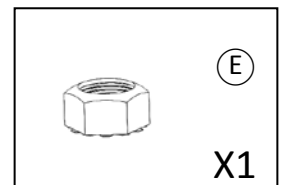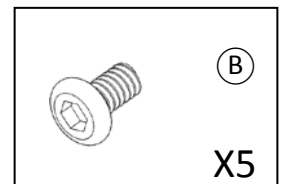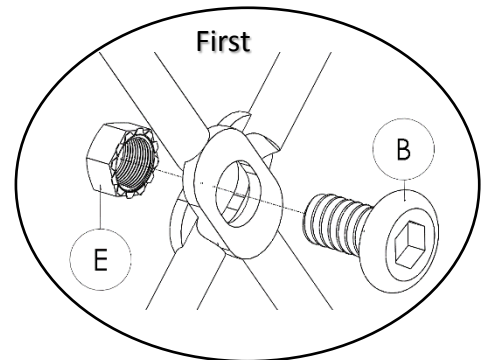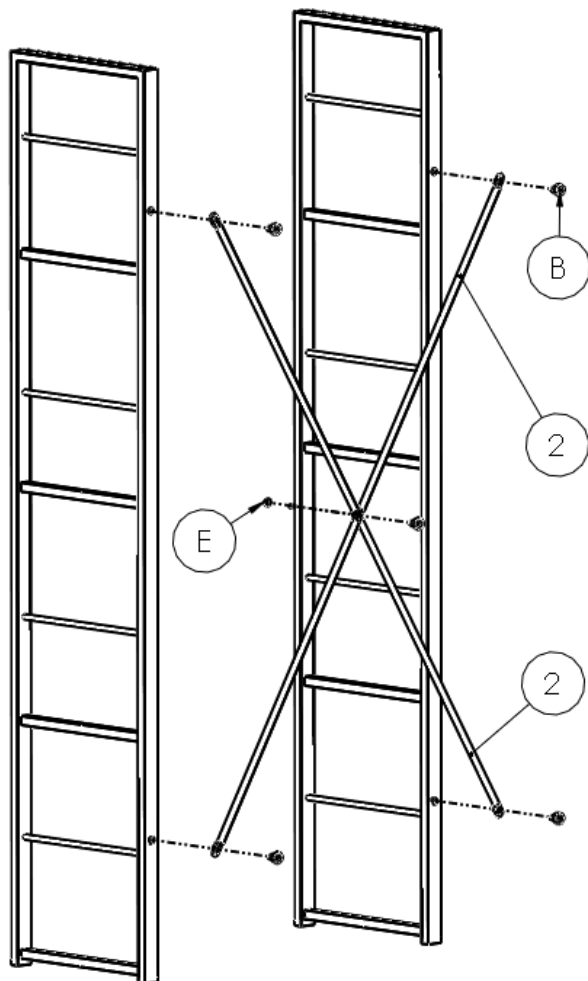

STEP.3

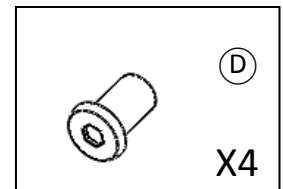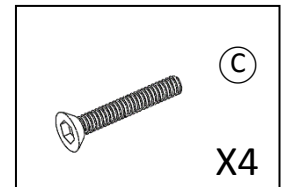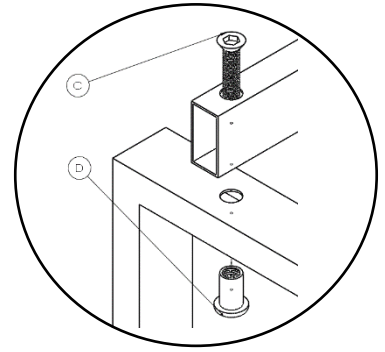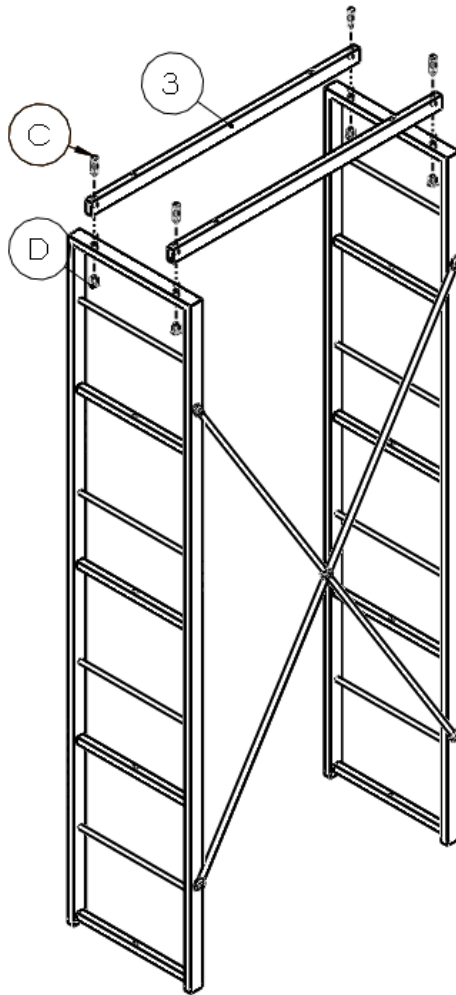

STEP.4

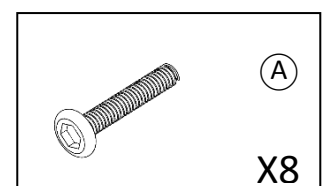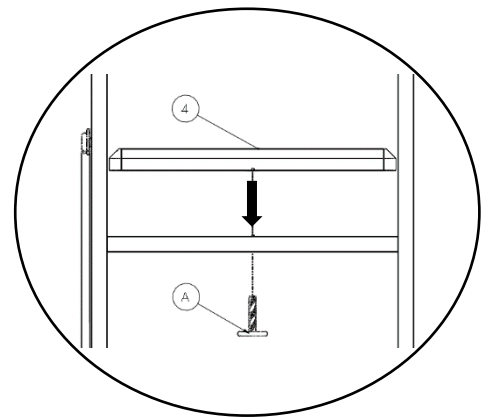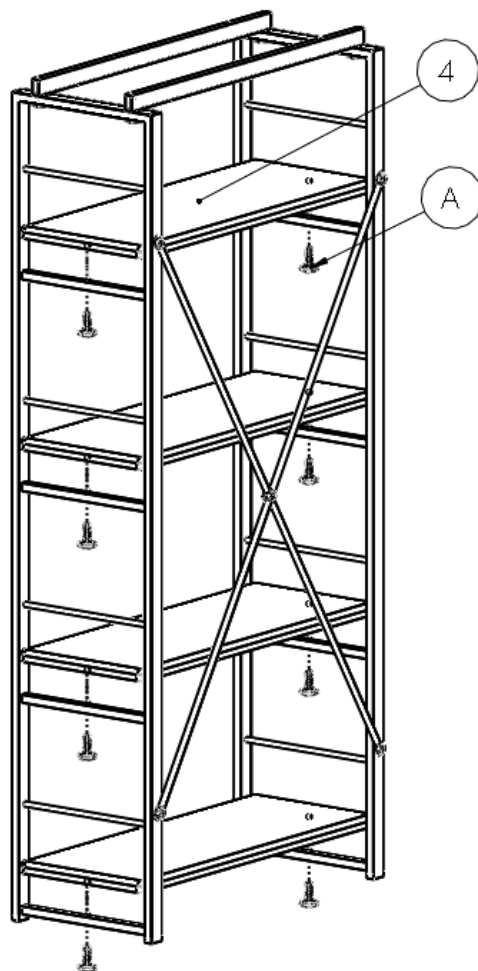

STEP.5

