
afifurnishings.com








**ATTENTION!** If you receive a damaged or defective item, please contact affurnishings at customerservice@affurnishings.com or 1-800-955-3726

afifurnishings.com

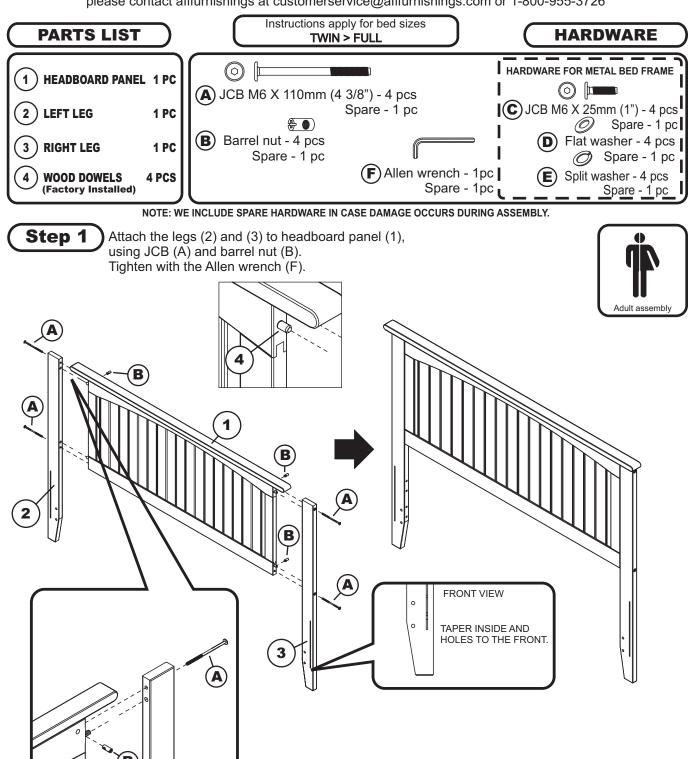

CODE ITEM ITEM

HB-NKT R-28282X R-28283X

PO:

If you purchased a wood headboard to attach to metal bed frame, please refer to page 2.



## ATTACHING HEADBOARD TO METAL BED FRAME

## **ASSEMBLY INSTRUCTIONS**

Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.


Instructions apply for bed sizes **Twin > Full** 



Metal bed frames are sold separately from wood headboards. The hardware shown on this page is supplied with your wood headboard for attaching the bed frame to the headboard. The metal bed frame is supplied with its own assembly instructions and hardware.

Step 1

Attach the headboard assembly to the metal frame using JCB (C), flat washer (D), and split washer (E) then tighten with Allen wrench (F), as shown below.

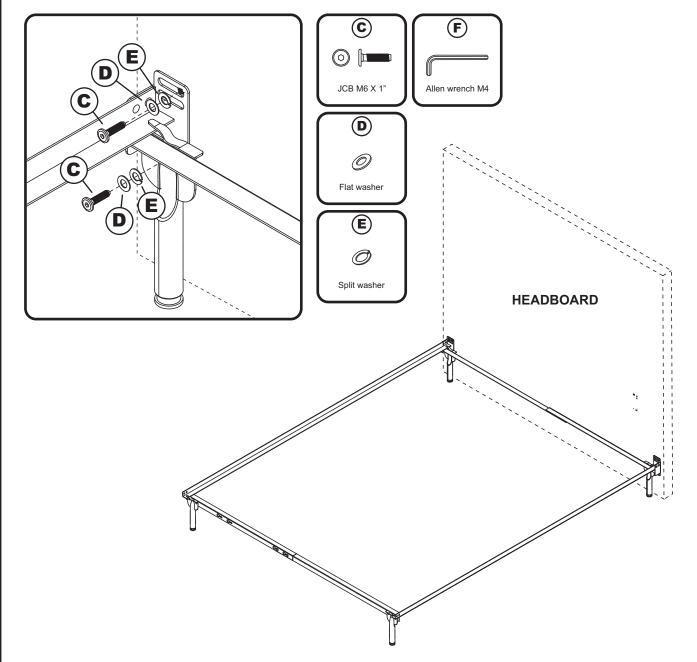

## **Congratulations!**

Your bed is now ready for use.

To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.