





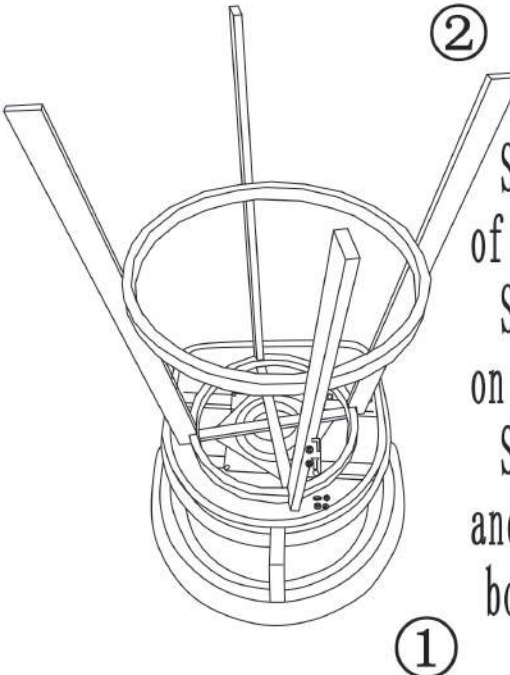


ITEM:	Installing		Accessories			Tool	
	①	②	③	④	⑤	⑥	
8301-BS/CS	 SEAT	 FRAME	SCREW 	NUT 	GASKET 	ALLEN KEY 	
Pcs	1	1	Size M6*25 4	M6 4	$\Phi_{18} \times 2 \times \Phi_8$ 4	Size $\Phi 4$	1

Step1



Step 1: Put the bolts (3) through holes of base and swivel.

Step 2: Put the gasket (5) and nut (4) on bottom of bolt as picture.

Step 3: Keep the nut not moving, and use allen key (6) to afix the bolt into nut until tighten.

Step2

