











Assembly Instruction

A*1		F*1+1EXT	 M6*40MM+M6*14*1MM
B*1		G*4+1EXT	 M6*50MM+M6*14*1MM
C*1		L*1	 M6

STEP 1

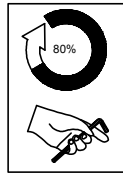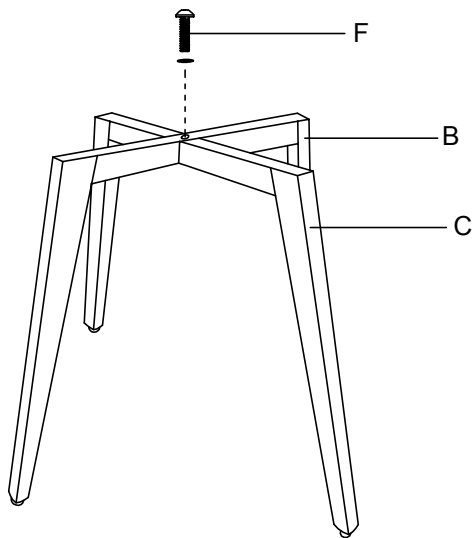

STEP 2

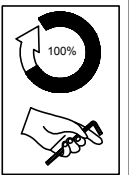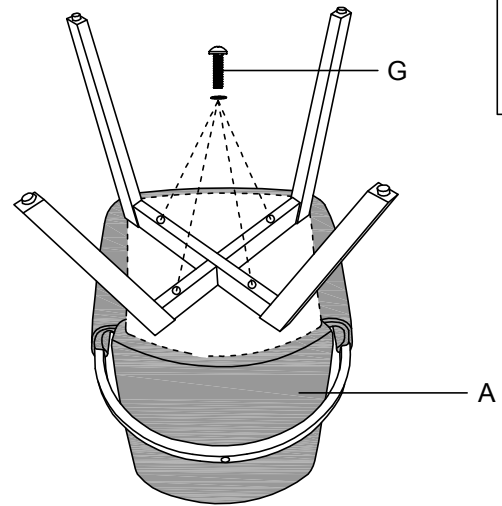

Fasten All screws indicate on Step 1 & Step 2.

STEP 3

