

ASSEMBLY INSTRUCTIONS




CROWNMARK :
B4712-F-HBFB/B4712-F-RAIL
B4715-F-HBFB/B4715-F-RAIL
FULL BED (4+4)

STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (1)with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4) .

STEP 2 : Hook SIDE RAIL (D) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).




(BOX 1)



BOX OF HEADBOARD

NO	ITEM	QTY
A	HEADBOARD 	1 PC
B	FOOTBOARD 	1 PC
C	HB LEG L&R 	2 PCS

(BOX 2)

BOX OF SIDE RAIL



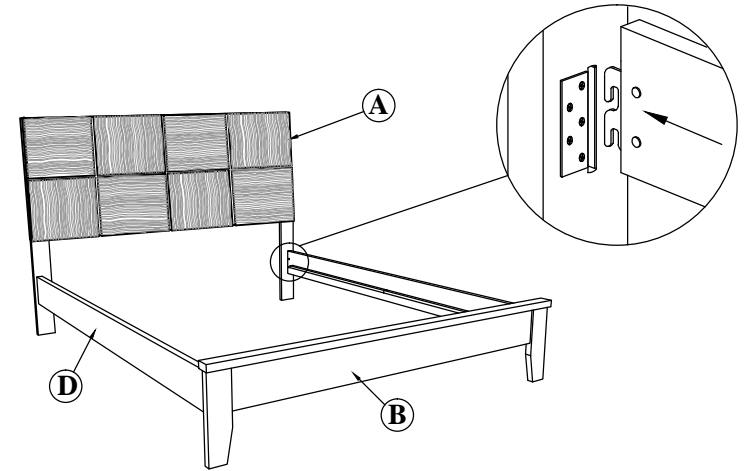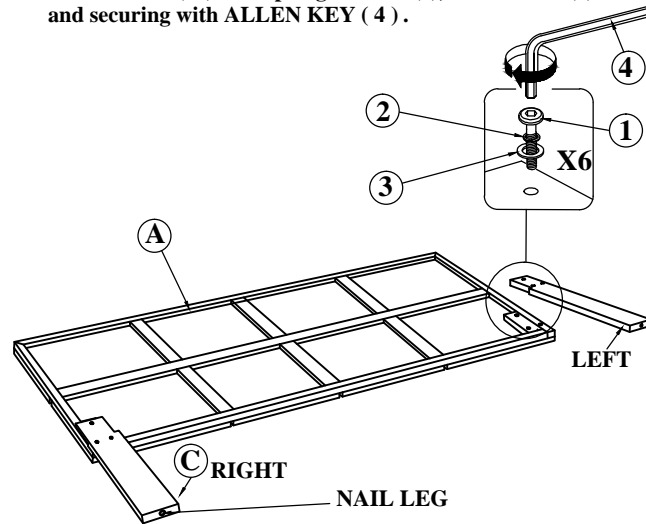

NO	ITEM	QTY
D	SIDE RAIL 	2 PCS
E	BED SLAT 	4 PCS
F	BED SLAT SUPPORT 	4 PCS



STEP 3 : Fix the Bed Slats Support (F) to Bed Slats (E) as Shown and fix the Bed Slats to Side Rail (D) by using Flat Head Chipboard Screw (5) . Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

(BOX 1)


HARDWARE LIST

NO	ITEM	QTY
1	JCBC BOLT M6 x 30MM BLK 	6 PCS
2	SPRING WASHER 1/4" RBW 	6 PCS
3	FLAT WASHER 1/4" ID x 13mm QD BLK 	6 PCS
4	ALLEN KEY m4 x 65mm BLK 	1 PC

(BOX 2)

HARDWARE LIST

NO	ITEM	QTY
5	FLAT HEAD CHIPBOARD SCREW m4 x 32mm RBW 	8 PCS

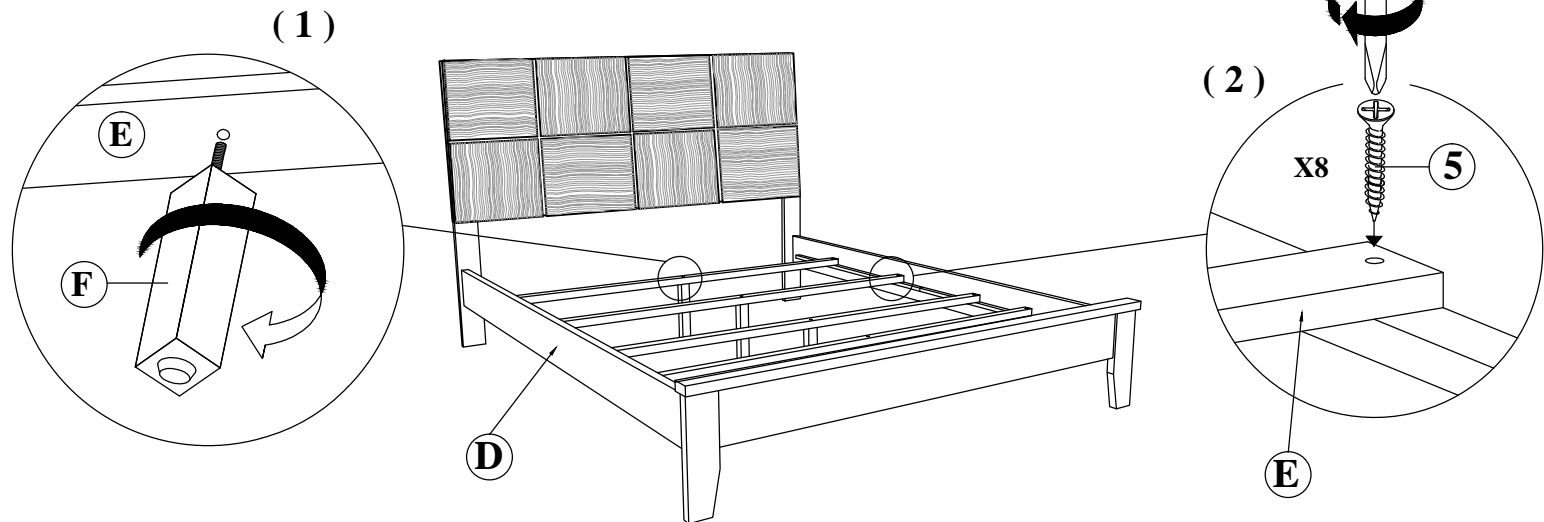

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.