

ASSEMBLY INSTRUCTIONS

CROWNMARK
MODEL :B4800-1/ B4800 -11
DRESSER & MIRROR

(Box 1)

BOX OF MIRROR

NO	ITEM	QTY
A	MIRROR	1 PC
B	MIRROR SUPPORT RAIL	2 PCS

(Box 2)

BOX OF DRESSER


NO	ITEM	QTY
C	DRESSER	1 PC

(Box 1)

HARDWARE LIST


NO	ITEM	QTY
1	JCBC BOLT M6 x 30MM BLK	4 PCS
2	JCBC BOLT M6 x 40MM BLK	4 PCS
3	SPRING WASHER 1/4" RBW	8 PCS
4	FLAT WASHER 1/4" ID x 19mmOD BLK	8 PCS
5	ALLEN KEY m4 x 65mm BLK	1 PC

STEP 1 : Draw out mirror support (B) from the carton box.

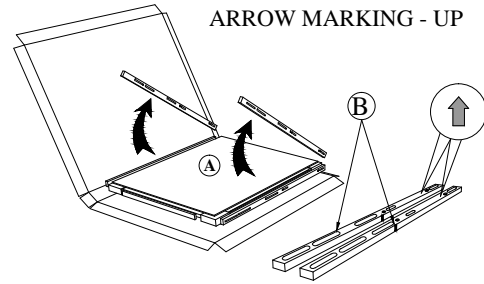

STEP 2 : Align & fasten mirror support (B) to the back of mirror (A) using short JCBC bolt(1),spring washer (3) & flat washer (4). DO NOT FULLY TIGHTEN AT THIS STEP.

Note : Make sure arrow marking of the mirror support (C) is aligned up.

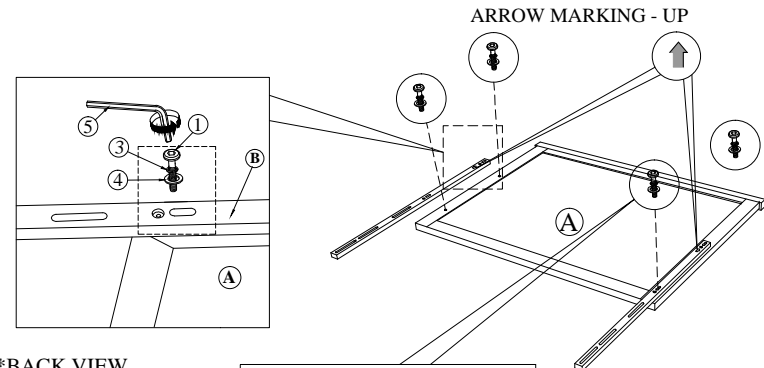


**BACK VIEW

WARNING !
 USE SHORT BOLT M6 x 30mm




STEP 3 :

Place mirror (A) on top of dresser (C). Align & fasten mirror support (C) to the back of dresser (B) using long JCBC bolt (2) , spring washer (3) & flat washer (4) THEN FULLY TIGHTEN ALL THE BOLTS AT STEP 2 & 3 WITH ALLEN KEY (5).

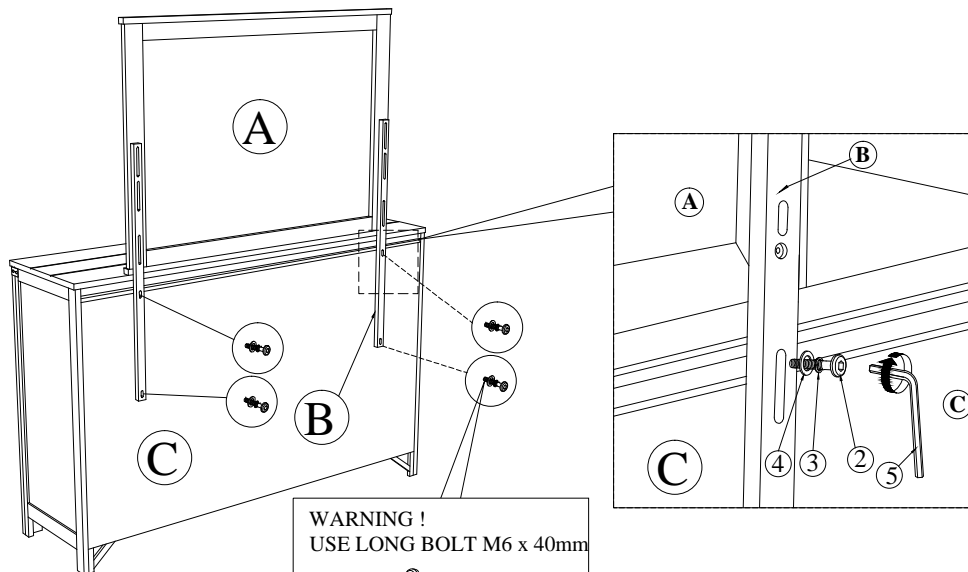

WARNING !
 USE LONG BOLT M6 x 40mm

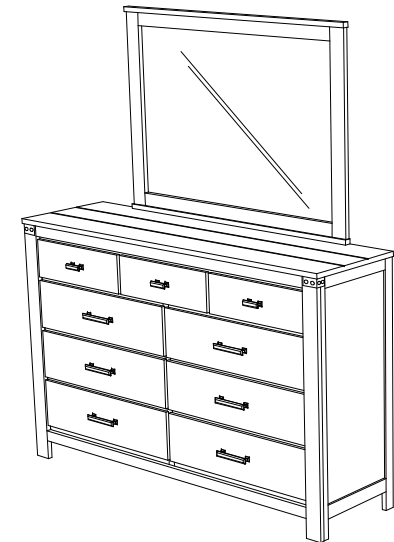

COMPLETED
ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.