

ASSEMBLY INSTRUCTIONS

**CROWNMARK
MODEL : B4810
QUEEN BED (4 + 4)**

**(BOX 1)
BOX OF HEADBOARD**

NO	ITEM	QTY
A	Headboard	1
B	Headboard Leg (L&R)	2

**(BOX 2)
BOX OF FOOTBOARD**

NO	ITEM	QTY
C	Footboard	1
D	Slat	4
E	Slat support	4


**(BOX 3)
BOX OF SIDE RAIL**

NO	ITEM	QTY
F	Side Rail	2


**(BOX 1)
HARDWARE LIST**

NO	ITEM	QTY
1	JCBC BOLT M6 x 35MM	6 PCS
2	SPRING WASHER 1/4" RBW	6 PCS
3	FLAT WASHER 1/4" ID x 13mmOD BLK	6 PCS
4	ALLEN KEY M4 x 65MM	1 PCS
5	CSK SCREW M4 x 32MM RBW	8 PCS


STEP 1 : Attach Head Board Leg (B) to Head Board (A) as shown using JCBC BOLT (1) , Spring Washer (2) , Flat Washer (3) and securing with ALLEN KEY (4) .

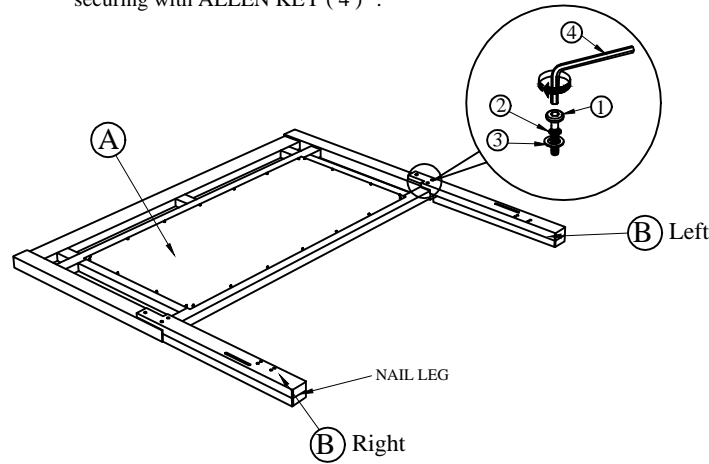

STEP 2 : Hook SIDE RAIL (F) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (C).

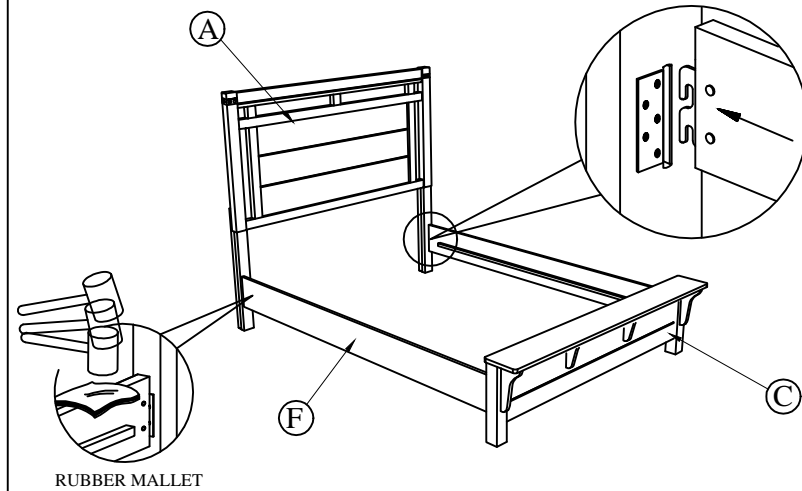

STEP 3 : Fix the Bed Slats Support (E) to Bed Slats (D) as Shown and fix the Bed Slats to Side Rail (F) by using Flat Head Chipboard Screw (5) . Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

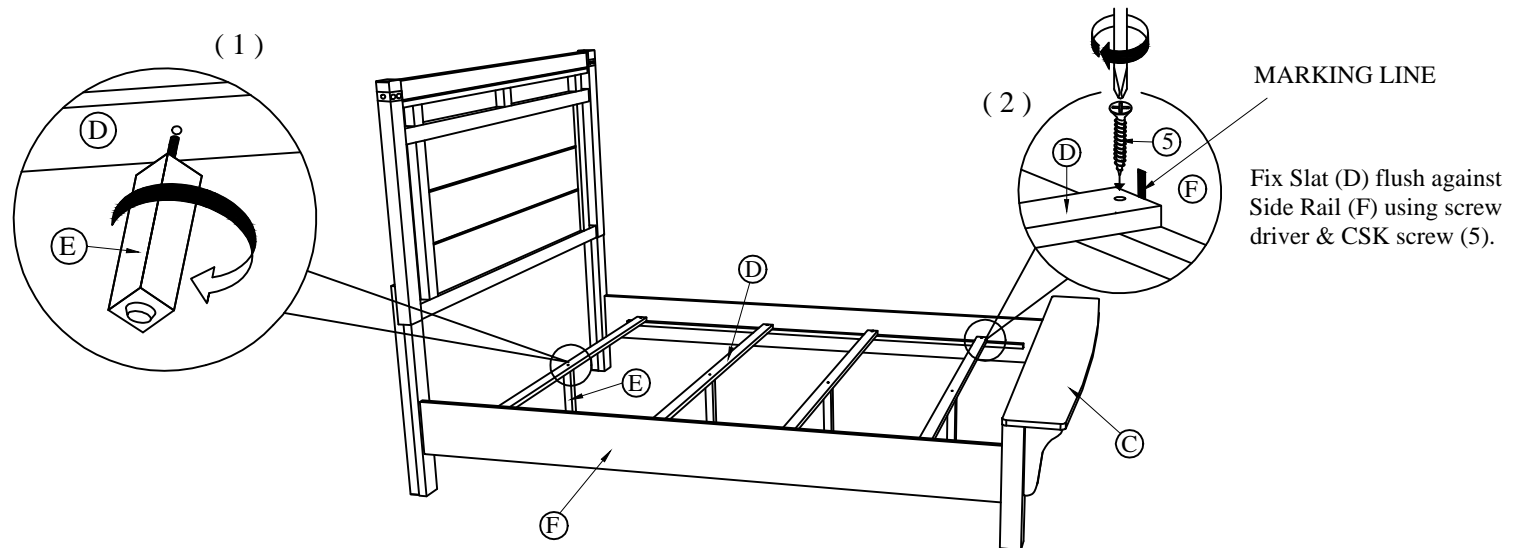

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.