




ASSEMBLY INSTRUCTION

MODEL NO: B6700-1&-11
B6710-1&-11
DRESSER & MIRROR



(BOX OF MIRROR)


ITEM	DRAWING	DESCRIPTION	QTY
A		MIRROR	1
B		MIRROR SUPPORT	2

(BOX OF DRESSER)

ITEM	DRAWING	DESCRIPTION	QTY
C		DRESSER	1


**(BOX OF MIRROR)
HARDWARE LIST**

1		JCBC M6 x 35mm With Spring Washer With Flat Washer	8
2		ALLEN KEY (M4)	1

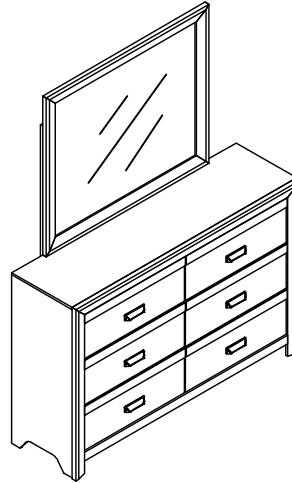

COMPLETED
DRESSER & MIRROR
ASSEMBLY

Step 1

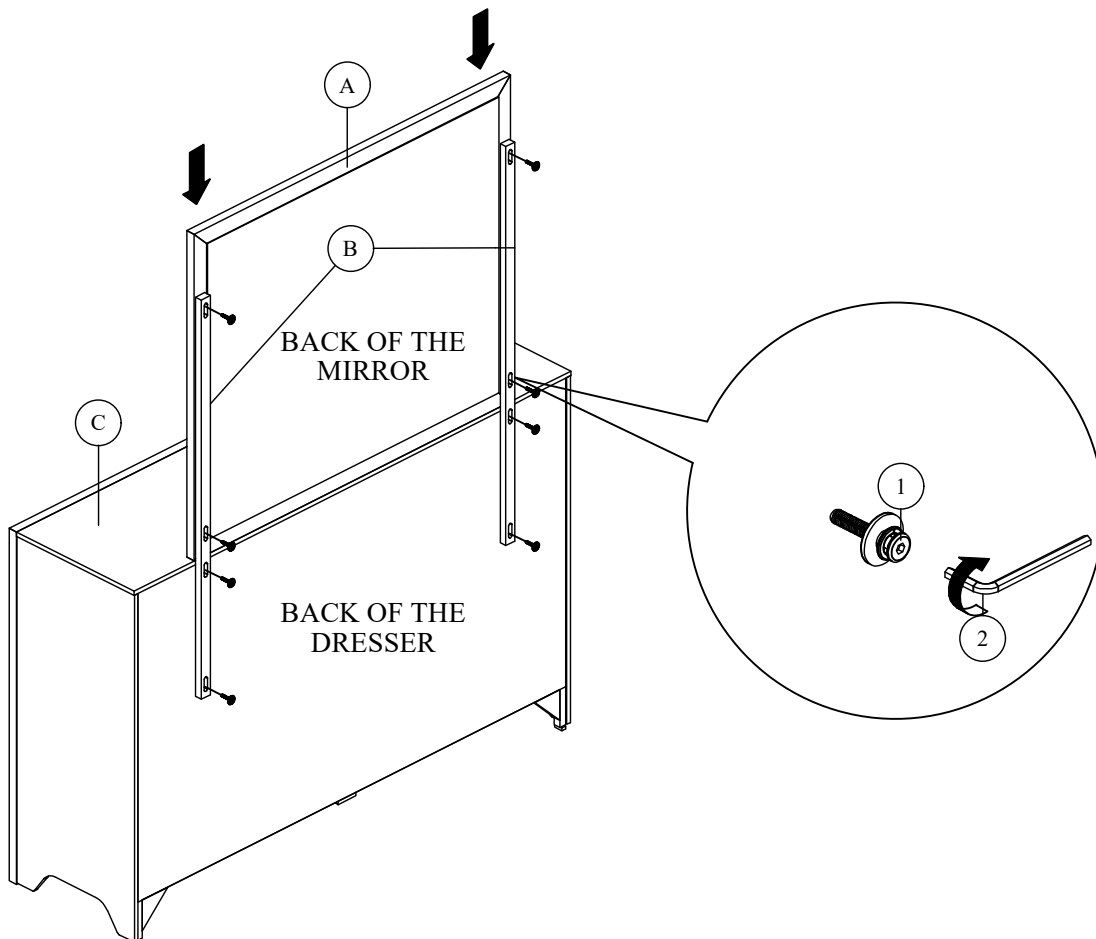

THE ANTI TIPPING HARDWARE IS LOCATED IN THE RIGHT SIDE FRONT DRAWER OF DRESSER

NOTE : MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREWS MAY LOOSE.
CHECK TIGHTNESS OF ALL SCREWS VERY 6-8 WEEKS.

CLEANING INSTRUCTION

After assembled, clean & polish the completed parts if necessary with soft cloth and industrial recognized furniture polish

MADE IN MALAYSIA

DRESSER & MIRROR