
## **ASSEMBLY INSTRUCTIONS**B6800 / B6810-1 & B6800 / B6810-11 CARTER DRESSER & MIRROR

## **CRWN**

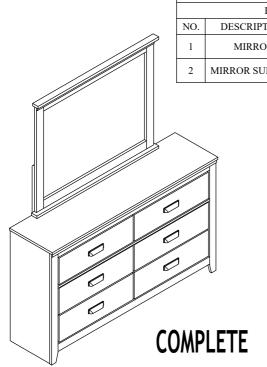


| (BOX 1) - BOX OF MIRROR |                |        |     |               |                     |        |     |  |  |  |
|-------------------------|----------------|--------|-----|---------------|---------------------|--------|-----|--|--|--|
| PARTS LIST              |                |        |     | HARDWARE LIST |                     |        |     |  |  |  |
| NO.                     | DESCRIPTION    | SKETCH | QTY | NO.           | DESCRIPTION         | SKETCH | QTY |  |  |  |
| 1                       | MIRROR         |        | 1   | A             | PANHEAD (M4 x 32mm) |        | 8   |  |  |  |
| 2                       | MIRROR SUPPORT |        | 2   | В             | SCREW DRIVER (*)    | J      | 1   |  |  |  |

\*The manufacturer does not provide item B.

| (BOX 2) - BOX OF DRESSER |             |        |     |  |  |  |  |  |
|--------------------------|-------------|--------|-----|--|--|--|--|--|
|                          | PARTS LIST  |        |     |  |  |  |  |  |
| NO.                      | DESCRIPTION | SKETCH | QTY |  |  |  |  |  |
| 1                        | DRESSER     |        | 1   |  |  |  |  |  |

## **IMPORTANT NOTE:**

- \* Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- \* Check to be sure that you have all parts and hardware.
- \* Remove all wrapping materials, including staples & packing straps before you start to assemble.
- \* Do not tighten all screws/bolts until all completely assembled.
- \* Keep all hardware parts out of reach of children.

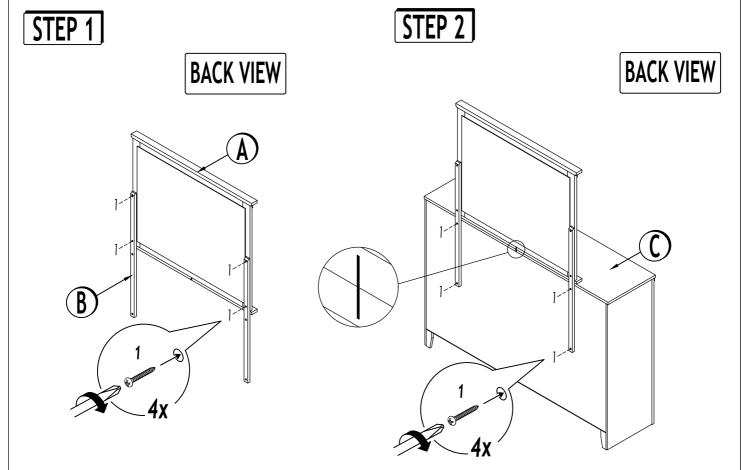

THE ANTI TIPPING HARDWARE IS LOCATED AT THE TOP RIGHT SIDE FRONT DRAWER OF DRESSER  $\overline{\phantom{a}}$