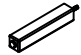# ASSEMBLY INSTRUCTIONS
CROWN MARK (CRWN)
MODEL:B9100-Q-HBFB , B9100-KQ-RAIL (Queen Bed)

Thank you for purchasing this quality product.Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment.Identify and count all parts and compare with hardware list as below:
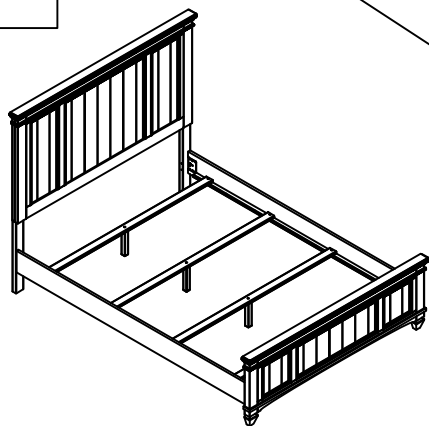
PART LIST

(BOX 1) BOX OF HEADBOARD

ITEM	DRAWING	DESCRIPTION	QTY
A		HEAD BOARD	1

(BOX 2) BOX OF FOOTBOARD

ITEM	DRAWING	DESCRIPTION	QTY
B		FOOT BOARD	1
C		WOODEN SLAT	4
D		SLATS SUPPORT	4

(BOX 3) BOX OF SIDE RAILS

ITEM	DRAWING	DESCRIPTION	QTY
E		SIDE RAILS	2

(BOX 2) BOX OF FOOTBOARD HARDWARE LIST

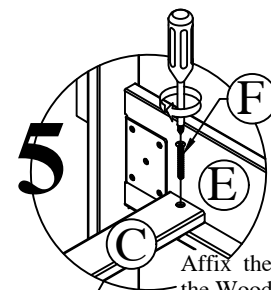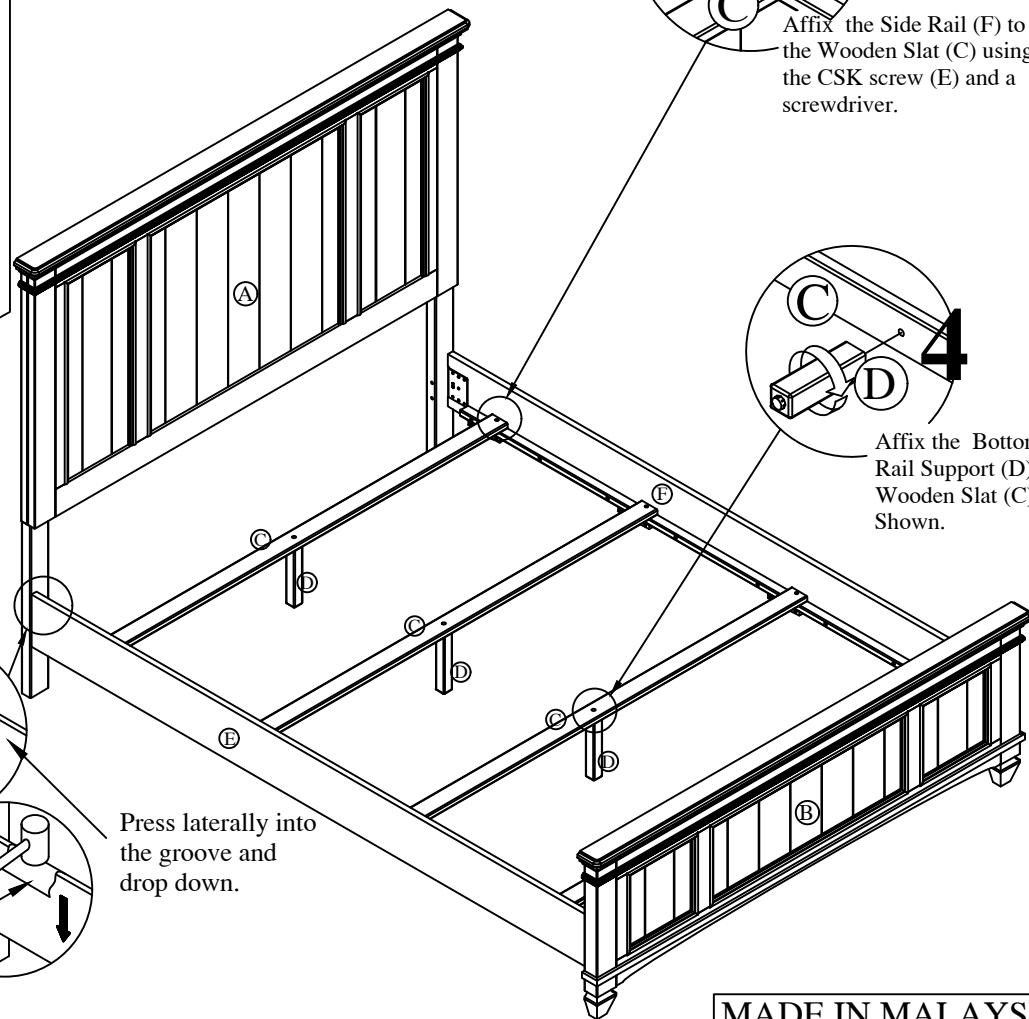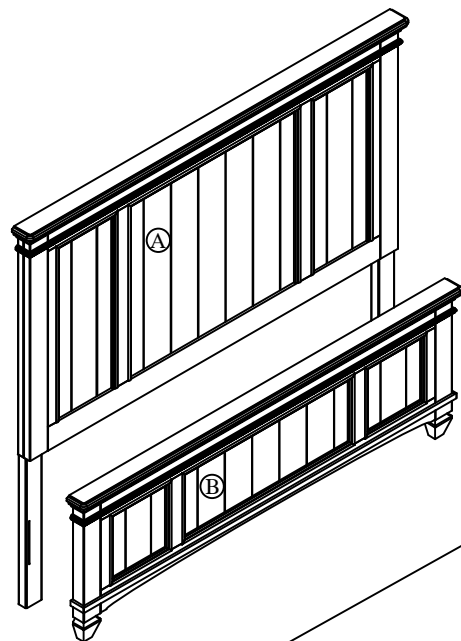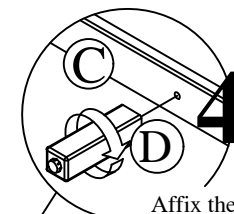| ITEM	DRAWING	DESCRIPTION	DIMENSION	QTY
F		C.S.K SCREW (M4)	4 x 32mm	8

Screw Driver is not included

COMPLETED ASSEMBLY

NOTE:MUST TIGHTEN SCREW PERIODICALLY.WITH USE SCREWS WILL BECOME LOOSE CHECK THIGHT OF ALL SREWS EVERY 6-8 WEEKS.

CLEANING INSTRUCTION

After assembled,clean & polish the complete parts if necessary with soft clotch ang industrial recognized furniture polish.
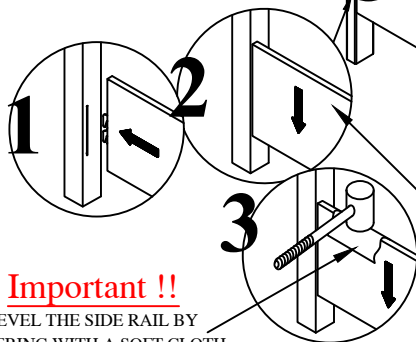
STEP 1

STEP 2

5 Affix the Side Rail (F) to the Wooden Slat (C) using the CSK screw (E) and a screwdriver.

4 Affix the Bottom Rail Support (D) to Wooden Slat (C) as Shown.

1 **2** **3**

Press laterally into the groove and drop down.

Important !!
LEVEL THE SIDE RAIL BY COVERING WITH A SOFT CLOTH AND TAPPING WITH A HAMMER.

MADE IN MALAYSIA

THE HARDWARE IS LOCATED IN THE PACKING ITEMS