ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.


3. Keep all hardware parts out of reach of children.


NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver (not provider).

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	HEADBOARD	1 PC	
В	FOOTBOARD	1 PC	
С	SIDE RAIL (L)	1 PC	
D	SIDE RAIL (R)	1 PC	
E	CENTER RAIL	1 PC	
F	CENTER SUPPORT	2 PCS	
G	CENTER SUPPORT LEG	3 PCS	
Н	BED SLAT	26 PCS	
I	BED LEG	4 PCS	


	HARDWARE LIST						
	ITEM	DESCRIPTION		QTY			
	1	JCBB BOLT M8 x 30mm	@	4 PCS			
	2	JCBB BOLT M8 x 40mm	@	6 PCS			
	3	JCBB BOLT M8 x 50mm	@	4 PCS			
	4	M8 FLAT WASHER	0	6 PCS			
	5	M8 SPRING WASHER	0	6 PCS			
	6	WOOD SCREW M3.5 x 16mm	Anne (8 PCS			
	7	PVC BLACK WASHER		4 PCS			
	8	BED SLAT SIDE FITTER		26 PCS			
J	9	BED SLAT CENTER FITTER	\Diamond	13 PCS			
	10	M5 ALLEN KEY (BALL SHAPE)		1 PC			

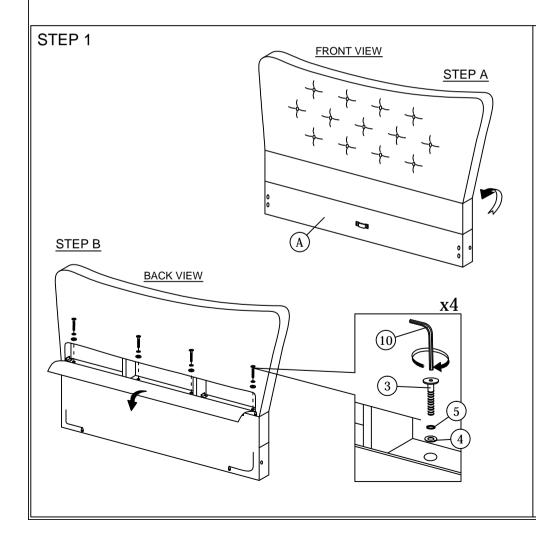

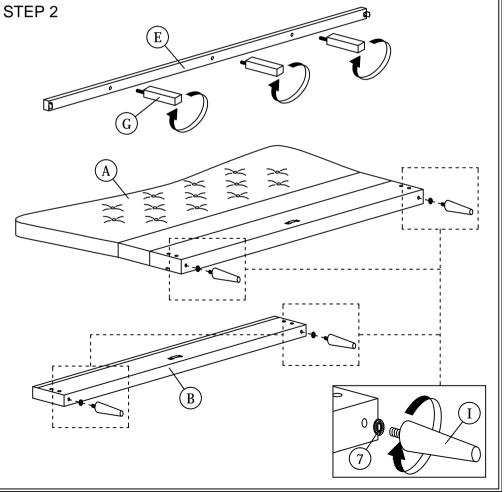





Loosely fit bolt (2) into Headboard (A) as picture shown.

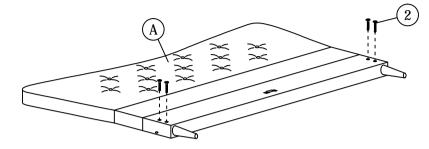


Loosely fit bolt (1) into Footboard (B) as picture shown.




STEP 5

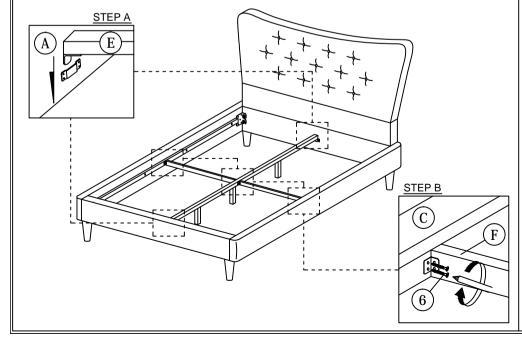

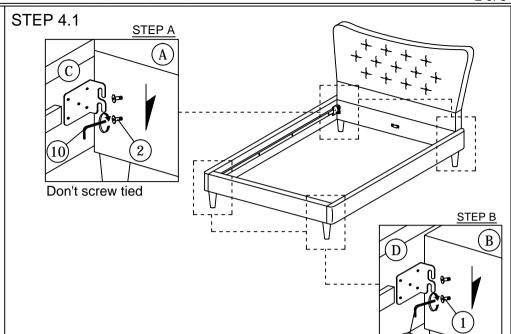



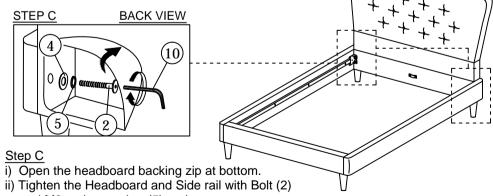

Don't screw tied

and M8 spring washer (5) and M8 flat washer (4) from side as picture shown.

**Finish step C,

Please screw tied the step A & B bolt.

