





Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
 3. Keep all hardware parts out of reach of children.

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.
 Tool needed : Screwdriver (not provider).

| PART LIST | | |
|-----------|---------------------|-------|
| ITEM | DESCRIPTION | QTY |
| A | SLAT | 1 PC |
| B | SLAT WITH TRUNDLE | 2 PCS |
| C | SLAT | 4 PCS |
| D | DRAWER PANEL | 1 PC |
| E | DRAWER SUPPORT WOOD | 3 PCS |
| F | PANEL SUPPORT | 2 PCS |

| HARDWARE LIST | | |
|---------------|---------------------------|--------|
| ITEM | DESCRIPTION | QTY |
| 1 | JCBC BOLT M6 x 35mm | 13 PCS |
| 2 | JCBC BOLT M6 x 60mm | 4 PCS |
| 3 | M6 SPRING WASHER | 4 PCS |
| 4 | M6 FLAT WASHER | 4 PCS |
| 5 | WOOD SCREW M4 x 38mm | 16 PCS |
| 6 | M4 ALLEN KEY (BALL SHAPE) | 1 PC |

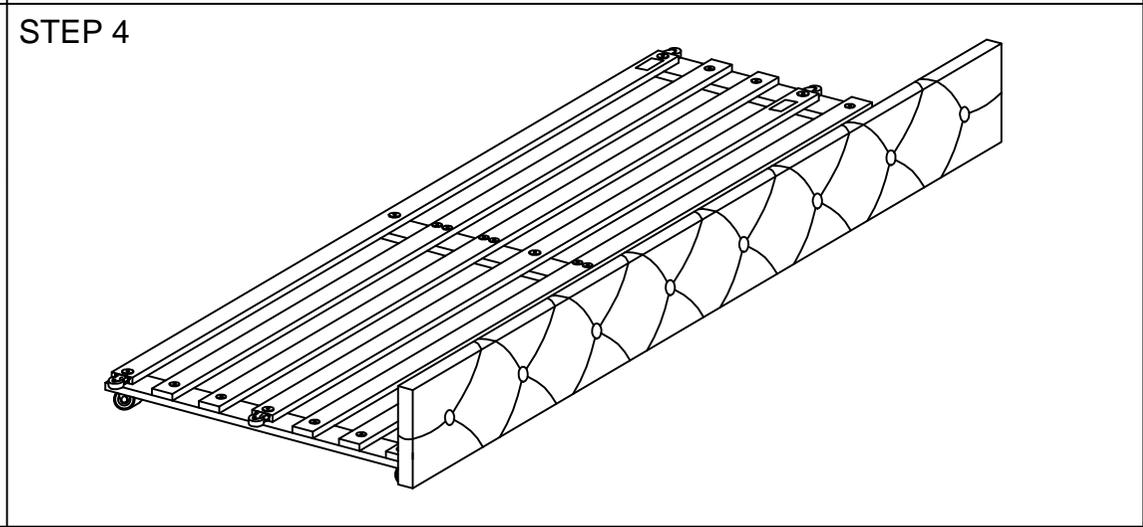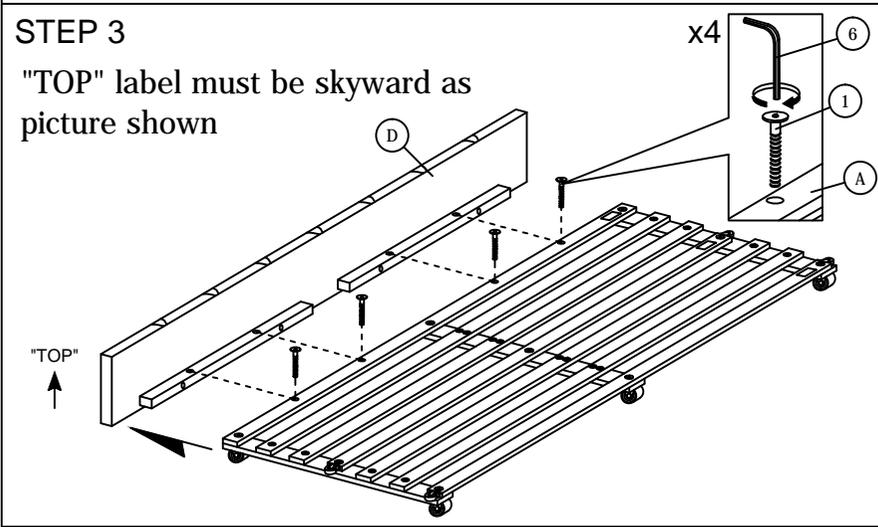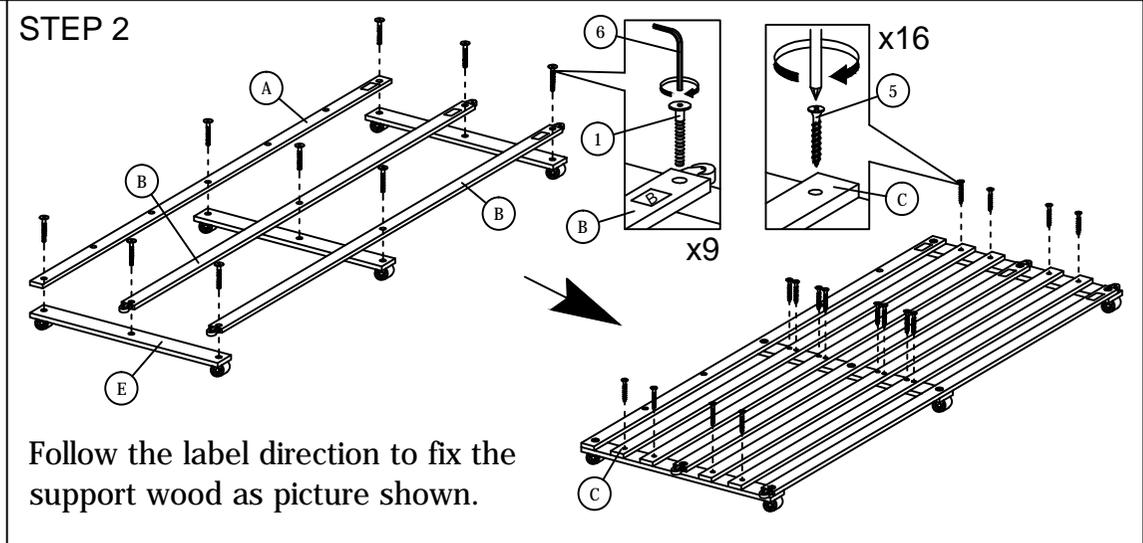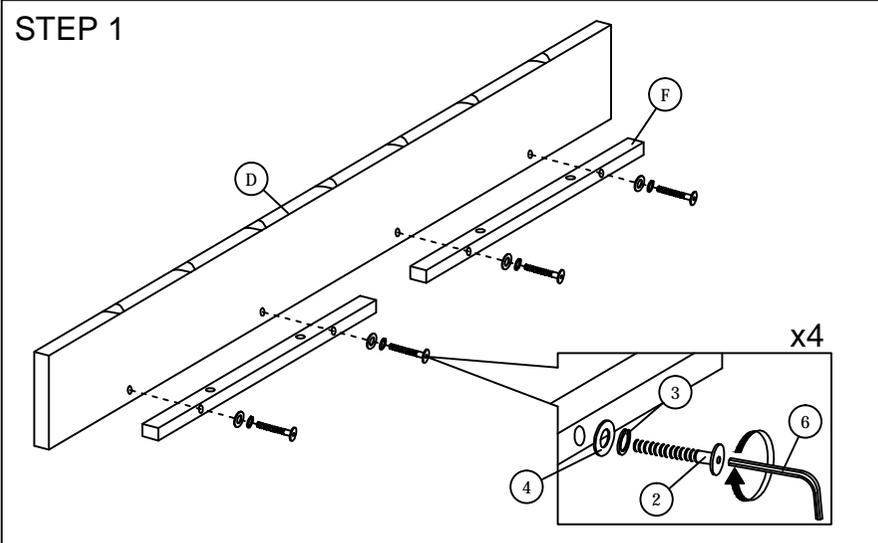

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
 3. Keep all hardware parts out of reach of children.


NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.
 Tool needed : Screwdriver (not provider).

| PART LIST | | |
|-----------|----------------|--------|
| ITEM | DESCRIPTION | QTY |
| A | ARM (LEFT) | 1 PC |
| B | ARM (RIGHT) | 1 PC |
| C | SIDE RAIL | 2 PCS |
| D | DRAWER | 1 PC |
| E | BED SLAT | 12 PCS |
| F | CENTER SUPPORT | 1 PC |


| HARDWARE LIST | | |
|---------------|---------------------------|--------|
| ITEM | DESCRIPTION | QTY |
| 1 | JCBB BOLT M8 x 40mm | 8 PCS |
| 2 | BED SLAT SIDE FITTER | 24 PCS |
| 3 | WOOD SCREW M3.5 x 16mm | 4 PCS |
| 4 | M5 ALLEN KEY (BALL SHAPE) | 1 PC |

STEP 1

Loosely fit bolt (3) into Arm(Left) (A) & Arm(Right) (B) as picture shown.

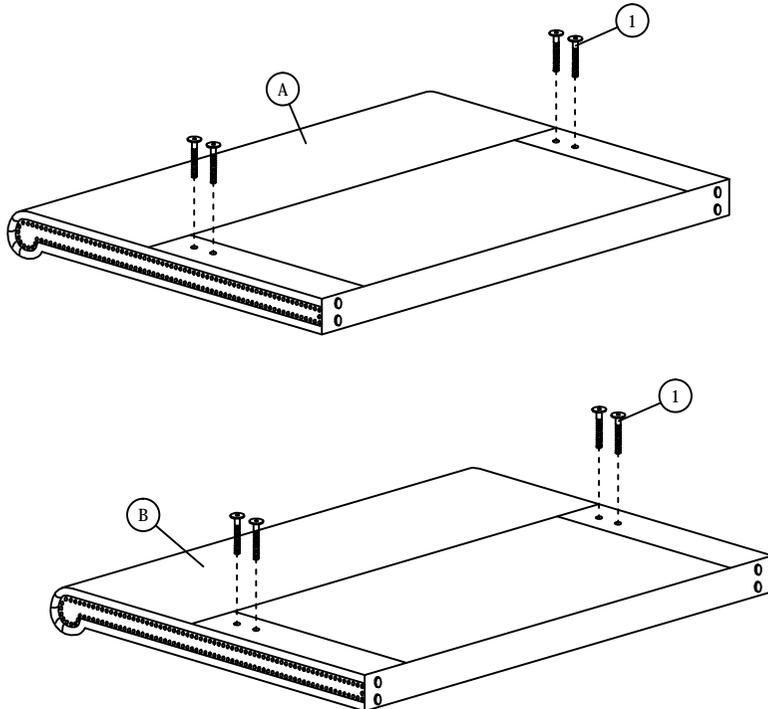


STEP 2

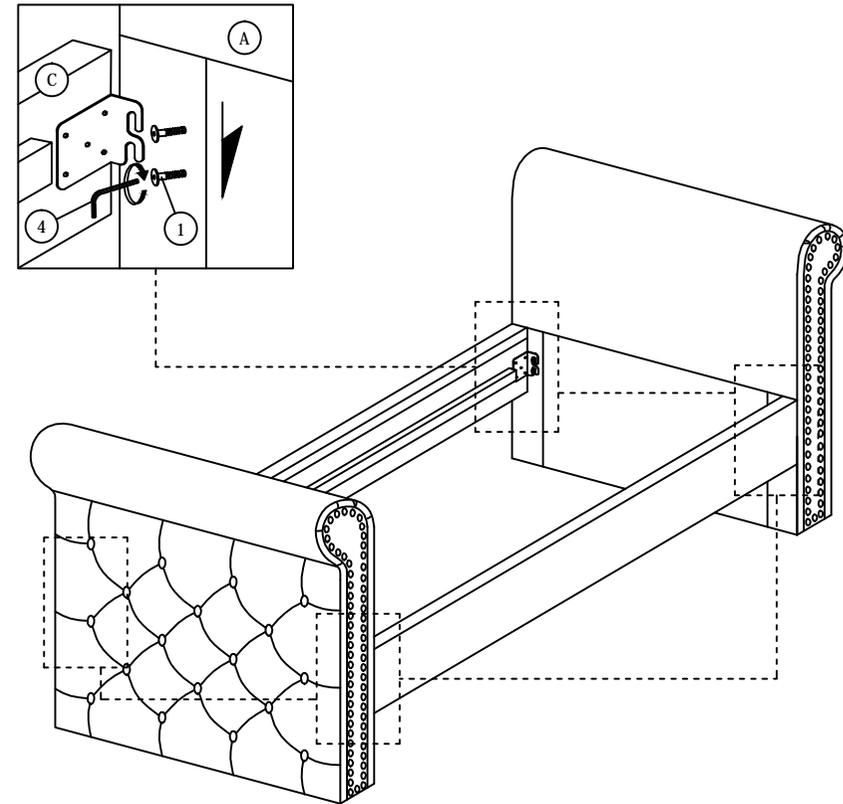


ASSEMBLY INSTRUCTIONS

STEP 3

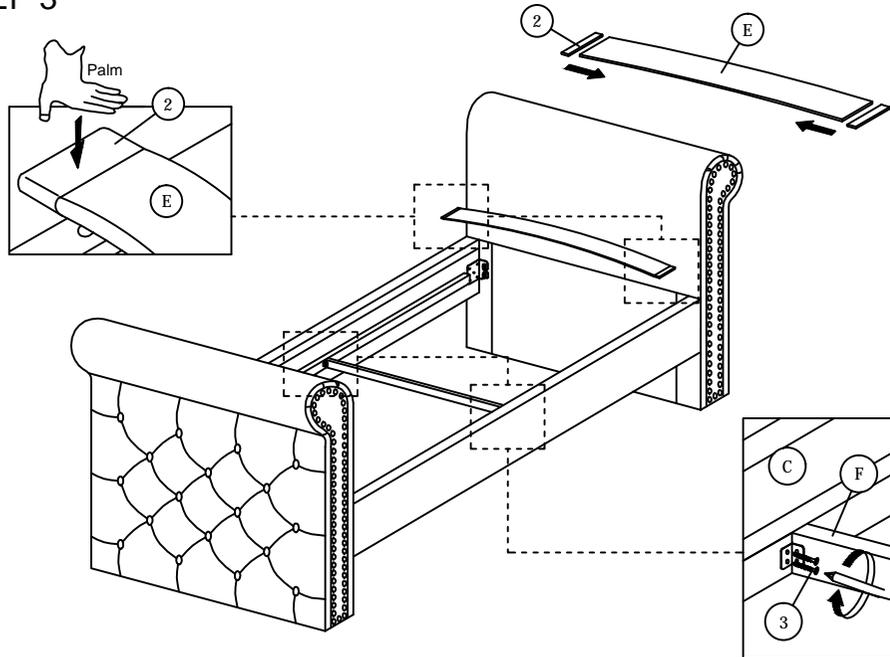

STEP 4

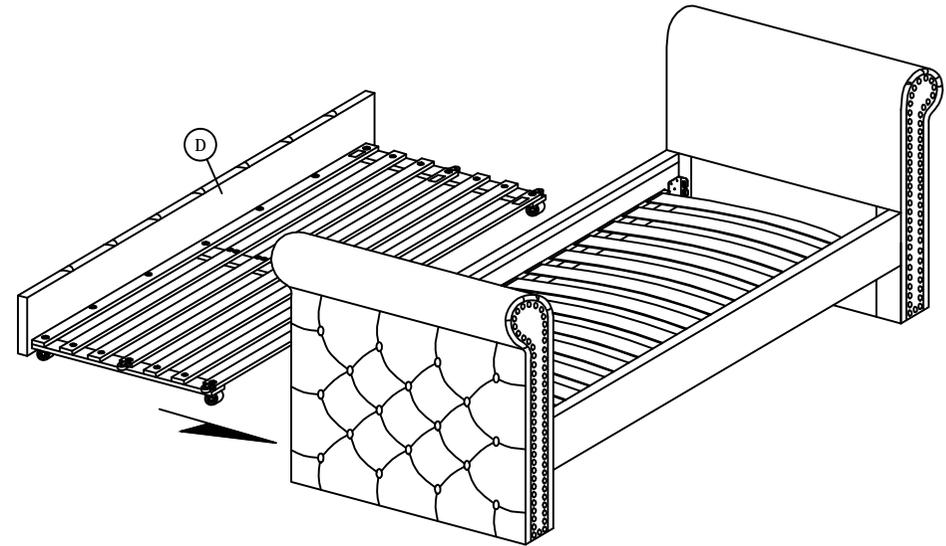

STEP 5

