



# 9737 Full / Queen Headboard

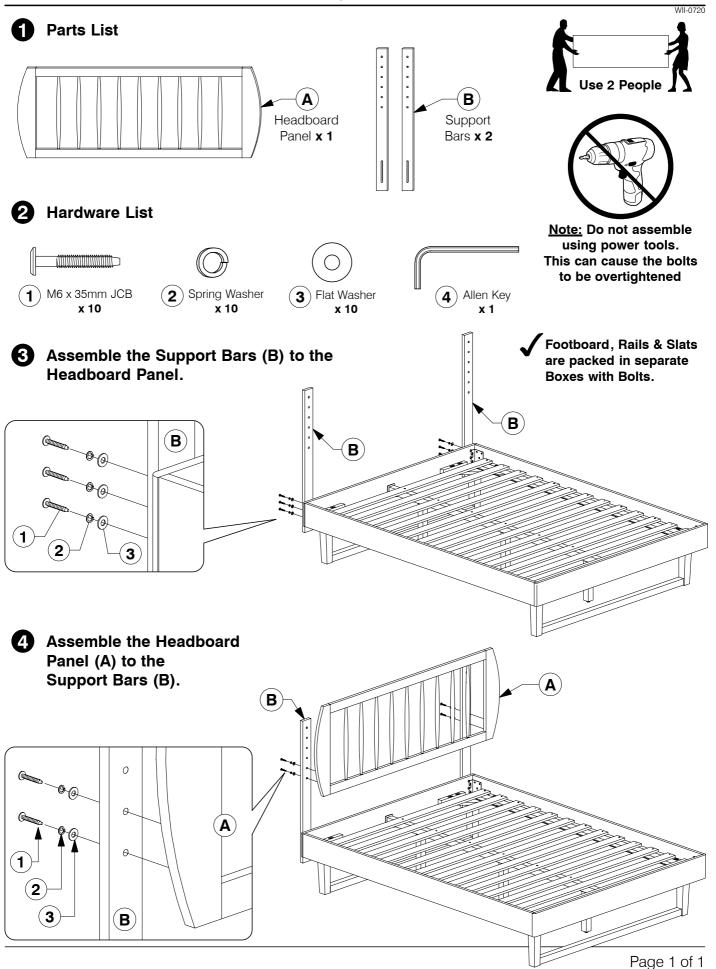


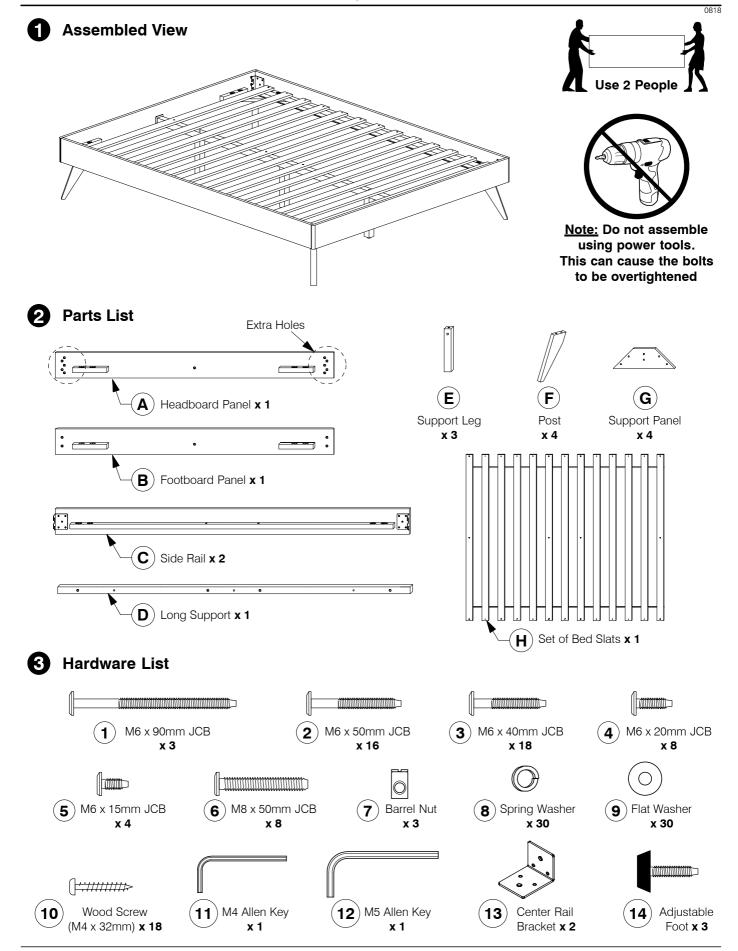


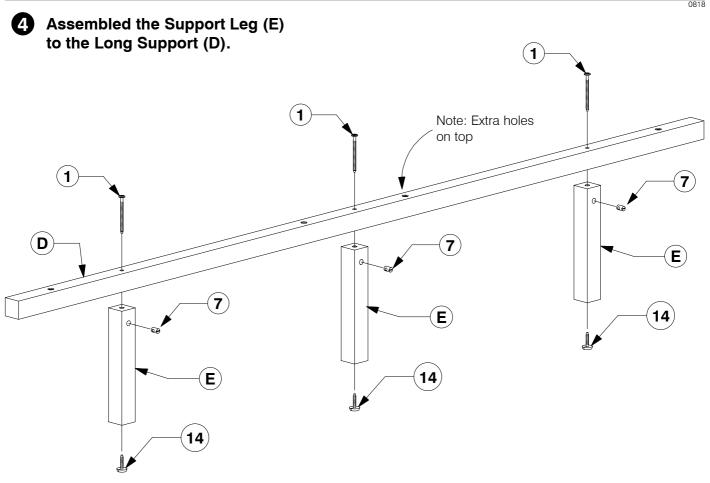

**5** Fit the Post (F) to the Support Panel (G).

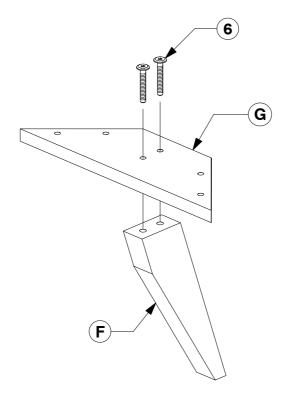

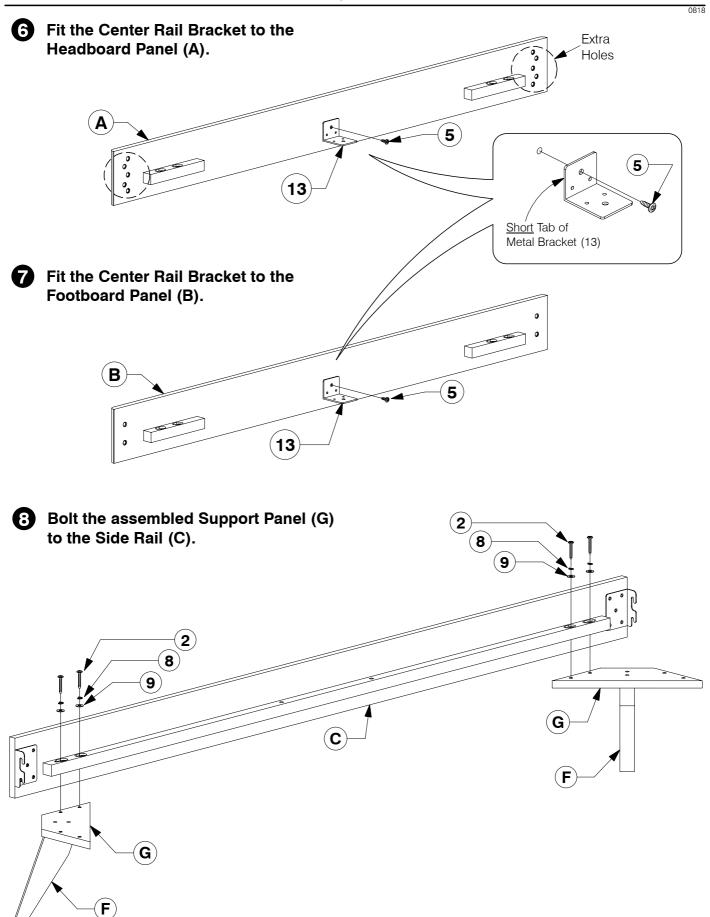

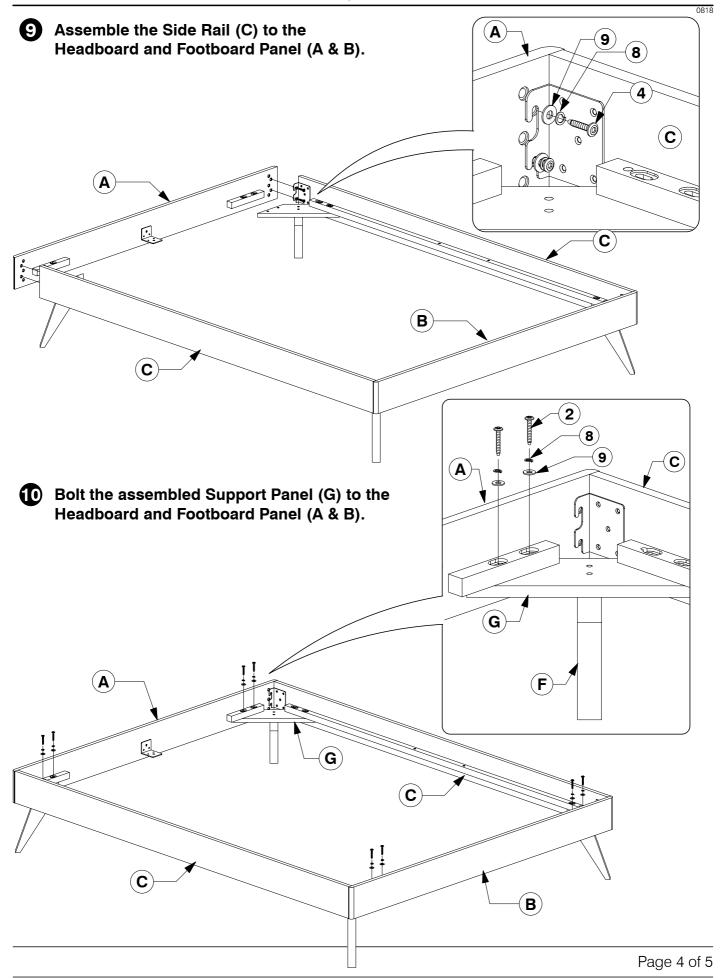

Assembly Instructions

Bolt the Long Support (D) to the Center Rail Brackets (13) on the Headboard and Footboard Panel (A & B).

Bolt & screw the Bed Slats (H) to the Side Rail (C).

