

#### WI5304 / WI9387 / WI11924

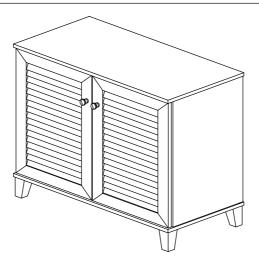

#### **Part List**

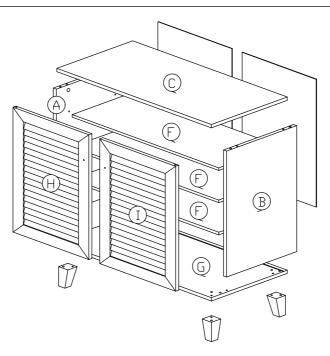


	Hardware List					
No.	SHAPE	DESCRIPTION	Qty.			
1		8x25mm Wood Dowel	12Pcs			
2		15MM Titus Mini Fix	4Sets			
3	<b>√</b>	M3x16mm Screw	4Pcs			
4	<b>∢</b> ⊕	M4x38mm Screw	4Pcs			
5		M7x40mm Screw	4Pcs			
6		Shelf Support	14Pcs			
7		M6x22 Steel Bracket	4Pcs			
8	Ob Control	Brown Magnet 2 Pin Flat Head Tapping Screw M6x10mm ZB	2Sets			
9		Handle (9988) M4x25mm (Handle Screw)	2Sets			

10	Wooden Leg	4Pcs
11	L Key	1Pc
12	Z Bracket	2Pcs


## Packing Tipping Restraint

13	<b>~~~~</b>	M3.5x15mm Screw	2Pcs
14	OE THE	Wall Plug	2Pcs
15		M4x30mm Screw	2Pcs
16		Safety Strap	2Pcs
17	0	Flat Washer 6x19x2mm	4Pcs


### Step 1

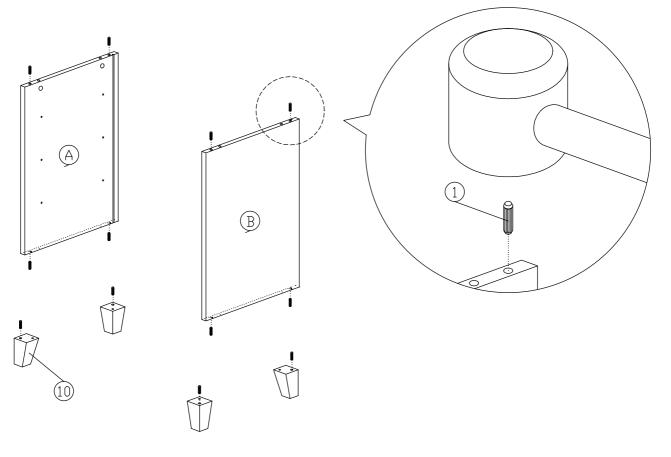


# Step 2

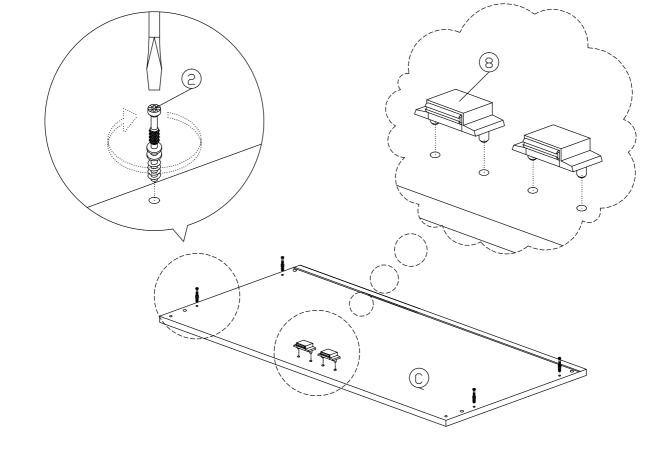



Step 3

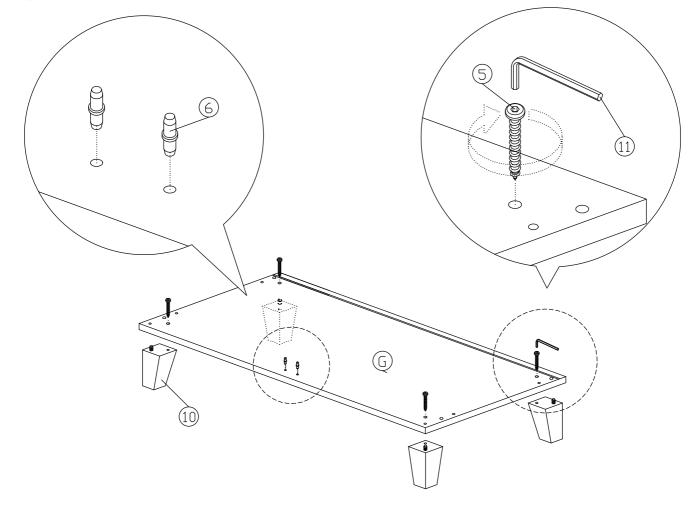

Step 4

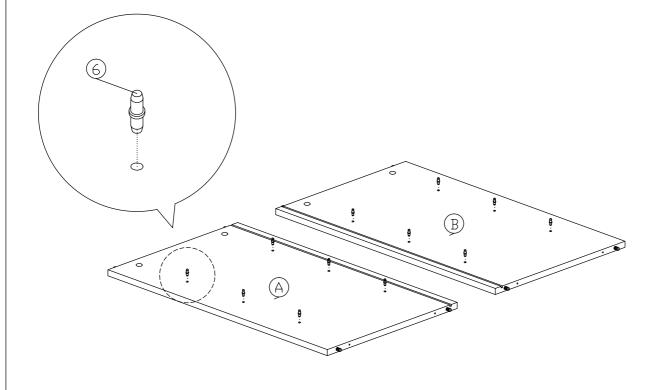


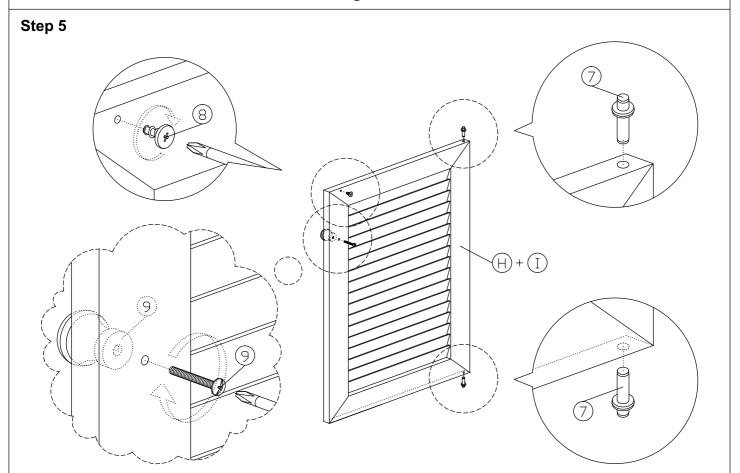

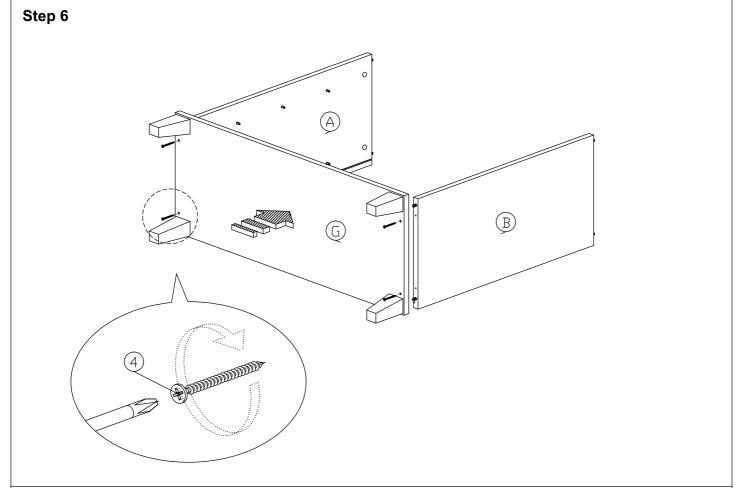


# **Assembly Instruction** Step 7 (C)


#### Step 8

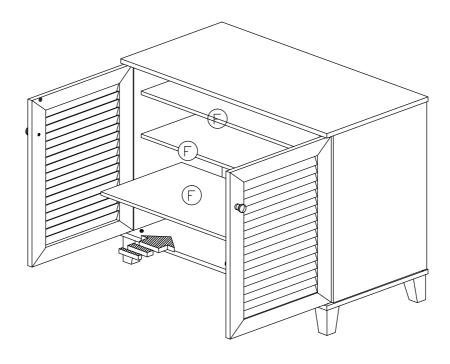


### Step 9

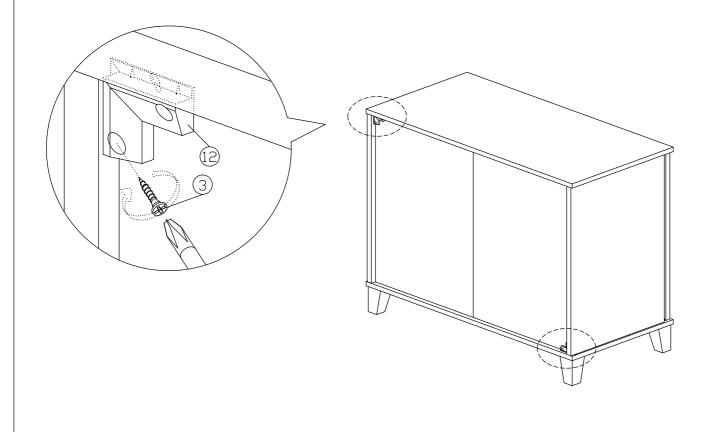


# **FURNITURE TIPPING RESTRAINT** 1.First mark the wall with pencil as in diagram. 4cm 2. Drill small hole at the (1.57") pencil mark.

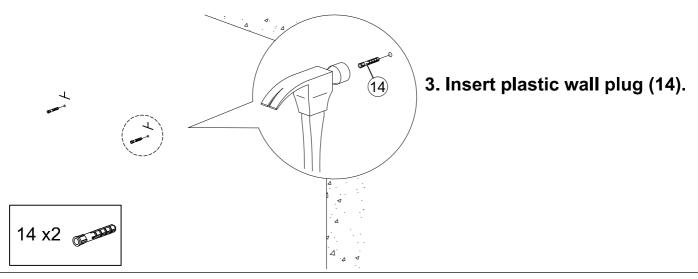

#### **FURNITURE TIPPING RESTRAINT**

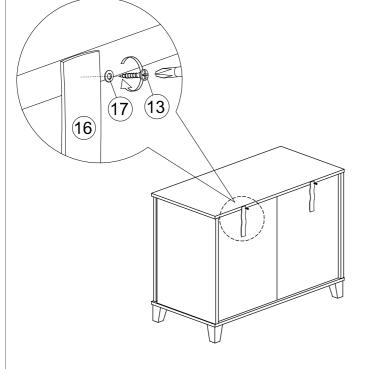


4. Add safety strap (16), washer (17) using 3.5x15mm screw (13) to back of cabinet.



16 x2

17 x2



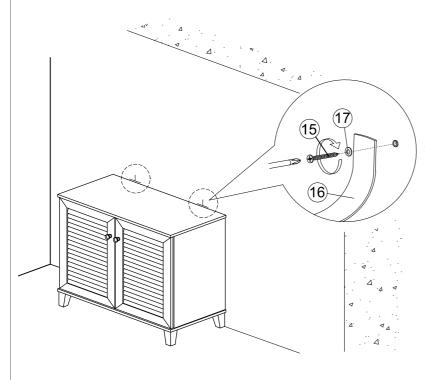


5. Finally, attach safety strap (16) and washer (17) using 4x30mm screw (15) to the wall.

15 x2 ⊲‱‱⊕ м4x30mm

17 x2



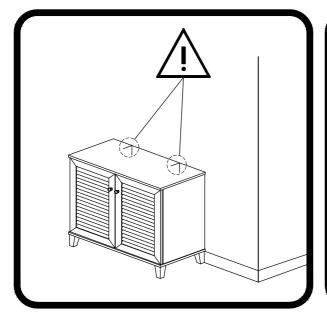







Anti-Topple hardware included for added safety and stability