


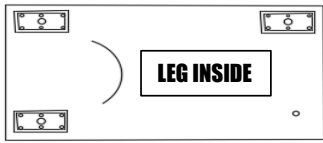



# Assembly Instruction

Assembly Parts :

			SOFA	CHAISE	OTTOMAN
A:		PLASTIC LEG	4 PCS	5 PCS	4 PCS
B:		BOLTS	4 PCS	5 PCS	4 PCS
C:		ALLEN KEY		1 PC	





SOFA

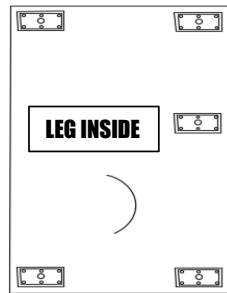


CHAISE

**STEP 1 :**





PLACE (A) THE PLASTIC LEG ON THE BOTTOM OF THE SOFA. MAKE SURE THE HOLE AT THE PLASTIC LEG TALLY WITH THE HOLE ON THE BOTTOM OF THE SOFA. FOR ONE LEG ONLY NEED ONE ( B ) BOLTS. TIGHTEN IT BY USING (C) ALLEN KEY. REPEAT THE SAME METHODE UNTILL ALL THE LEGS BEEN ASSEMBLED.

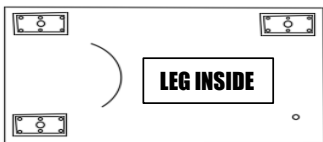

OTTOMAN

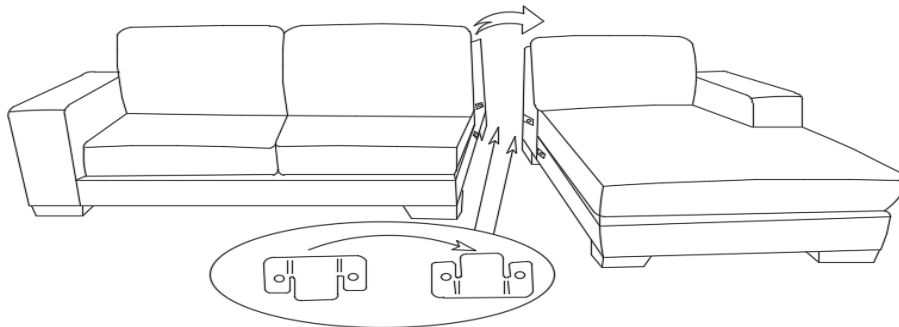

**STEP 2 :** WHEN ALL THE LEGS HAVE BEEN ASSEMBLED, CONNECT THE SOFA AND CHAISE WITH HOOKS THE 2 SETS OF IRON CORNER BRACKETS TOGETHER. PLEASE REFER AS ABOVE DIAGRAM.

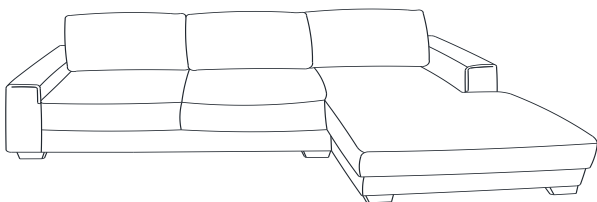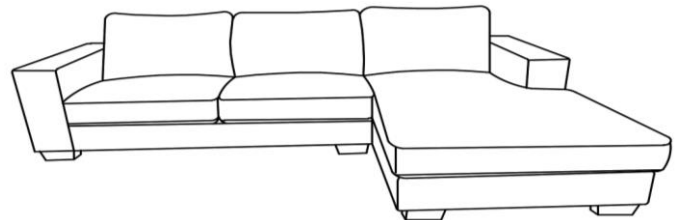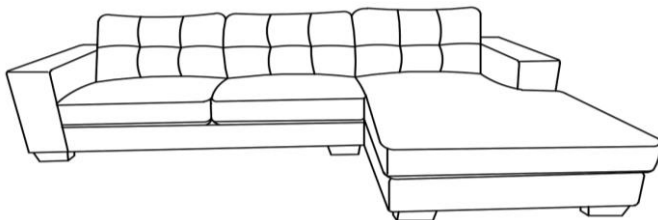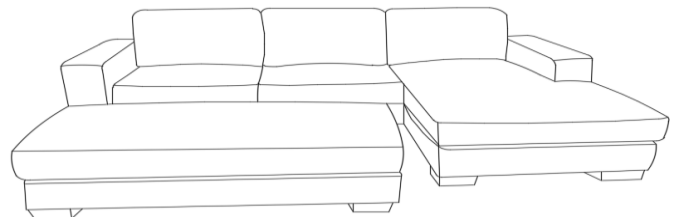

**The job is now complete!**

Please dispose of packaging thoughtfully

**FOR LEATHER and PU**

**Cleaning ( Code "X" )**

Clean by lightly brushing and vacuuming only to remove dust and particles buildup.

**For Fabric**

**Cleaning ( Code "WW" )**

Use water-based agents only. Do not use solvents. Gently remove stains by blotting or hangwashing. Do not use excessive brushing or rubbing.