

Assembly Instructions




Assembly Instructions

WI-0622

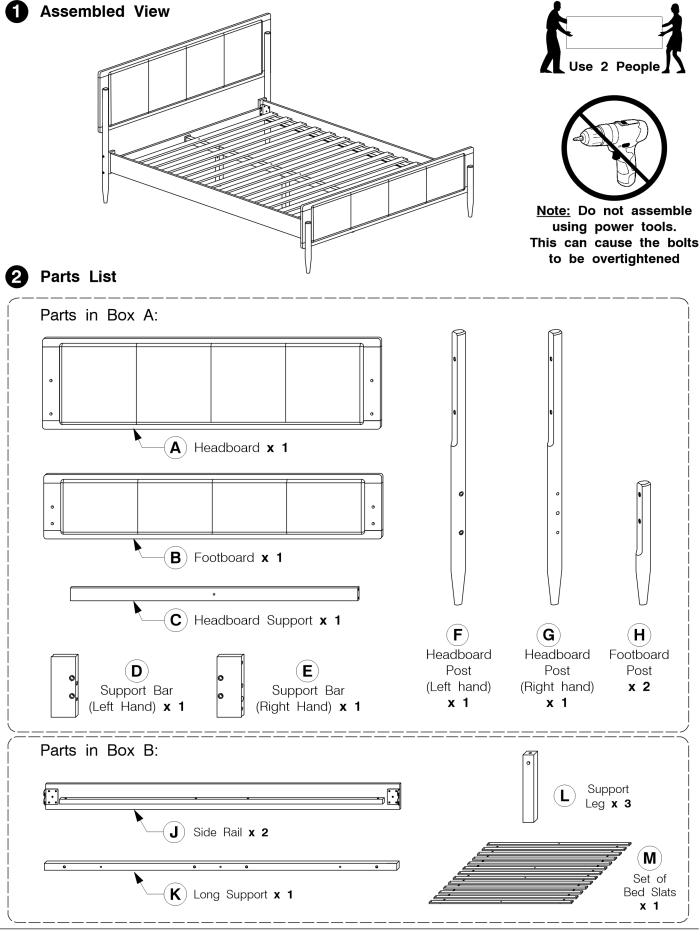

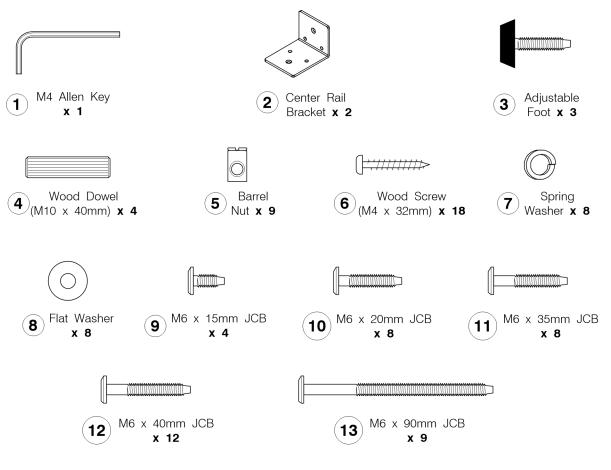


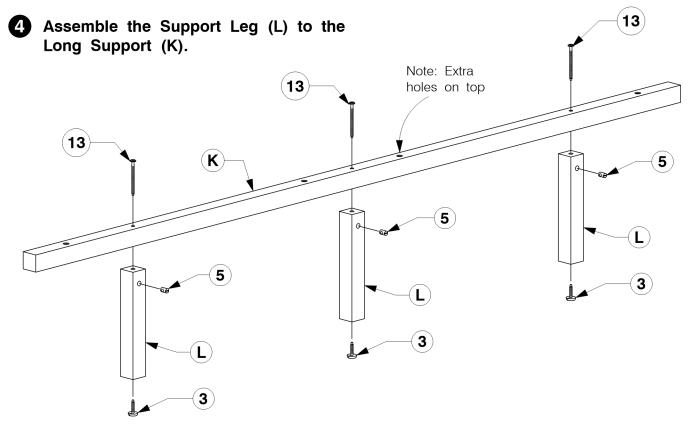


Assembly Instructions

WI-0622 5 Fit the Footboard Post (H) to the Footboard (B). (H)**B** (H)11 11 9 Back Short Tab of Metal Bracket (2) 6 Fit the Headboard Support (C) to the Support Bar (D & E). **(E)** (C) D Front (13)

Assembly Instructions

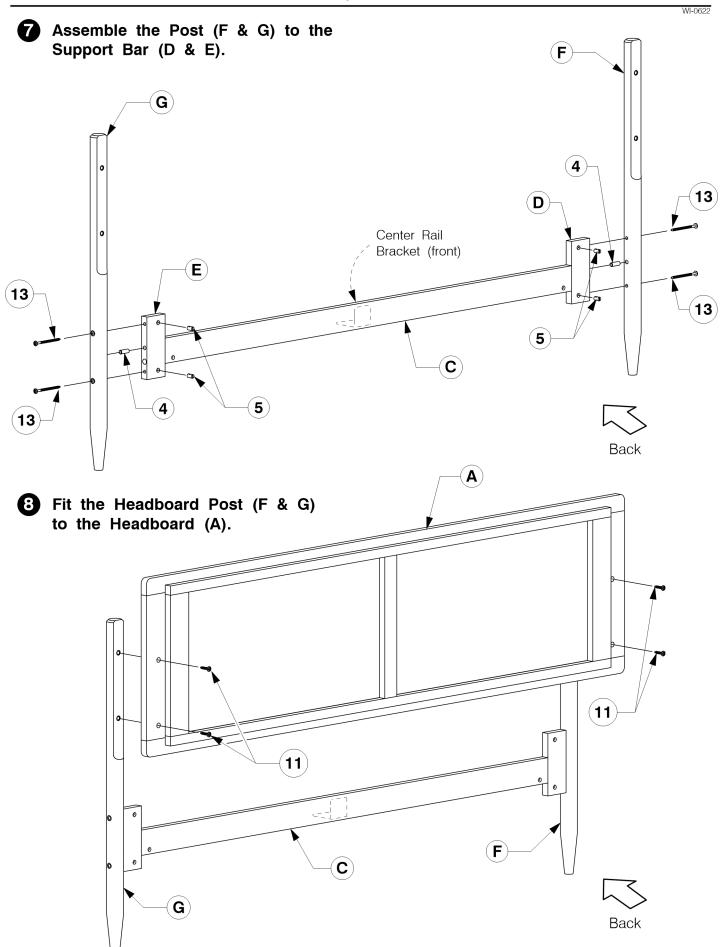


Assembly Instructions

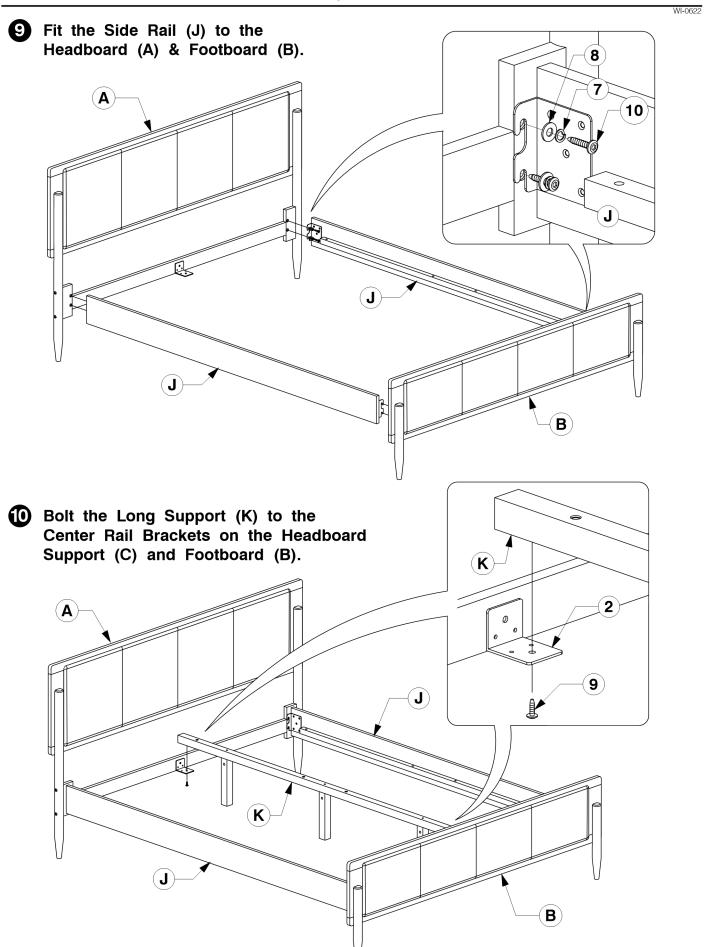


Page 5 of 6

Assembly Instructions

Bolt the Bed Slats (M) to the Side Rail (J).

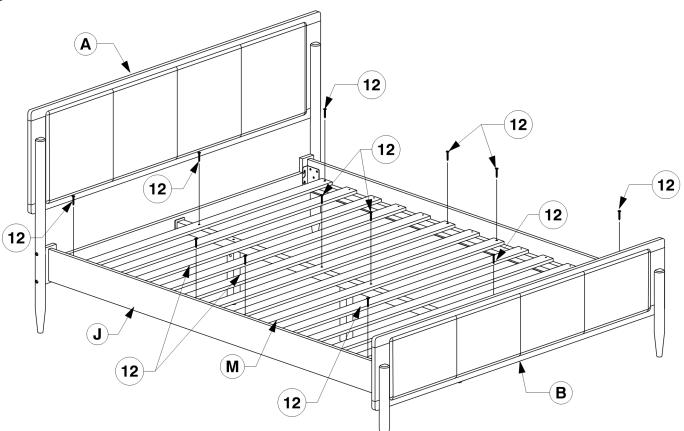

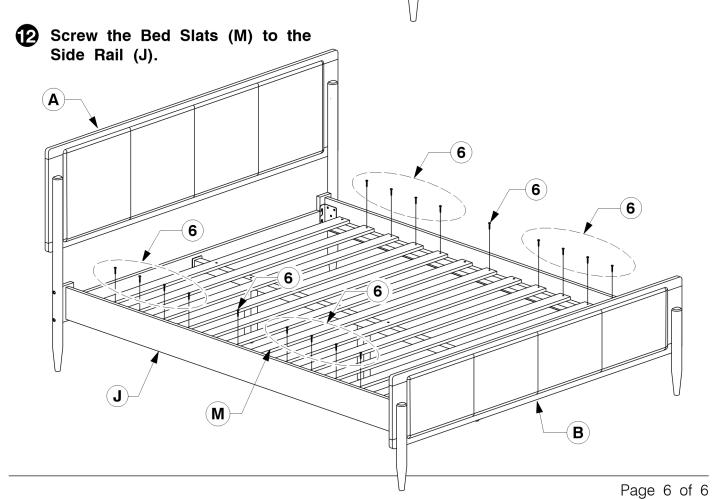

WI-062