


9746 Full / Queen Headboard


Assembly Instructions

W11-0720


1 Parts List

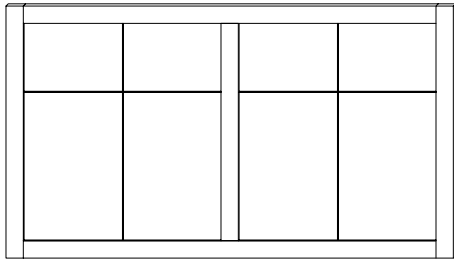

A
Headboard Panel x 1



B
Support Bars x 2

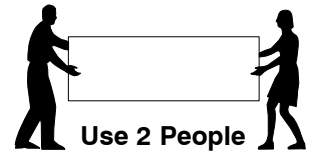

2 Hardware List



1 M6 x 35mm JCB
x 10



2 Spring Washer
x 10



3 Flat Washer
x 10





4 Allen Key
x 1

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

3 Assemble the Support Bars (B) to the Headboard Panel (A).

✓ Footboard, Rails & Slats are packed in separate Boxes with Bolts.

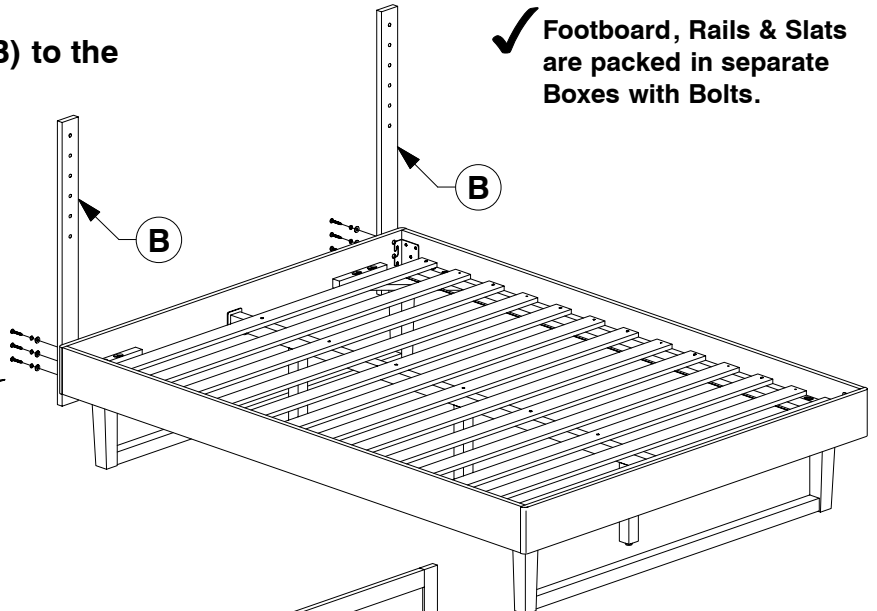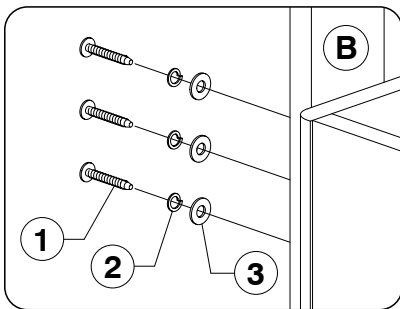

4 Assemble the Headboard Panel (A) to the Support Bars (B).

