
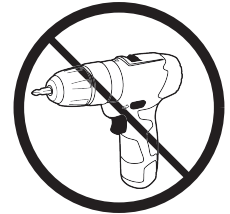
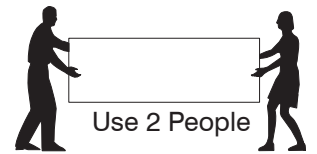
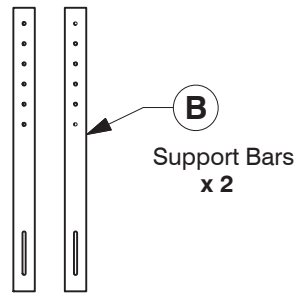


9776-1 Full / Queen Headboard




Assembly Instructions

WI-0622

1 Parts List


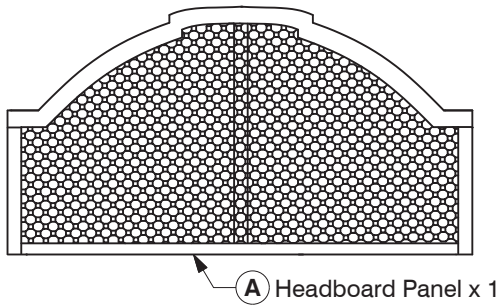


2 Hardware List

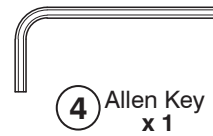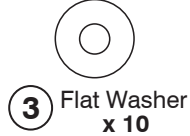
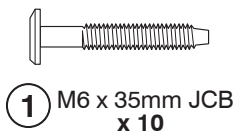


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

3 Assemble the Support Bars (B) to the Headboard Panel (A).

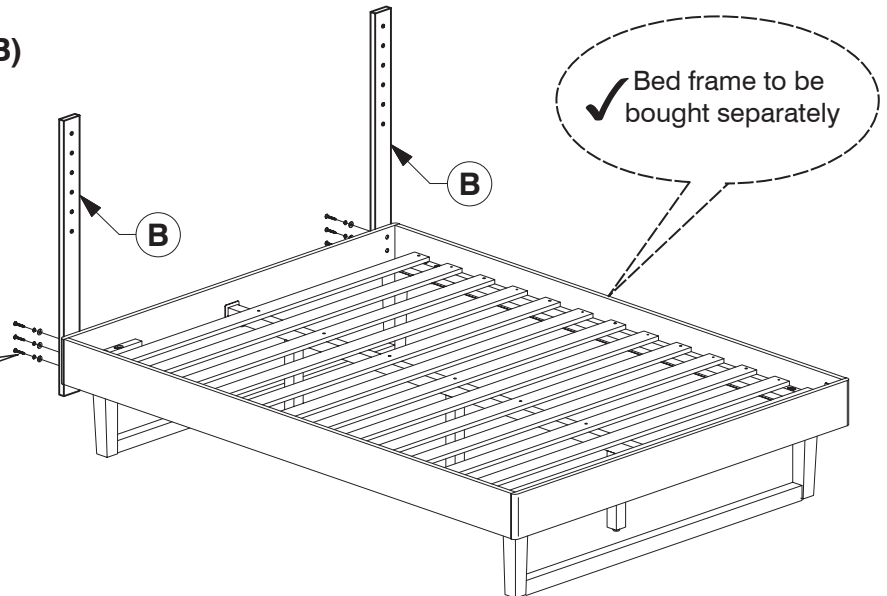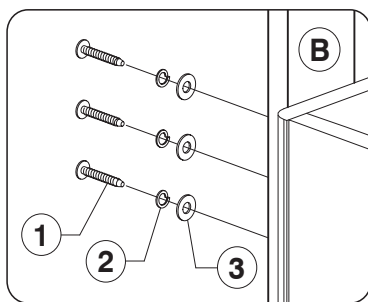

4 Assemble the Headboard Panel (A) to the Support Bars (B).


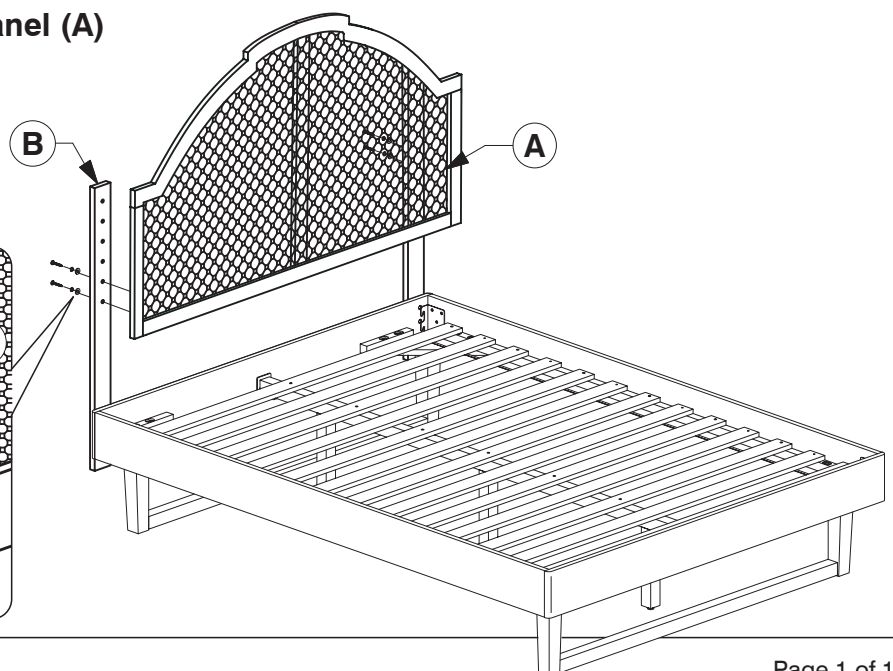
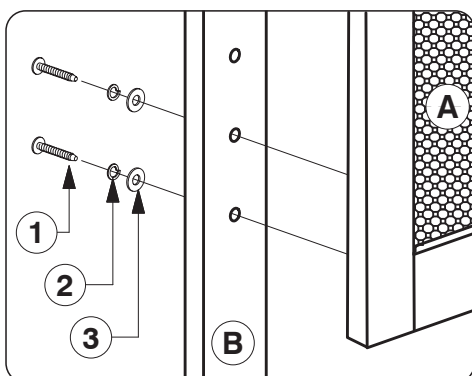


9776-1 King Headboard

Assembly Instructions


WI-0622

1 Parts List

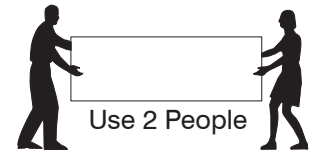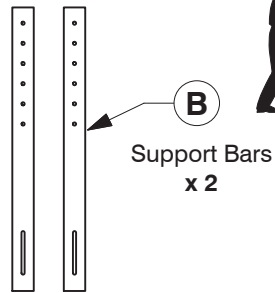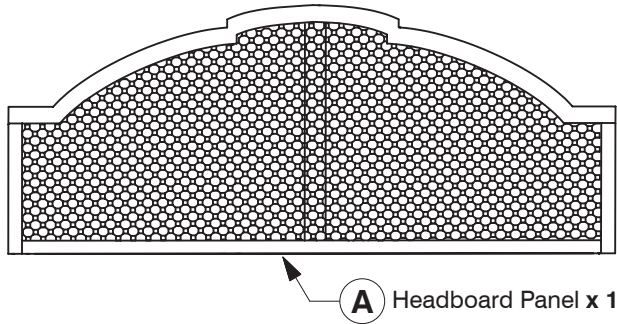

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Hardware List



1 M6 X 35mm JCB x 10



2 Spring Washer x 10





3 Flat Washer x 10



4 Allen Key x 1

3 Assemble the Support Bars (B) to the Headboard Panel.

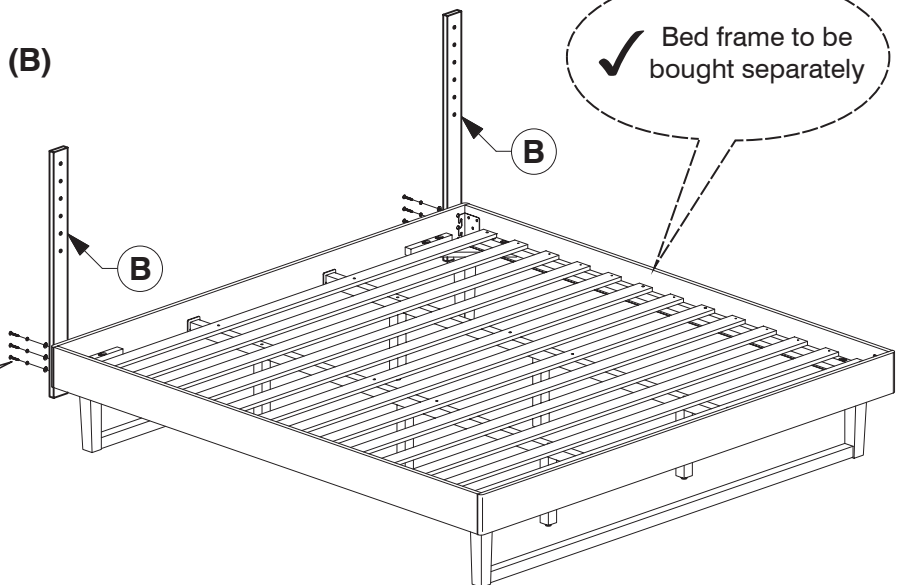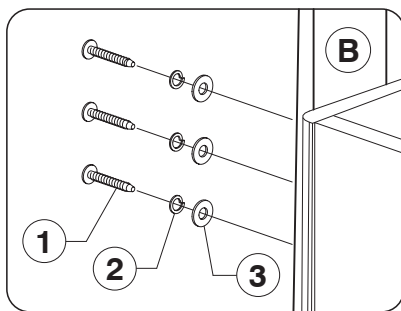

4 Assemble the Headboard Panel (A) to the Support Bars (B).

