


# ASSEMBLY INSTRUCTIONS


## MODEL : RDS 990 - 3S (ZZ)

ITEM	PART LIST	QTY	ITEM	HARDWARE LIST	QTY
1	RATAN BACKREST	1 PC	A	JCBC M6 x 100MM	4 PCS
2	CUSHION SEAT	1 PC	B	SPRING WASHER M6	14 PCS
3	ARM (L & R)	2 PCS	C	FLAT WASHER M6 x 13MM	6 PCS
4	BACK LEG	2 PCS	D	JCBC M6 x 60mm	2 PCS
5	CENTER LEG	1 PCS	E	WOOD BUTTON	6 PCS
6	PILLOW	3 PCS	F	PLASTIC WASHER	2 PCS
			G	ALLEN KEY M4	1 PC
			H	CSK SCREW M4 x 38mm	2 PCS
			I	JCBC M6 x 40mm	8 PCS
			J	FLAT WASHER M6 x 19MM	8 PCS

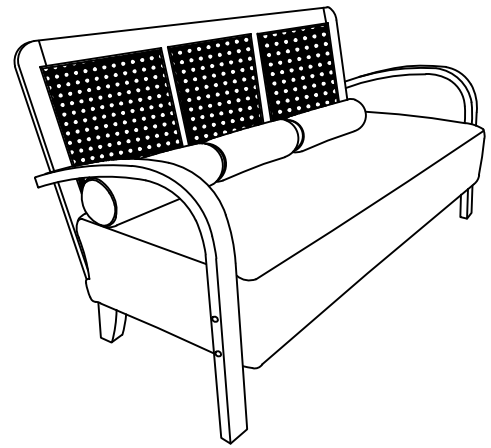


**FULLY ASSEMBLY**

### STEP 1

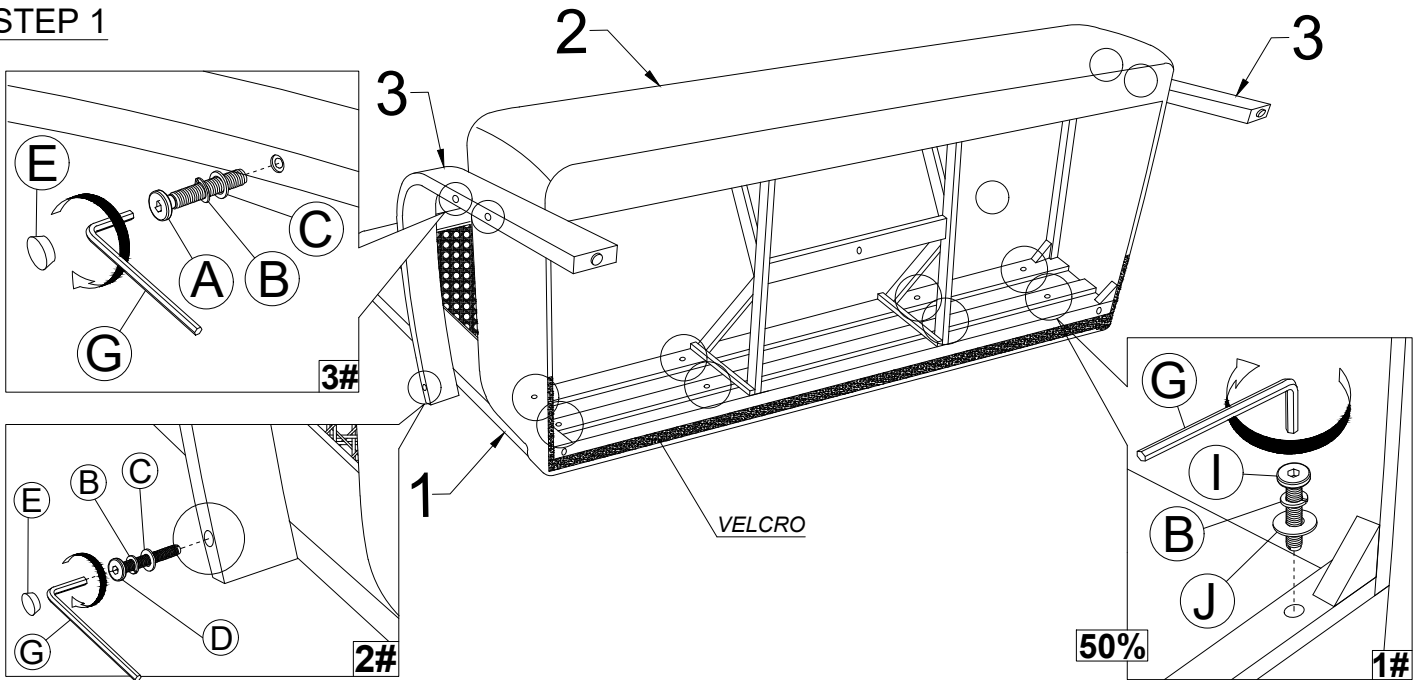

### STEP 2

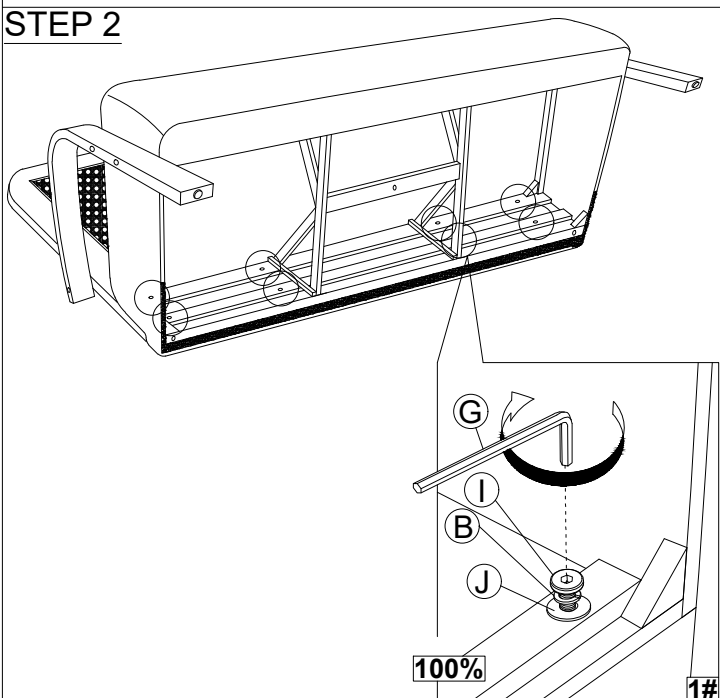

### STEP 3

