


ASSEMBLY INSTRUCTION


DESCRIPTION : 4 DOORS SHOE CABINET

HARDWARE	A	B	C	D	E	F	G	G1	G2	G3	H	H1	H2	I	I1	I2	J	K	K1	K2	L	M	N	O
	WOOD DOWEL 8 X 25	CB SCREW M3.5X16MM	CB SCREW M4X38MM	NAIL 6/8	PVC SHELF SUPPORT	DOOR SUPPORT SPRING	3.5KG MAGNET (1 HOLE)				MAS L4	MAS R4		MAS L2	MAS R2		ROUND PLASTIC LEG (PVC)	MINIFIX 5654+5546			L-KEY	QUICKFIT CAP	HANDLE 5022 (METAL)	HANDLE SCREW M4X22MM
	1X4	1X24	1X8	1X25	1X16	1X2	4 SETS				1X1	1X1		1X1	1X1		1X4	4 SETS			1X1	1X4	1X4	1X4


PART LIST

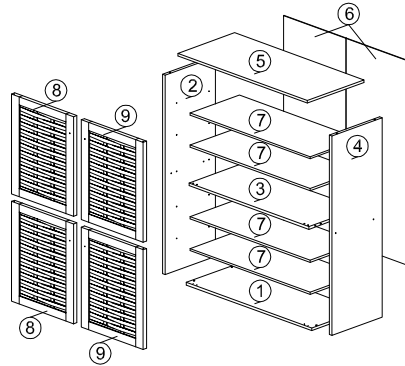


STEP 1

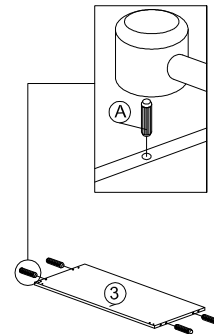


STEP 2

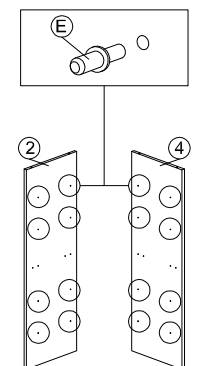


STEP 3

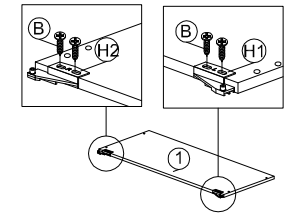


STEP 4

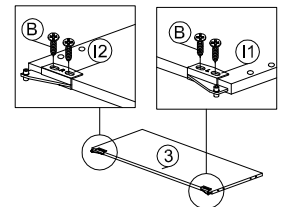


STEP 5

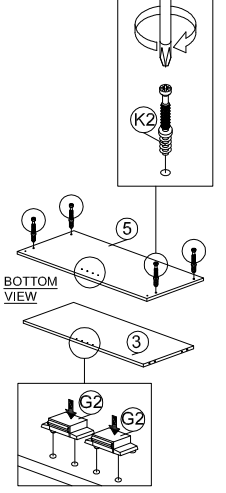


STEP 6

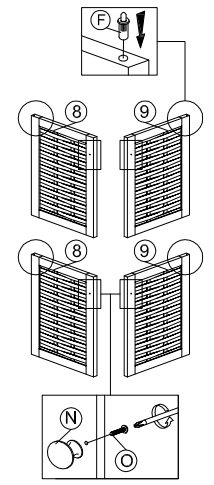


STEP 7

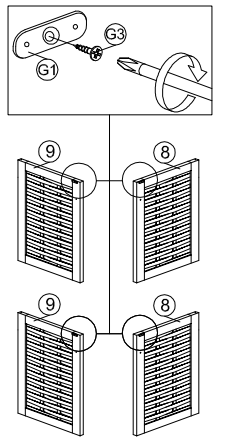


STEP 8

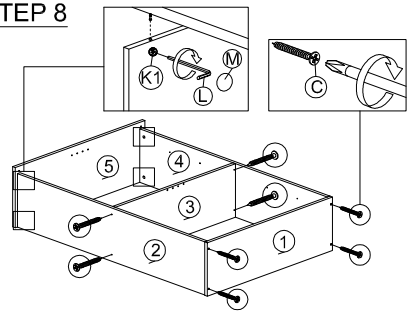



STEP 10

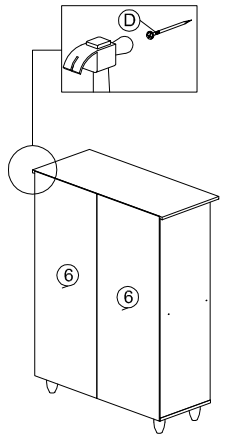


STEP 11

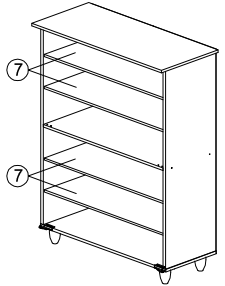

STEP 12

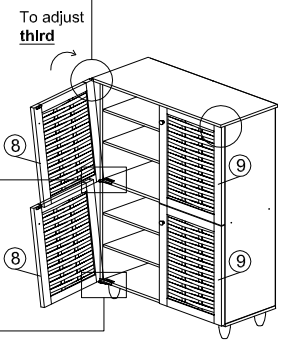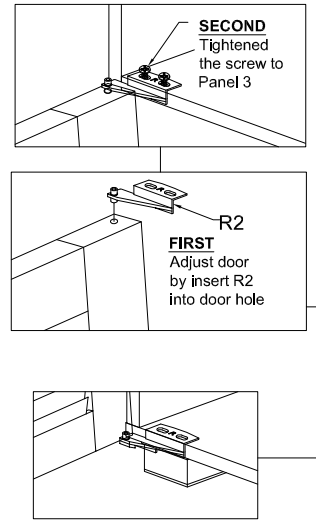

COMPLETED

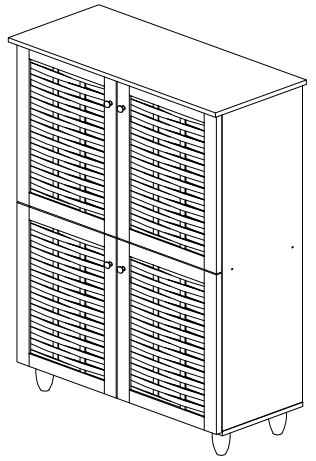

STEP 9

