

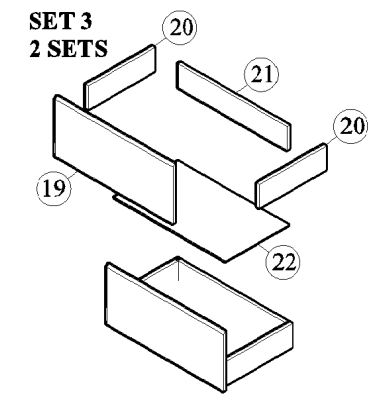
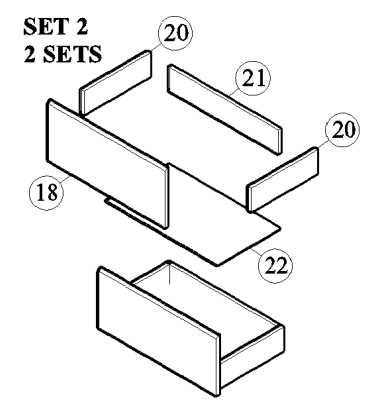
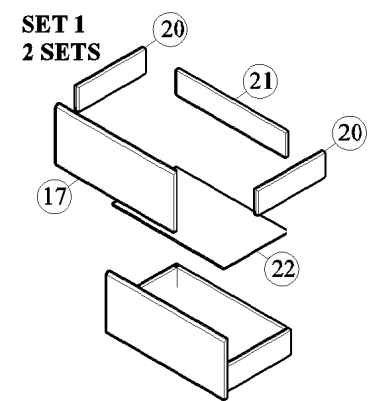
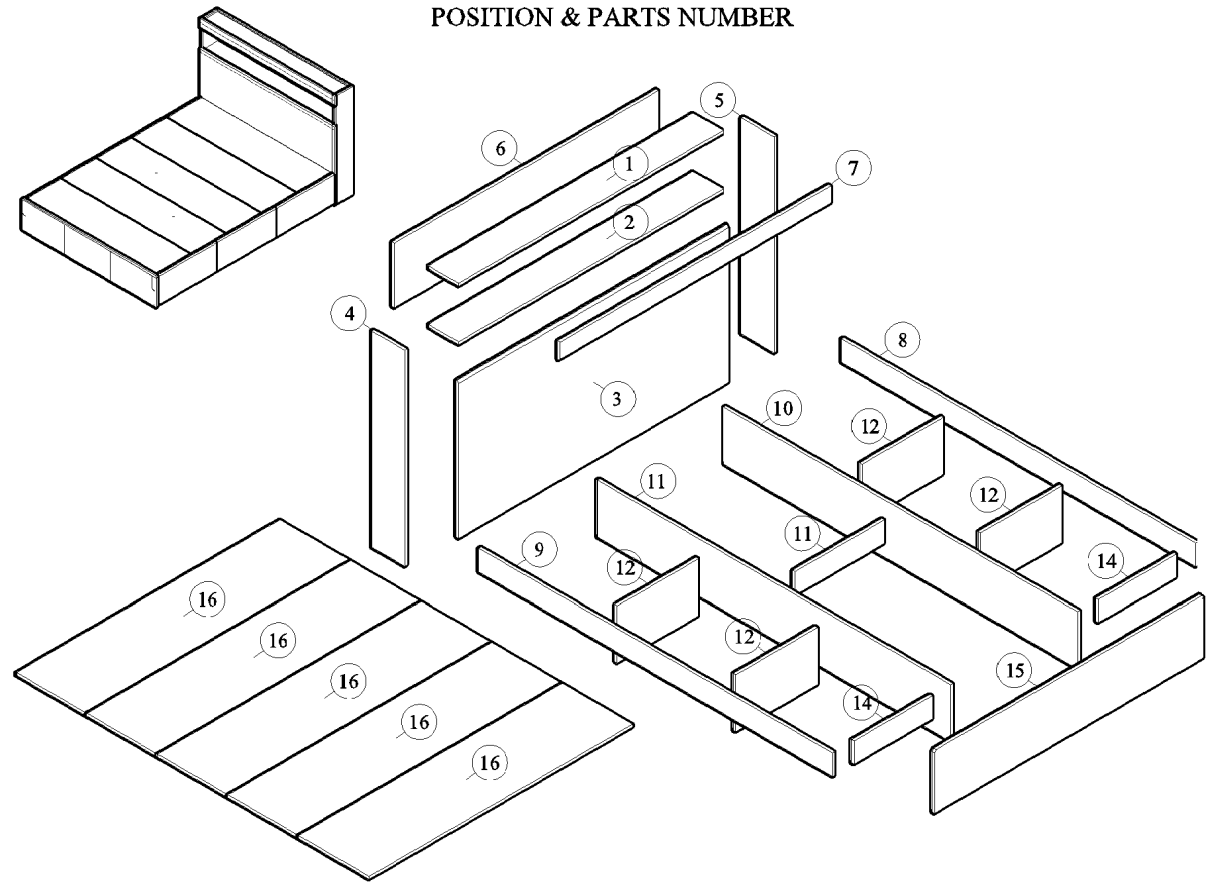



MODEL : SE BED 1302026WI

POSITION & PARTS NUMBER

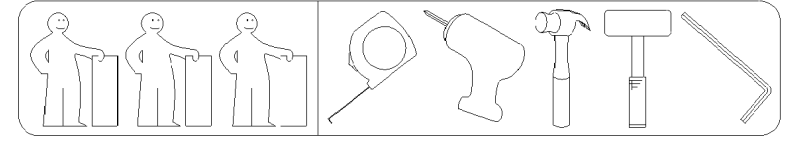



	ACCESSORIES	QUANTITY
A	WOOD DOWEL M8x30MM	48 PCS
B	WOOD DOWEL M8x25MM	4 PCS
C	MINIFIX M5x24MM	34 PCS
D	MINIFIX CASING	34 PCS
E	WHITE LEG PIN	18 PCS
F	SCREW M4x28MM	8 PCS
G	SCREW M4x38MM	48 PCS
H	SCREW M6x50MM	16 PCS
I	CASTER TWR-25 SCREW M3.5x12MM	24 PCS 48 PCS
J	ALLEN KEY	1 PC
K	SCREW M4x32MM	20 PCS

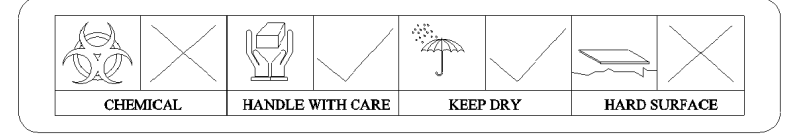




START ASSEMBLY


STEP 1

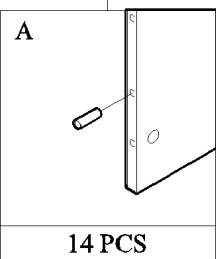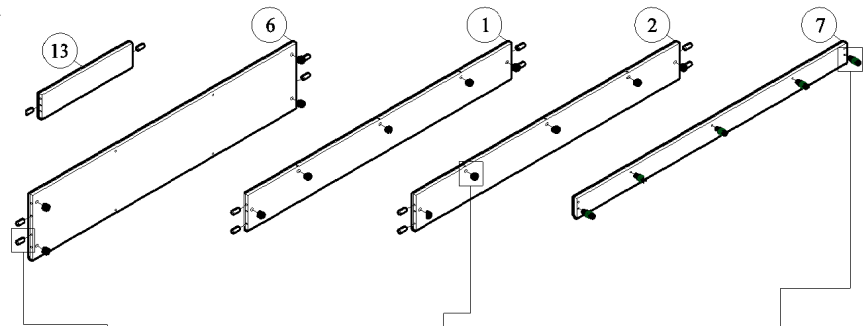

14 PCS


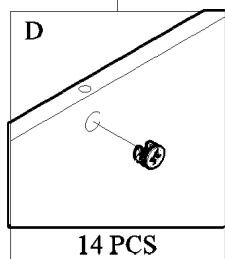


14 PCS

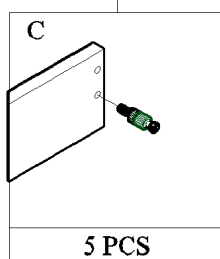


5 PCS


STEP 2

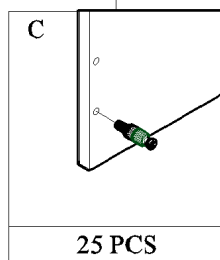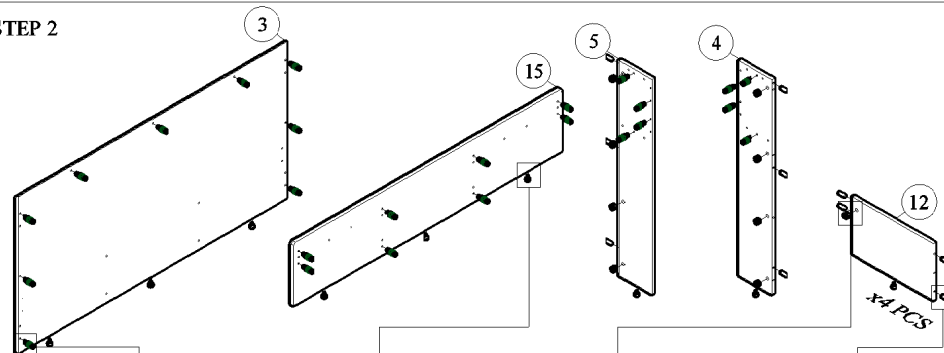


25 PCS

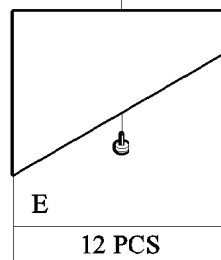

12 PCS


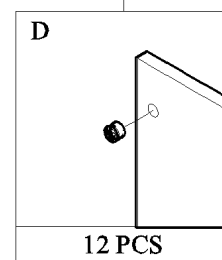


12 PCS

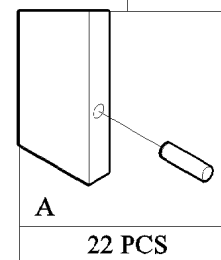


22 PCS


STEP 3

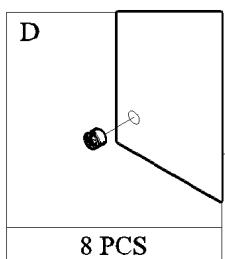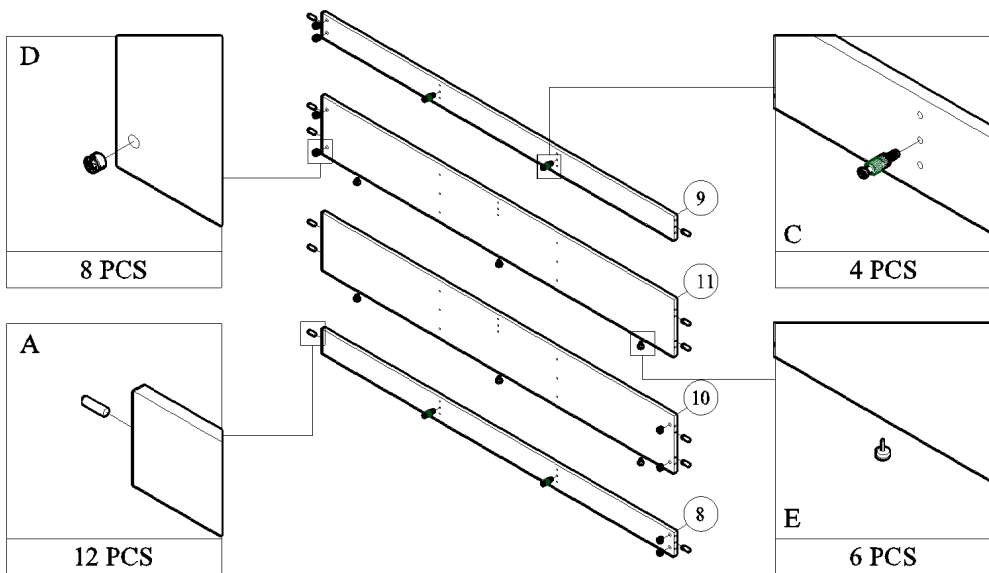


8 PCS

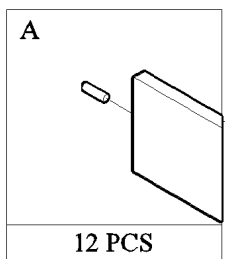

12 PCS


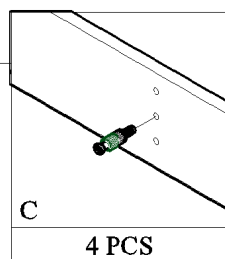


4 PCS

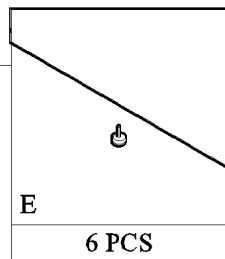


6 PCS


STEP 4

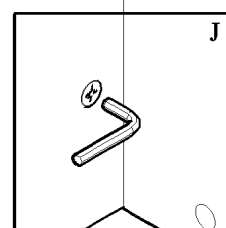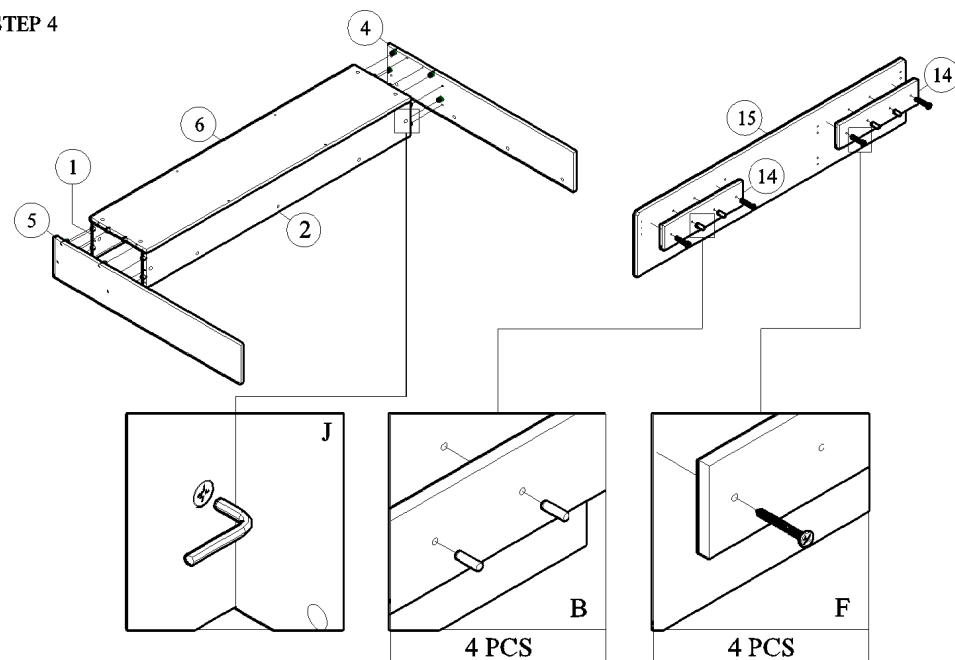


4 PCS

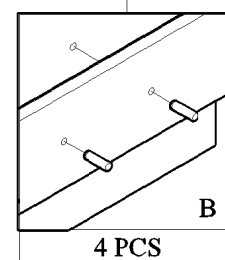


4 PCS

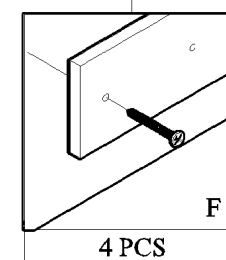


STEP 5

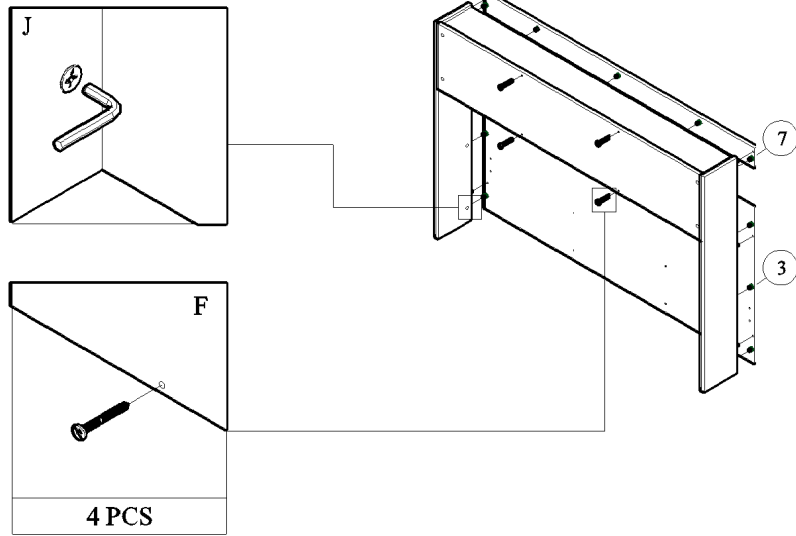


STEP 6

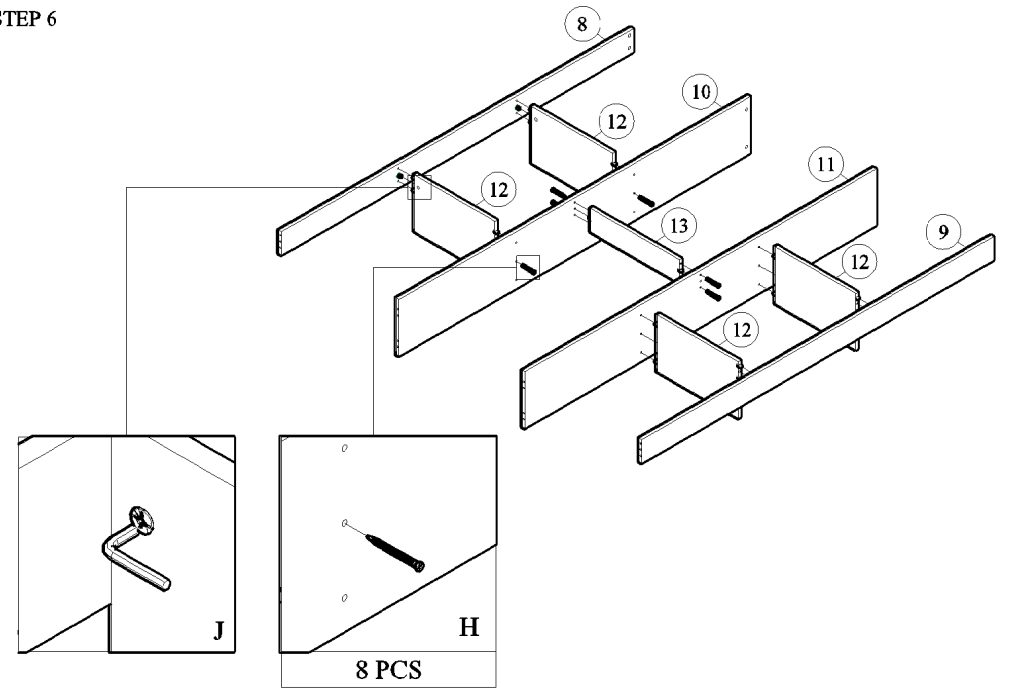


STEP 7

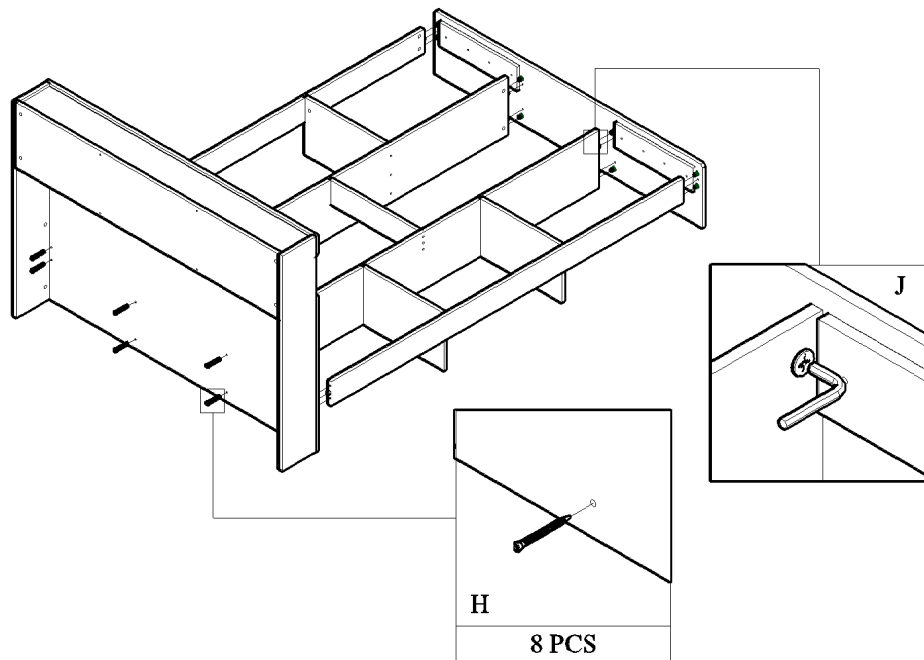


STEP 8

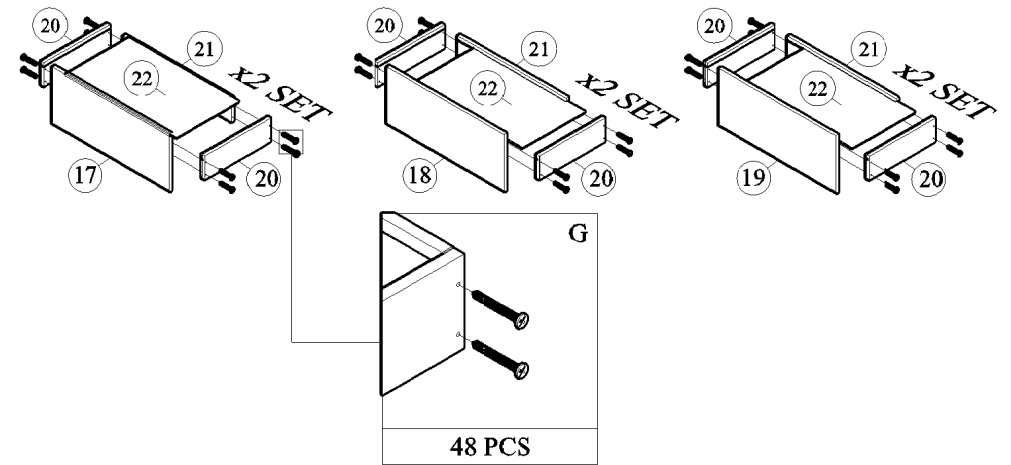


STEP 9

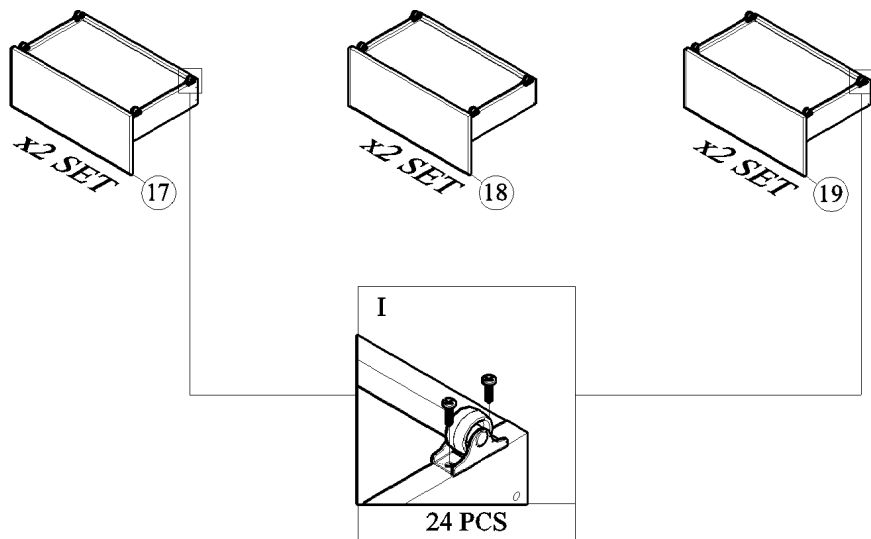

STEP 10

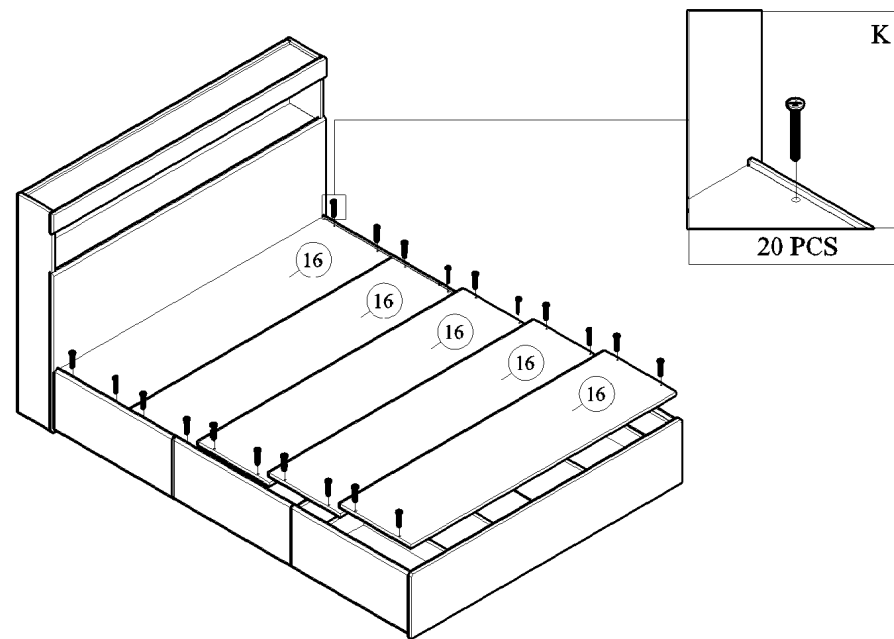

STEP 11

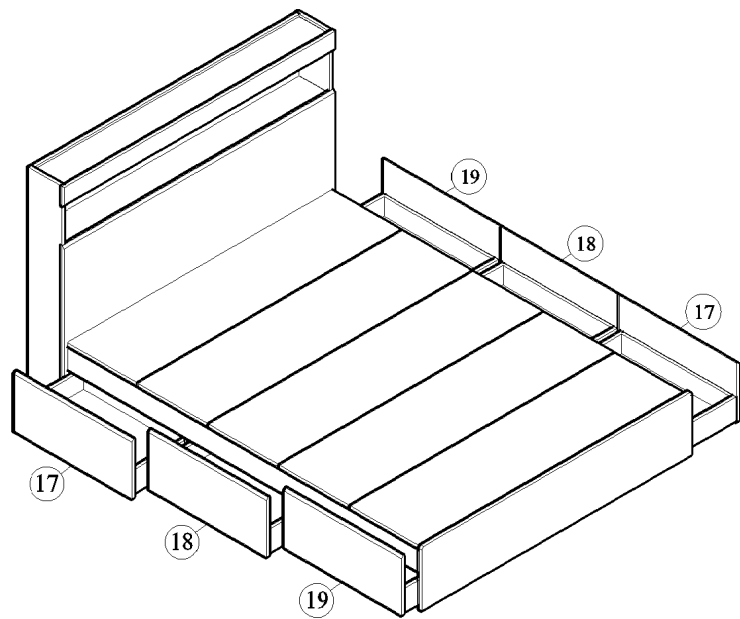

COMPLETED

