
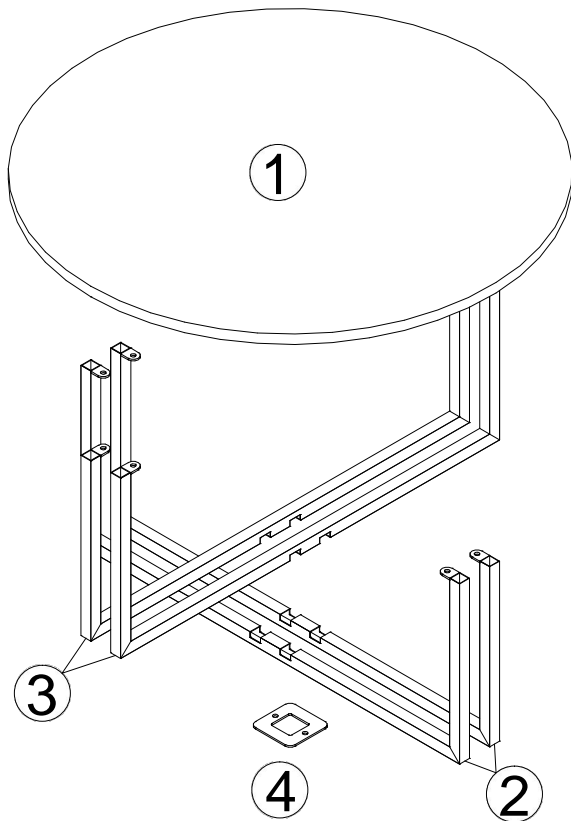


# Assembling Instruction

ITEM#: WS-12222

Attention: Do not tighten the screws until all of them are in right positions

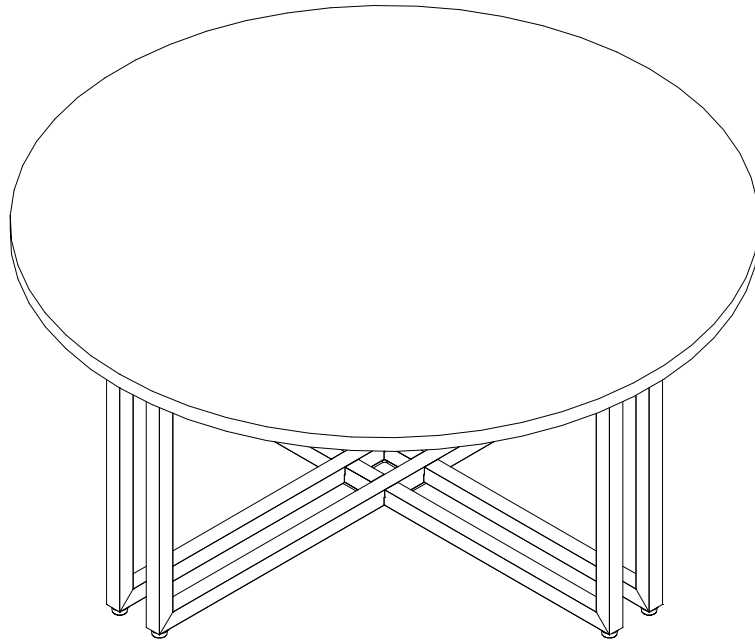


A x 8



B x 10




M6x12




4mm

1

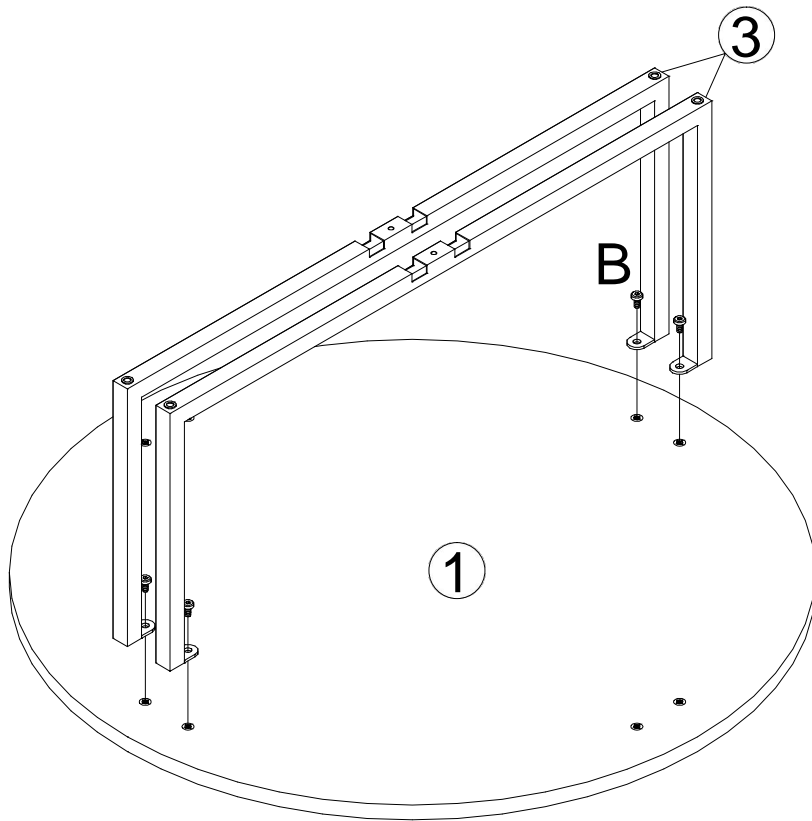


B x4 

2

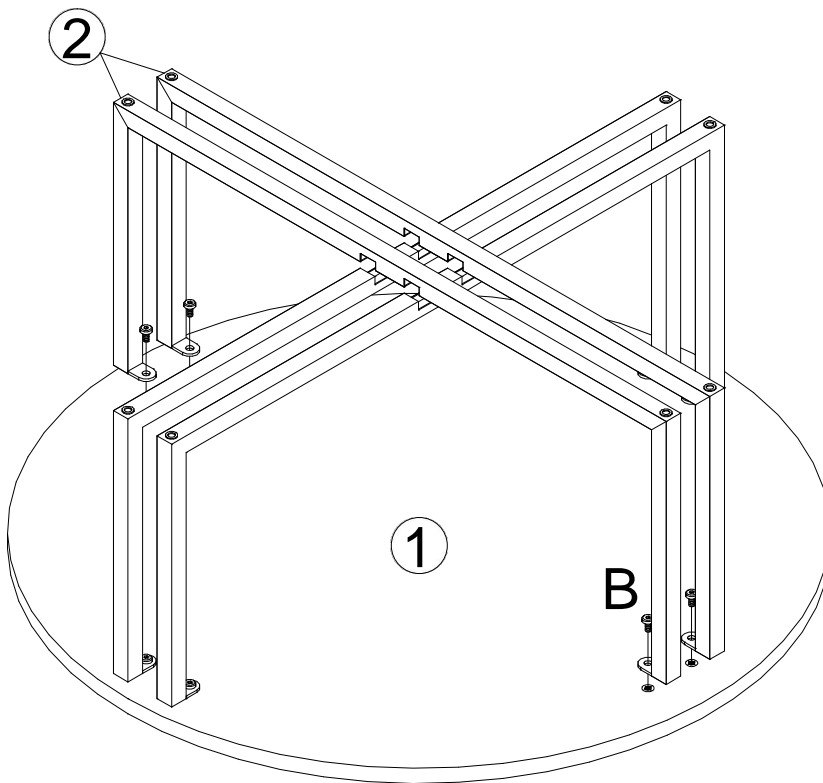

B x4 


3

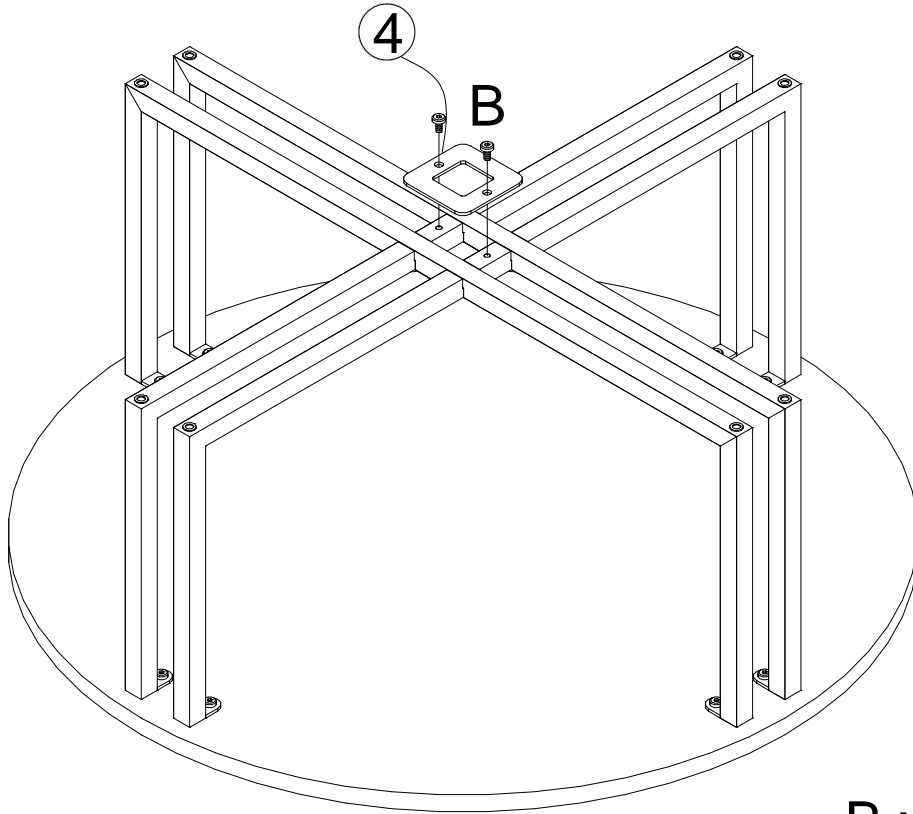

B x2



4

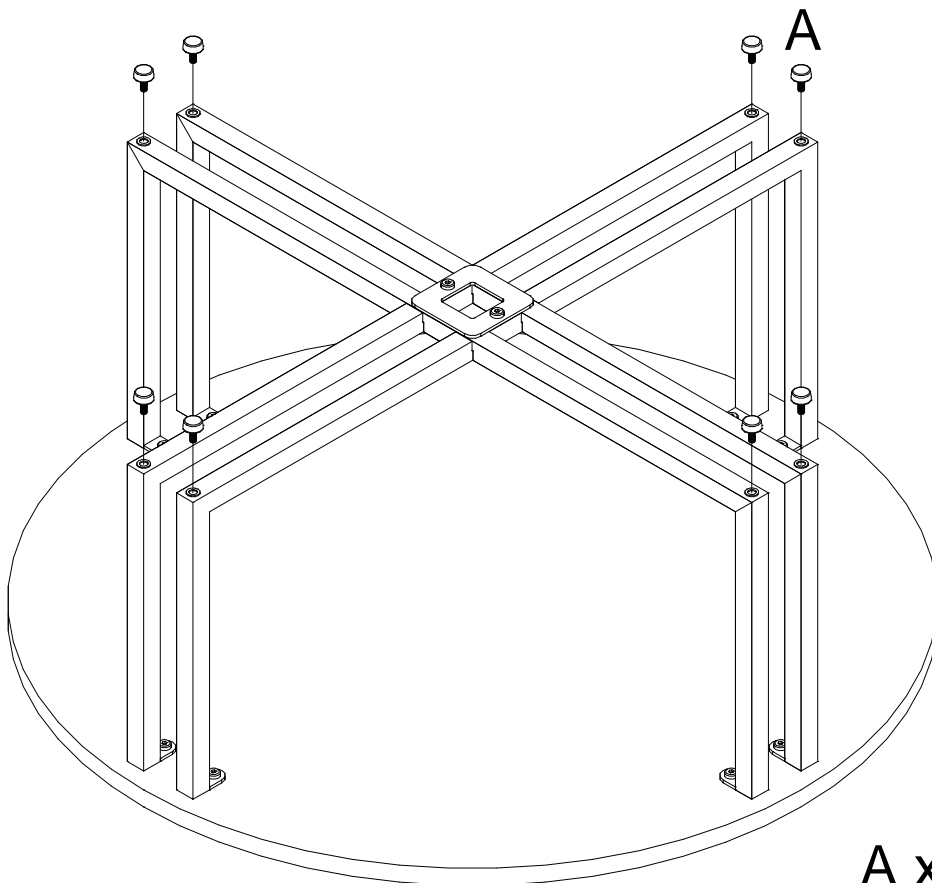

A x8

