
ASSEMBLY INSTRUCTION


HM16781



PARTS AND HARDWARE LIST

Α	1PC	D	M6*10mm	8PCS
В	2PCS	Е	©‱ M4*15mm	6PCS
С	2PCS	F	M6	1PC

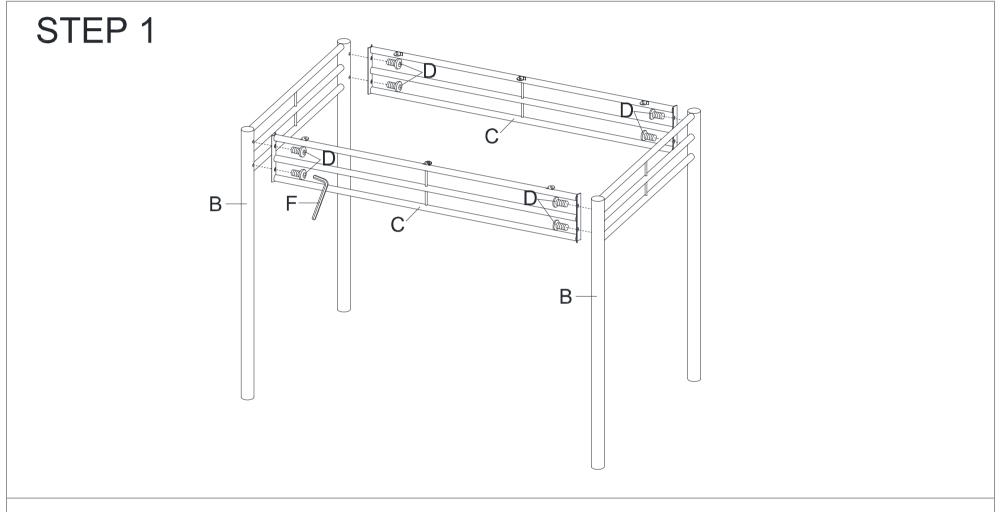

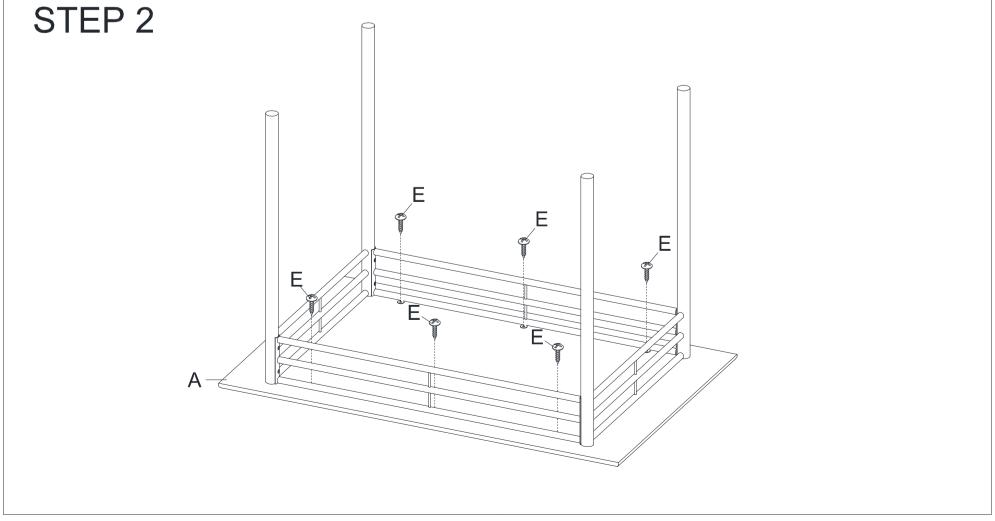




Boraam Industries

SAVANNAH X-BACK DINING CHAIR

ASSEMBLY INSTRUCTIONS

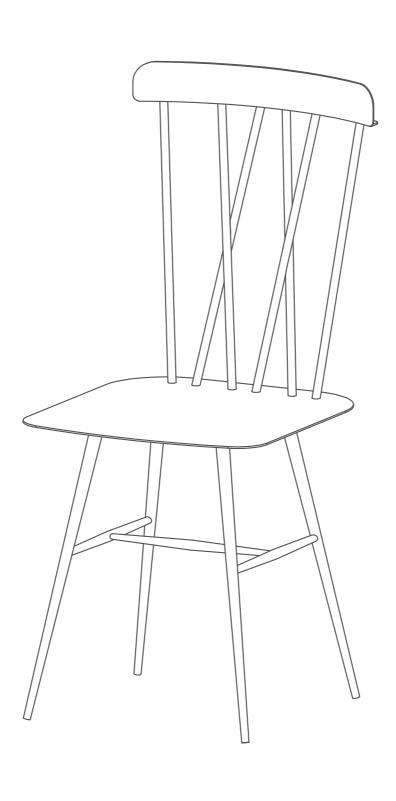



PLEASE READ ME FIRST





- Have questions about assembling your item?



- Item or parts damaged?



- Missing a part?



- We're here to help!



3 (847)949-6300 (M-F, 9am-5pm CST)



www.boraamindustries.com



customerservice@boraamindustries.com

