




# Boraam Industries

ASSEMBLY INSTRUCTIONS

**SKU: 98520,98523**

## **SONOMA KITCHEN CART**

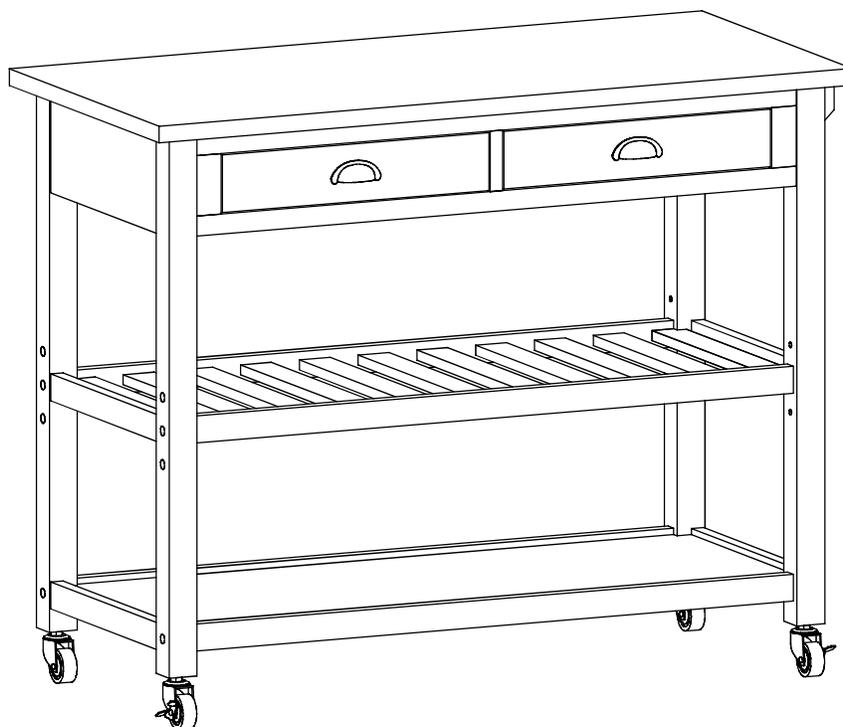

Have questions about  
assembling your item?



Items or parts damaged?



Missing a part?

---

**We're here to help! (Monday-Friday from 9am-5pm CST)**



847-949-6300  
877-267-2261



customerservice@  
boraamindustries.com




[www.boraamindustries.com](http://www.boraamindustries.com)


Phillips  
Screwdriver  
(Not provided)




**A**  
Wood Nut  
16 PCS

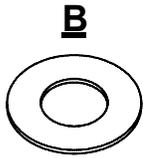


**B**  
Flat Washer  
8 PCS




**C**  
Caster  
2 PCS




**D**  
Caster with lock  
2 PCS

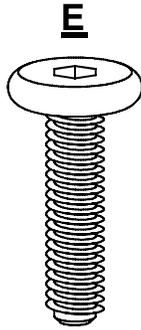


**E**  
M6\*35  
4 PCS

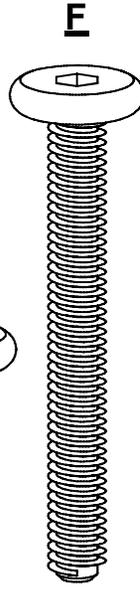


**E**  
M6\*50  
8 PCS

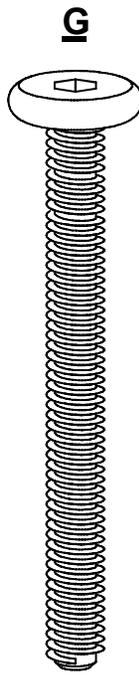

**G**  
M6\*60  
8 PCS

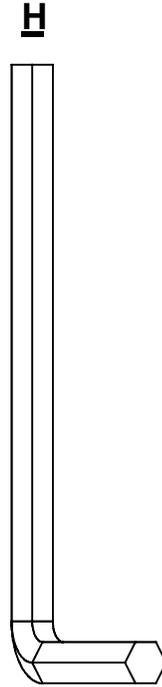


**H**  
1 PC

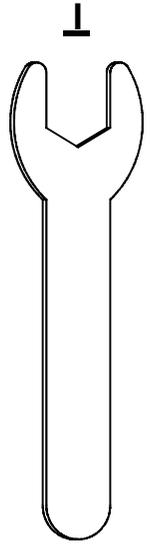


**I**  
Wrench  
1 PC


1

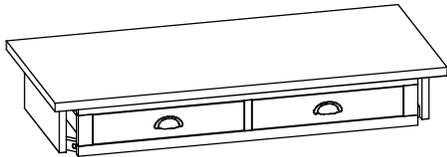


2




3




4

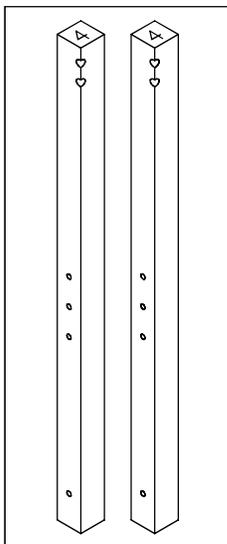

5


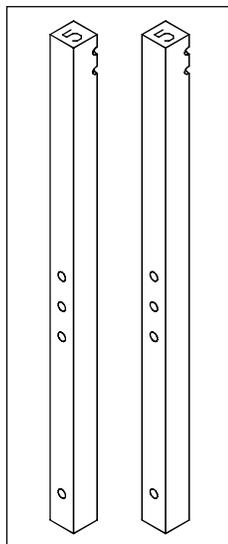


6



# 01



2X

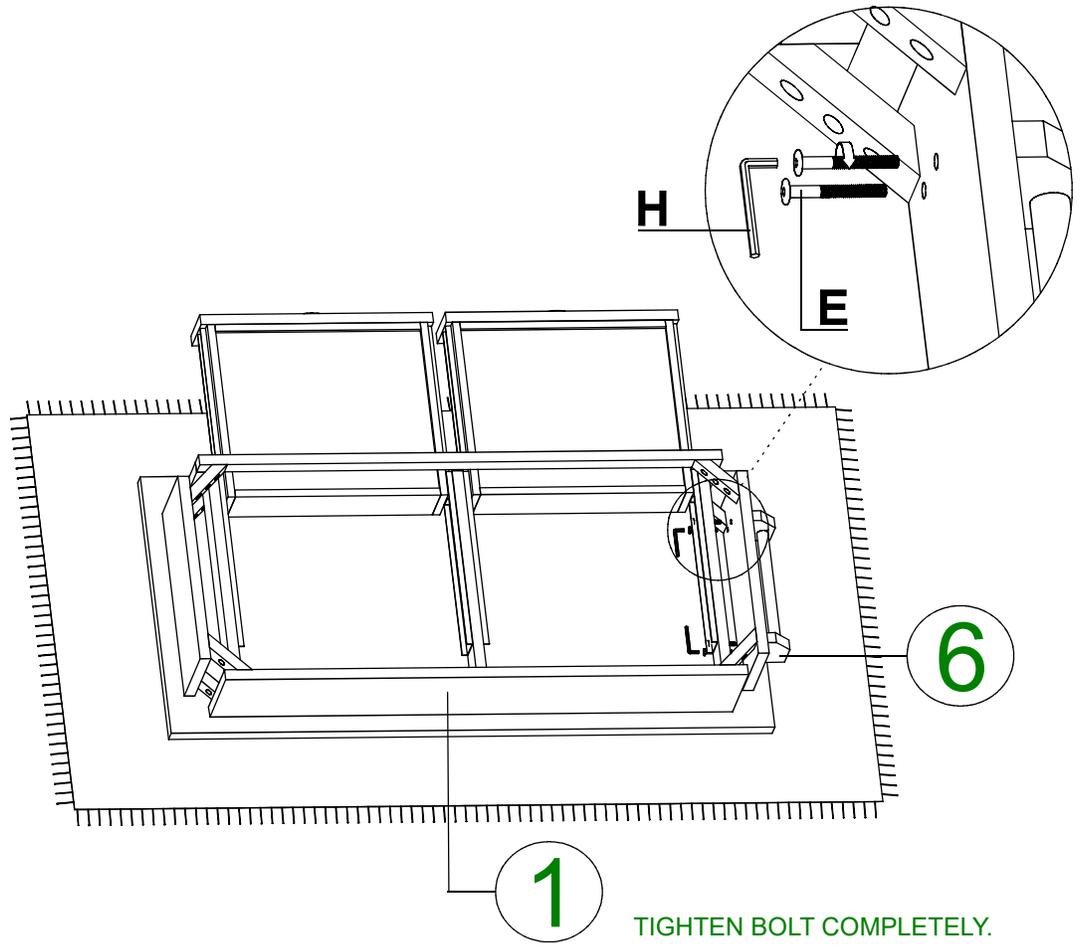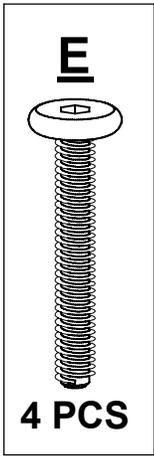

TIGHTEN BOLT COMPLETELY.

# 02


8X

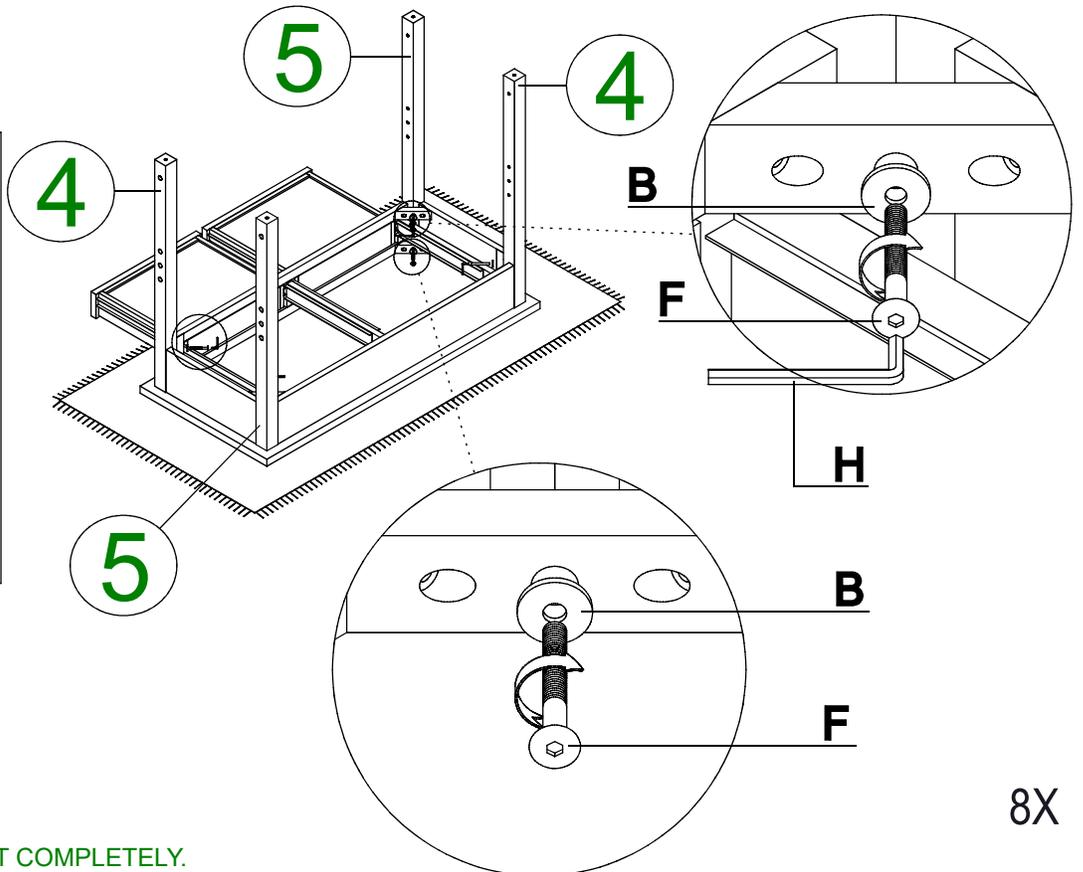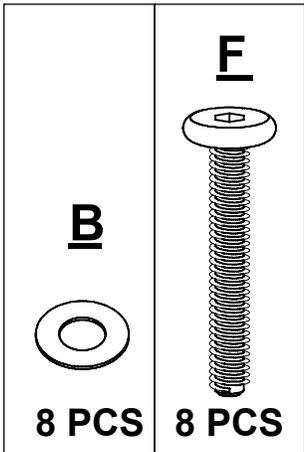


DO NOT TIGHTEN BOLT COMPLETELY.

# 03

1. Make sure the insert nuts are in the correct position before assembling.
2. You will need a screwdriver to turn the nuts into the correct position as shown below.

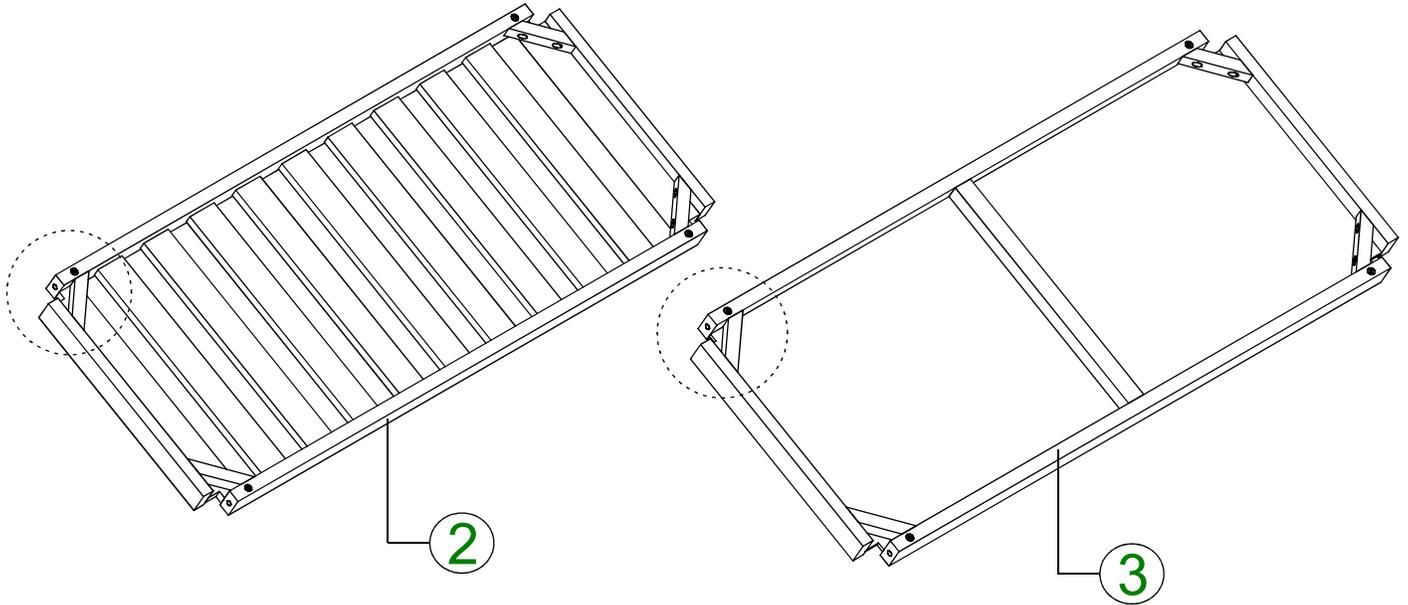


X

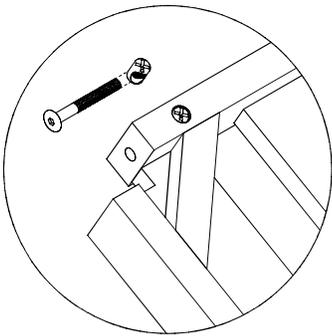


Incorrect

This is to prepare for step 04



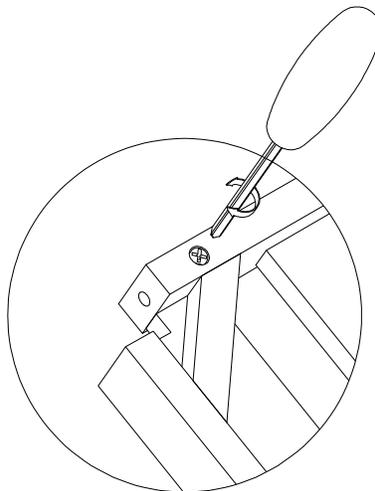


ok

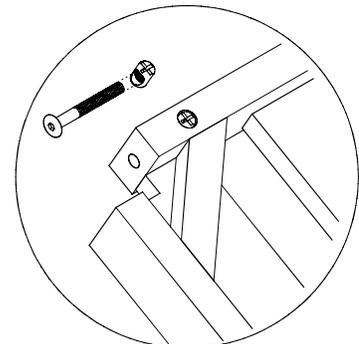




Correct

# 04

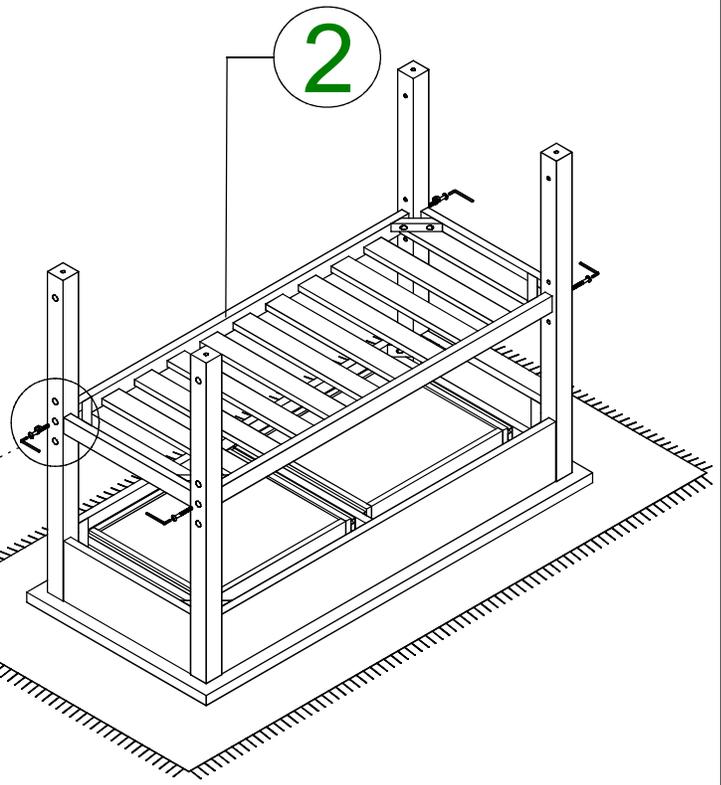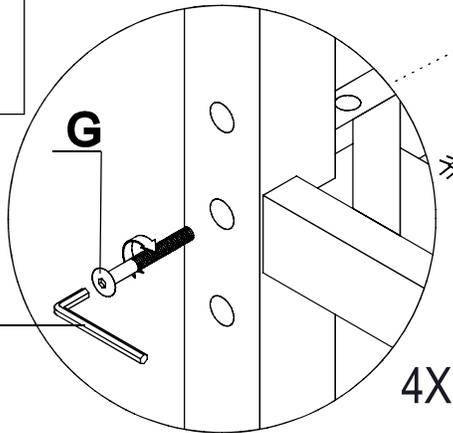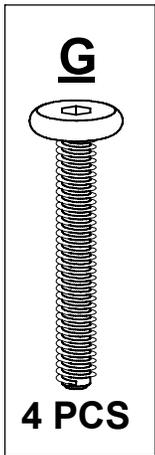




TIGHTEN BOLT COMPLETELY.

# 05

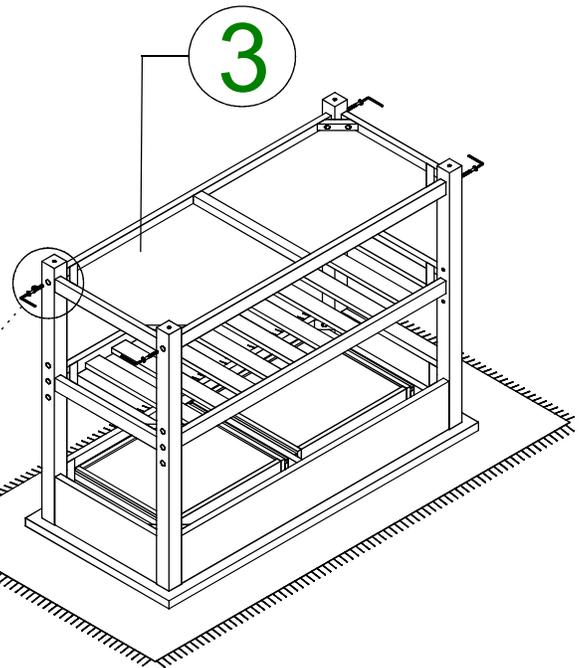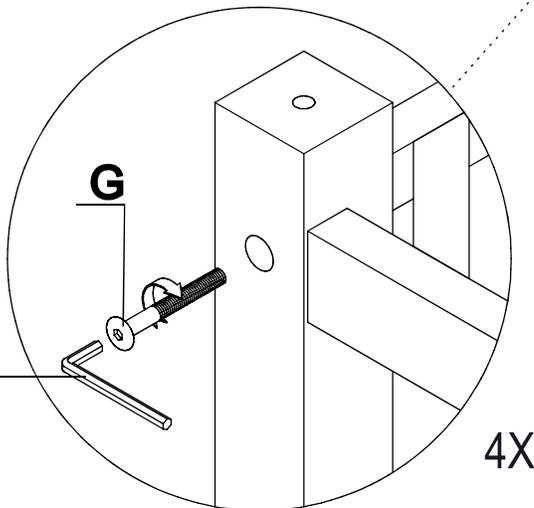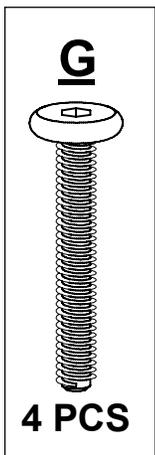




TIGHTEN BOLT COMPLETELY.


# 06

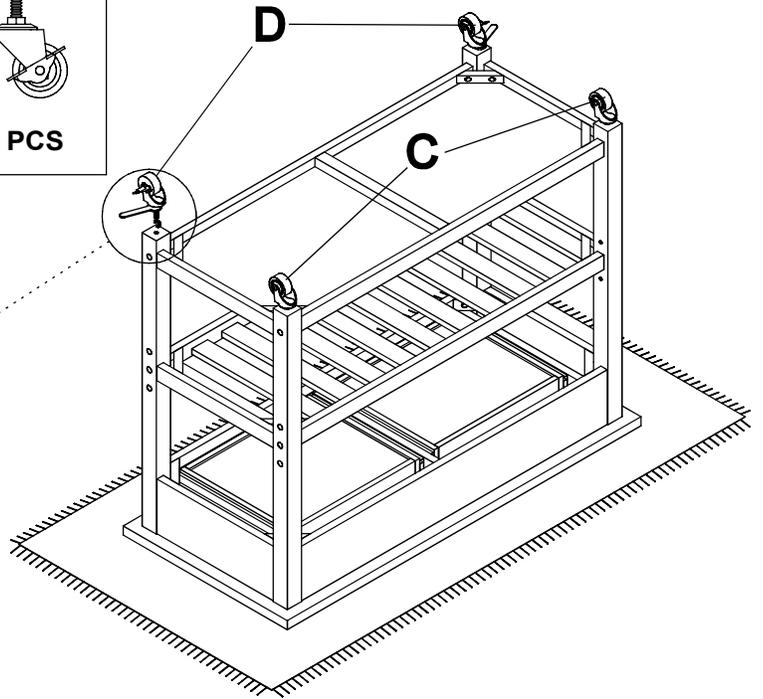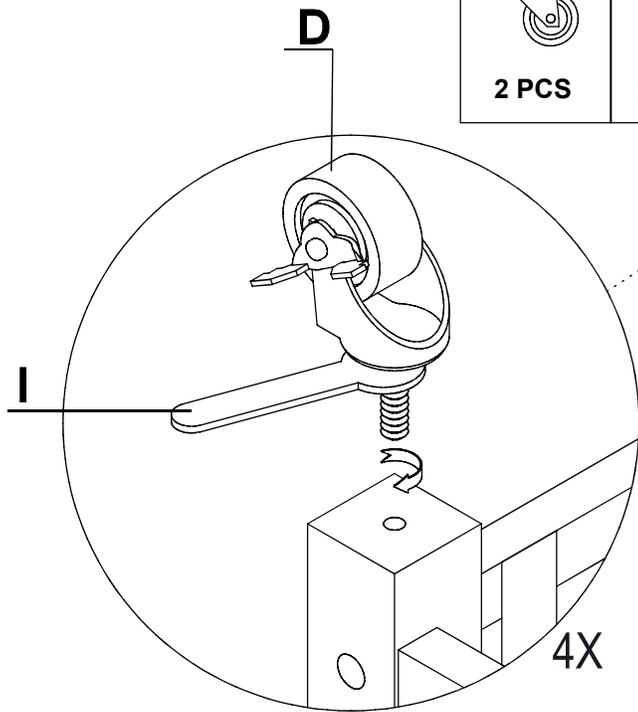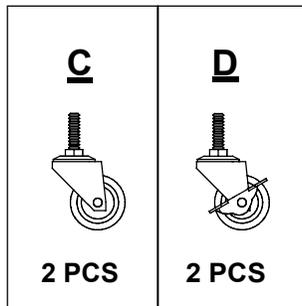

TIGHTEN BOLT COMPLETELY.

# 07

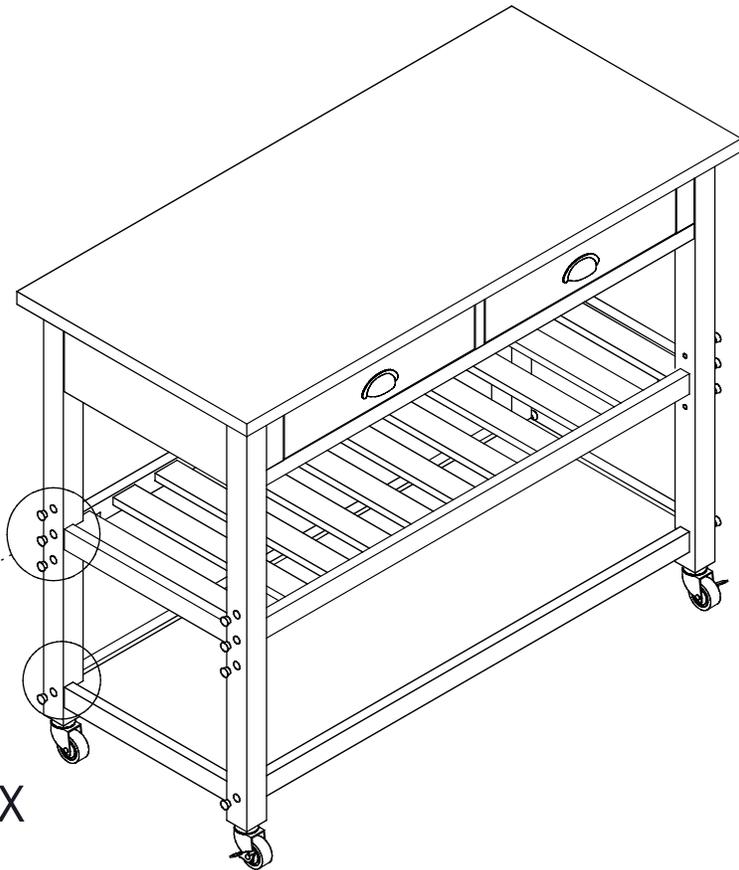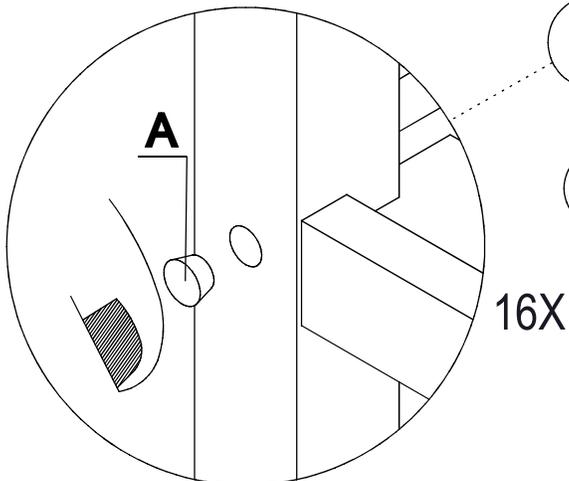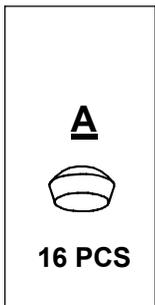

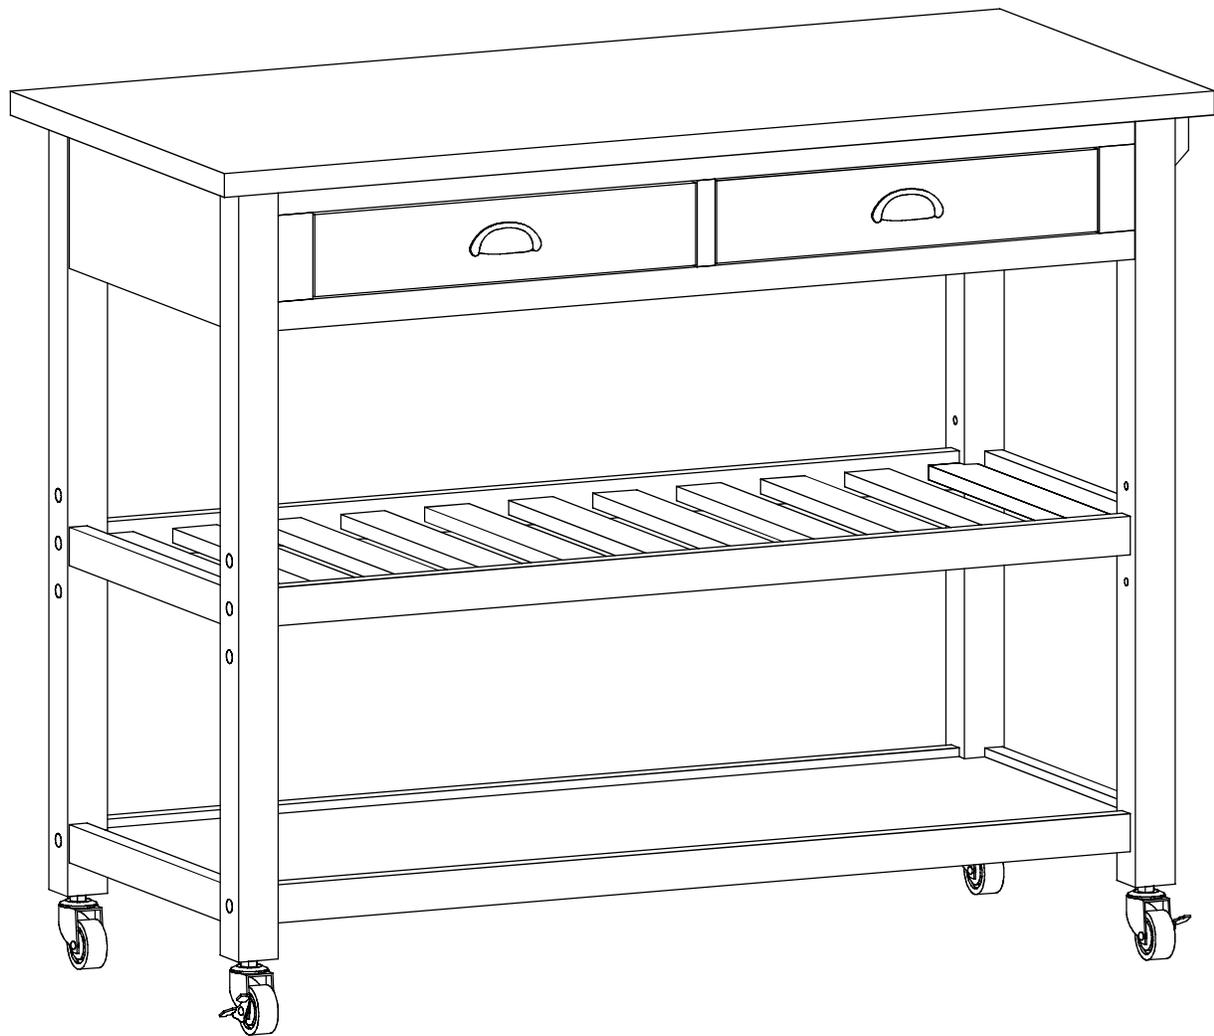

BE SURE TO CHECK ALL BOLTS ARE SECURELY  
TIGHTENED PRIOR USING THIS CART.