ASSEMBLY INSTRUCTIONS

ITEM #: 211-130 DRESSER

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!!




PARTS LIST						
NO	SKETCH	DESCRIPTION QTY				
Α		DRESSER	1 PCS			
В		LEG	4 PCS			
С		SUPPORT LEG	1 PCS			


HARDWARE LIST						
NO	OUTLOOK	DESCRIPTION	SIZE	QTY		
1	0	TIPPING RESTRAINT		1 PCS		
		JCBC	M6 x P1.0 x 20MM	12 PCS		
2		SPRING WASHER	M6 x 11MM	12 PCS		
	_	FLAT WASHER	M6 x 18MM	12 PCS		
3		ALLEN KEY	M4 x 55MM	1 PCS		
	1	NO OUTLOOK 1	NO OUTLOOK DESCRIPTION 1 TIPPING RESTRAINT JCBC SPRING WASHER FLAT WASHER	NO OUTLOOK DESCRIPTION SIZE 1 TIPPING RESTRAINT — 2 JCBC M6 x P1.0 x 20MM SPRING WASHER M6 x 11MM FLAT WASHER M6 x 18MM		


TOOLS REQUIRED (NOT PROVIDED)

PHILIP SCREW DRIVER 1 PCS

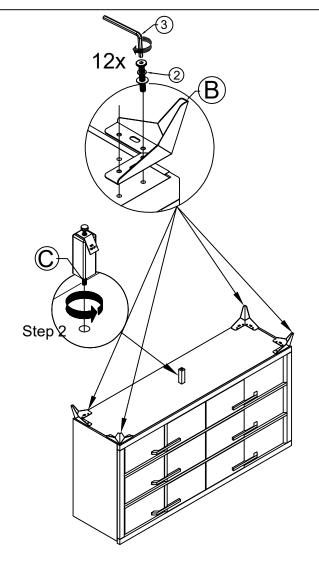

STEP 3: Move the Dresser (A) into final position and use tipping restraint (1) attach to wall

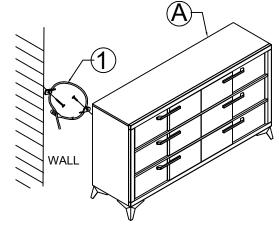

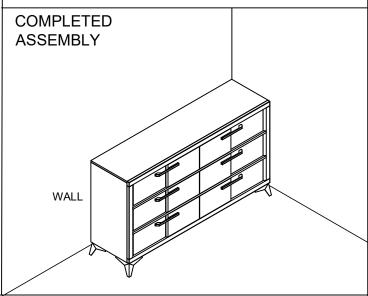

MADE IN MALAYSIA

PAGE: 1/1