

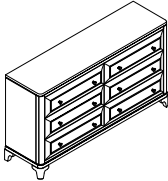


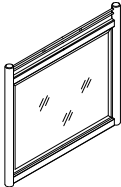

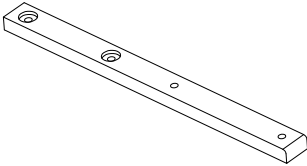


# ASSEMBLY INSTRUCTIONS

**MODEL # : 338-142 POSTER MIRROR**  
**MODEL # : 338-131 MODERN DRESSER**

**(V#12600HMVY)**  
**(V#12600HMVY)**

NOTE: KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED  
 DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!!  
 UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.

No	PART LIST		Q'TY
A		MODERN DRESSER	1PC
B		POSTER MIRROR	1PC
C		MIRROR SUPPORTS	2PCS

No	HARDWARE LIST		Q'TY
1		FLAT WASHER	8PCS
2		LOCK WASHER	8PCS
3		ALLEN BOLT	8PCS
4		ALLEN KEY 4MM	1PC
5		FURNITURE TIPPING RESTRAINT (NOT INCLUDED SCREWDRIVER)	1SET


# ASSEMBLY INSTRUCTIONS

MODEL # : 338-142 POSTER MIRROR  
MODEL # : 338-131 MODERN DRESSER

(V#12600HMVY)  
(V#12600HMVY)

NOTE: KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED  
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!!  
UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.

## STEP 1

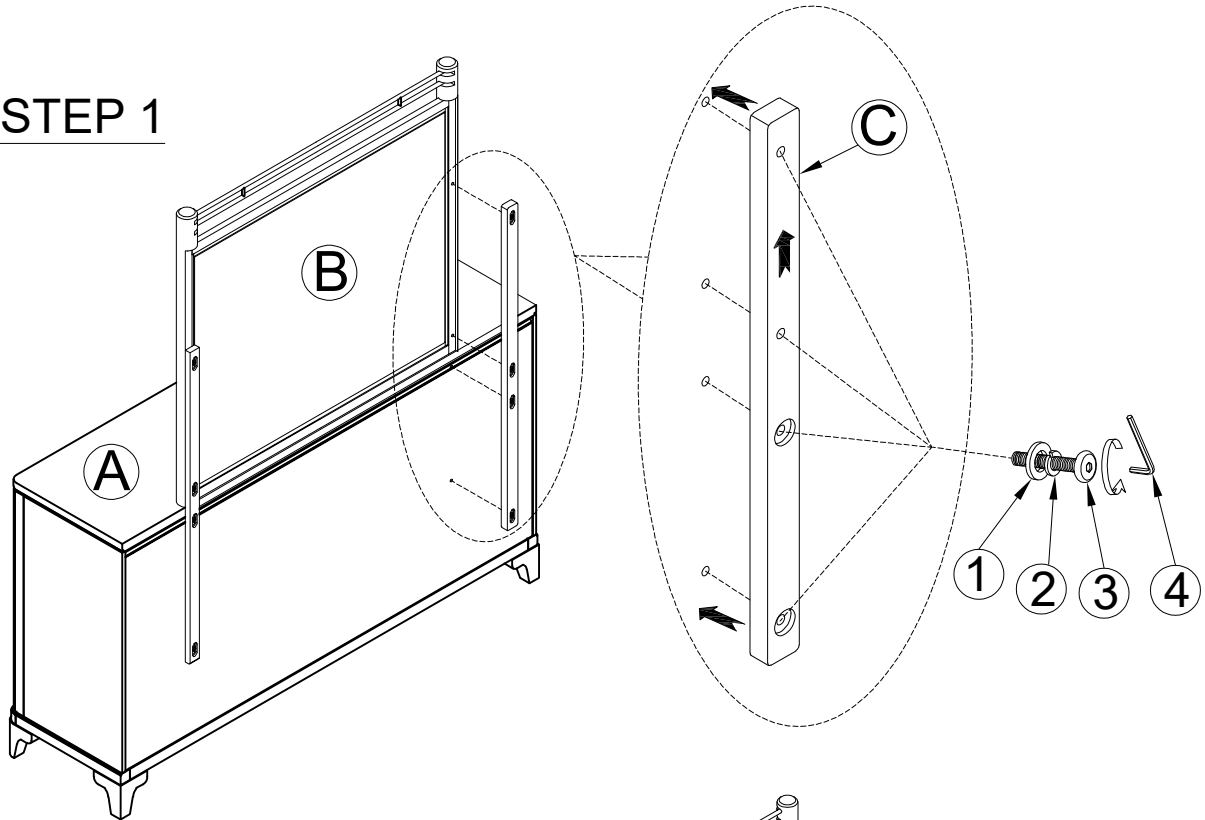

## STEP 2

★ Remark: there is a tip restraint kit provided on the back of this product. Please read the directions thoroughly and install immediately when placed in home.

