

BUTLER

Assembly Instructions
Style Number 735

SPECIALTY COMPANY

8200 SOUTH CHICAGO AVE. CHICAGO, IL 60617

PACKAGED

- | | |
|------------------------------------|----------------------|
| (A) 1 -Vanity Body | (D) 8 - Lock Washers |
| (B) 4 - Legs (2 front & 2 rear) | (E) 8 - Flat Washers |
| (C) 8 - Socket Head Machine Screws | (F) 1- Allen Wrench |


Read all instructions before starting assembly.

Step #1 Remove all the contents from the package checking that all of the components listed in "Packaged" are included. Prepare a flat, protected work surface where the product can be assembled.

Step #2 Carefully lay Vanity Body (A) upside down onto work surface (**NOTE: *Two people required***). Take care not to dislodge any drawers. Align Leg (B) into appropriate corner location making sure the threaded insert holes match up with the holes in the corner block (**NOTE: *The shape of the Front Legs differ from the Rear Legs***). Attach Lock Washer (D) and Flat Washer (E) onto one Socket Head Machine Screw (C). Insert screw with washers thru hole in corner block and into threaded insert in Leg (B). Repeat procedure for other screws and Legs. Loosely tighten screws at each corner.

Step #3 Securely* tighten all Socket Head Machine Screws (C) using Allen Wrench (F).

Step #4 Carefully place Vanity into upright position (***two people required due to weight***).

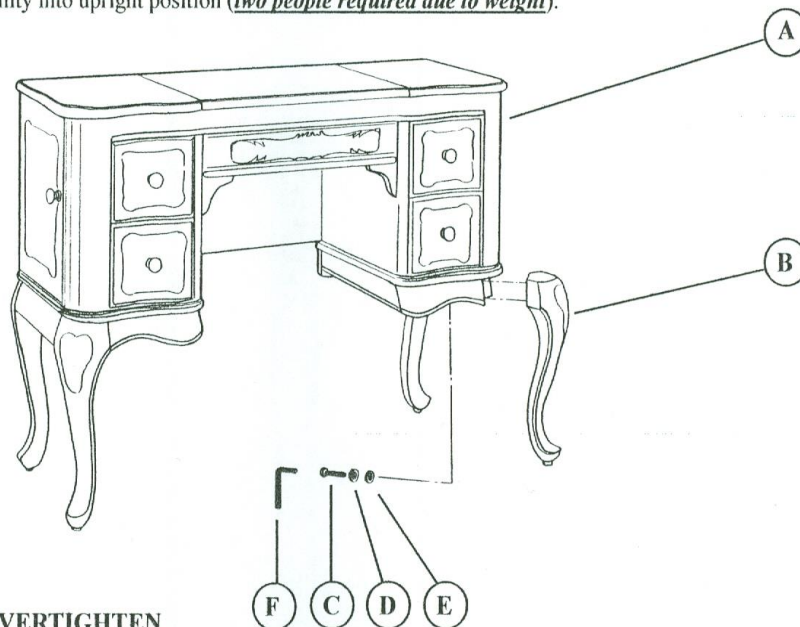

(***) Caution: DO NOT OVERTIGHTEN.**

In any correspondence regarding this product, please include the complete Butler identification number located on the underside of the product.

We hope this Vanity will be a useful and decorative addition to your home for years to come.

Copyright © Butler Specialty Company, 08/03