

# BUTLER

SPECIALTY COMPANY

8200 SOUTH CHICAGO AVE., CHICAGO, IL 60617

Assembly Instructions  
Style Number 980

## PACKAGED

- |                             |                     |
|-----------------------------|---------------------|
| (A) 1- Top Finial           | (F) 3- Lock Washers |
| (B) 1- Upper Fluted Turning | (G) 3- Flat Washers |
| (C) 1- Lower Twist Turning  | (H) 1- Allen Wrench |
| (D) 3- Legs                 | (I) 4- Coat Hooks   |
| (E) 3- Machine Screws       | (J) 8- Wood Screws  |

**Read all instructions before starting assembly.**


**Step #1** Remove all the contents from the package checking that all of the components listed in "Packaged" are included. Prepare a flat, protected work surface where the product can be assembled.

**Step #2** Align one of legs (D) with a hole in the Lower Twist Turning (C). Place one Lock Washer (F) with one Flat Washer (G) onto one Machine Screw (E) into the hole securely tighten by Allen Wrench (H). Repeat procedure for remaining legs.

**Step #3** Screw Upper Fluted Turning (B) into Lower Twist Turning (C).

**Step #4** Screw Top Finial Turning (A) into Upper Fluted Turning (B). Securely tighten all turnings.

**Step #5** Align one Coat Hook (I) over pilot holes in Upper Fluted Turning (B) and install two Wood Screws (J). Repeat with remaining hooks and securely tighten\* all screws.

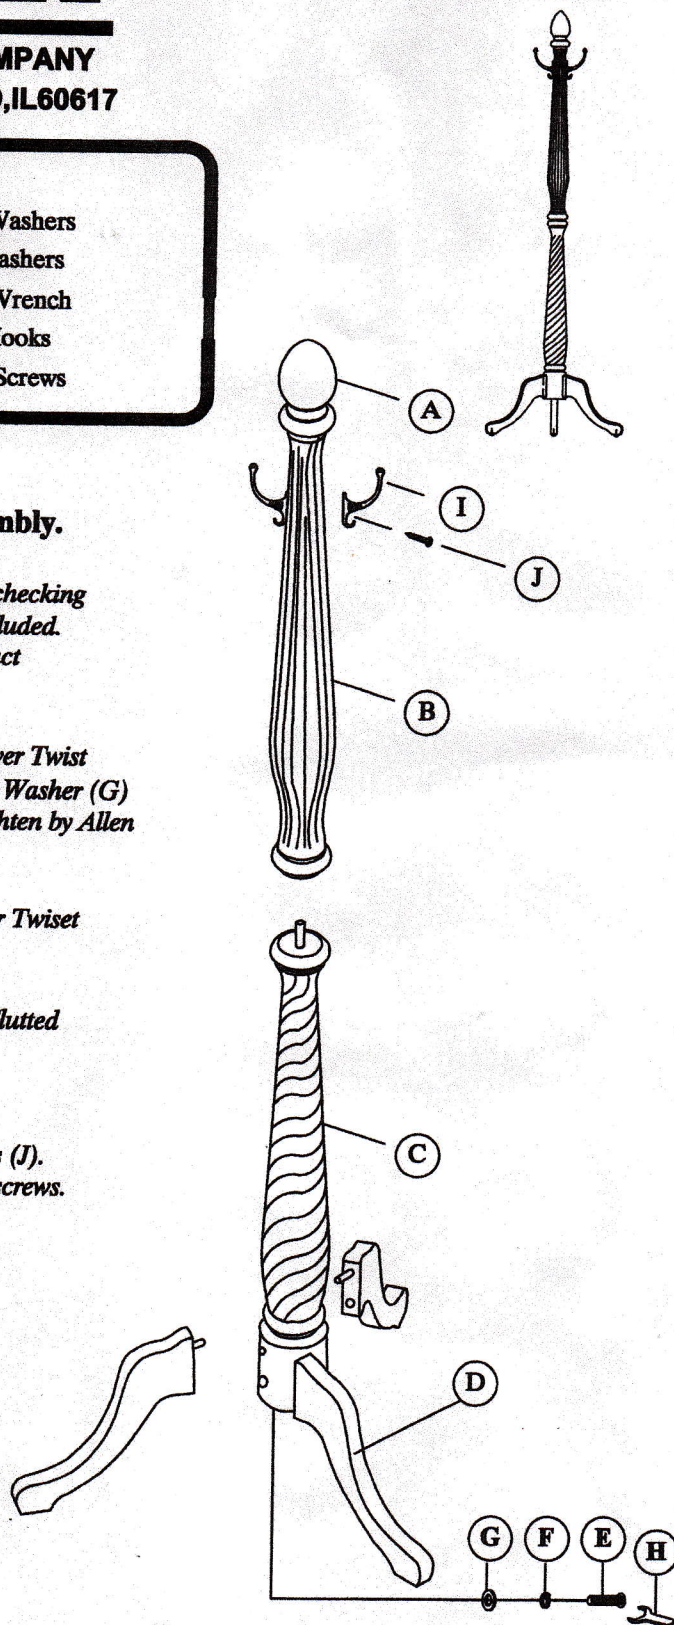

### (\*Caution:DO NOT OVERTIGHTEN

In any correspondence regarding this product, please include the complete Butler identification number located on the underside of the product.

We hope this Costumer will be a useful and decorative addition to your home for years to come.

COPYRIGHT BUTLER SPECIALTY COMPANY, 08/97