




THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.
BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING TRANSIT.

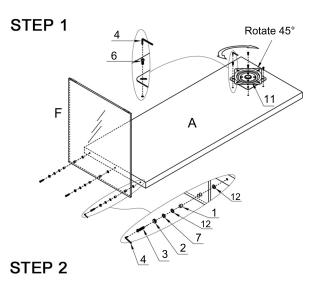

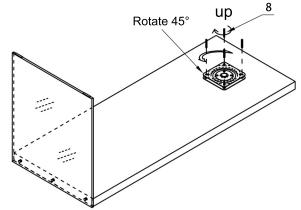

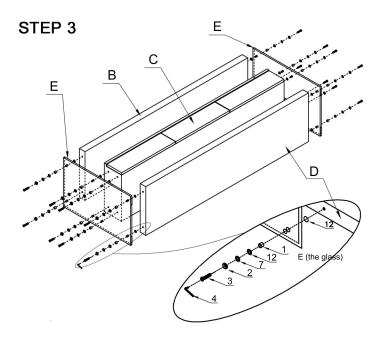

PART LIST

NO	DECS	SIZE (MM)	SKETCH	QTY
A	ТОР	1600*700*52		1PC
В	BASE-1	1526*396*52		1PC
С	CABINET	1526*396*160		1PC
D	BASE-2	1526*396*52		1PC
E	GLASS BASE-1	630*400*12		2PCS
F	GLASS BASE-2	750*700*12		1PC
G	вох	250*250*36	\Q	1PC

HARDWARE LIST

NO	DECS	SIZE (MM)	SKETCH	QTY
1	GASKET	Ф11*1.5*11	0	19PCS
2	FLAT WASHER-1	Ф8	0	19PCS
3	SCREW-1	M8*35	•	19PCS
4	ALLEN KEY	M5	7	1PC
5	NUT-1	M18	0	19PCS
6	SCREW-2	M8*16	P	4PCS
7	FLAT WASHER-2	Ф17*1.5*Ф8	0	23PCS
8	SCREW-3	M8*100		4PCS
9	NUT-2	M8		4PCS
10	HEXAGON SOCKET	14#	#	1PC
11	SWIVEL	200*200*25		1PC
12	CUSHION	Ф19*1.0*Ф7	0	38PCS
13	SPRING WASHER	Ф13*2*Ф9	•	4PCS

Put one of the (12) between E and B/C/D, and then fasten B C and D to E, with (3), (2), (7), (12), (1) by (4). Repeat the same step to other 15 screw holes.



