


# **ASSEMBLY INSTRUCTION ITEM NO.: FERNANDA-CT**

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.

BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SAMLL

PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING TRANSIT


#### STEP 1

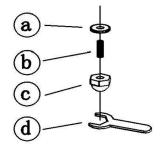

## **PART LIST**

NO	DESC	SIZE	SKETCH	QTY
A	GLASS	1300x700x12		1PC
В	FRAME	700x400x438		1PC


STEP 2

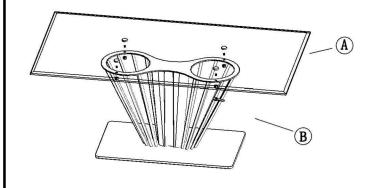

## **HARDWARE LIST**

NO	DESC	SIZE	SKETCH	QTY
a	NUT	8X25	9	4PC
b	SCREW	8X35		4PC
с	NUT	8MM	8	4PC
d	SPANNER	14MM	<b>C</b>	1PC

### **FINISHED**

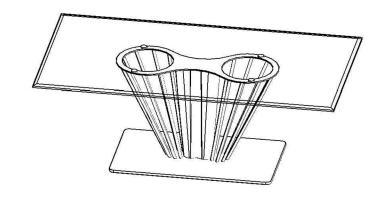

**MADE IN CHINA**