


### THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.

BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING TRANSIT.

## STEP 1

**FINISHED** 

1 OF 2

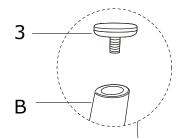



#### PART LIST

NC	DESC	SIZE (MM)	SKETCH	QTY
А	Desktop	1400*800*10		1PCS
В	Leg	745*50*50		4PCS

#### HARDWARE LIST

NO	DESC	SIZE (MM)	SKETCH	QTY
1	SCREW	M8*16		12 PCS
2	ALLEN KEY	5MM		1PCS
3	GLIDES	M6	<b>Q</b>	4 PCS
4	WRENCH_1	#14	2	1PCS
5	WRENCH_2	#10	2	1PCS

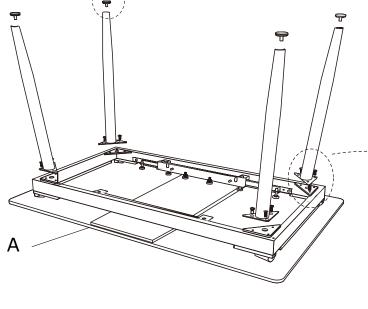

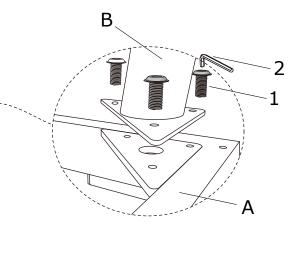



**SLAB TOP** 



# Adjustment Instruction

NUT-

TRACK -

A IF THE SLAB TOPS ARE NOT LEVELED WELL, PLEASE USE ⑤ TO LOOSE THE BELOW NUT, AND ADJUST THE ABOVE NUT BY 4) TO LEVEL THE TOPS.

B IF THE SLAB TOPS ARE NOT ALIGNED WELL, PLEASE USE 5 TO LOOSE THE BELOW NUT, AND MOVE THE TOP A

