



Chintaly Imports


## ASSEMBLY INSTRUCTION

ITEM NO: NADIA-DT

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.

BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING TRANSIT.

### STEP 1

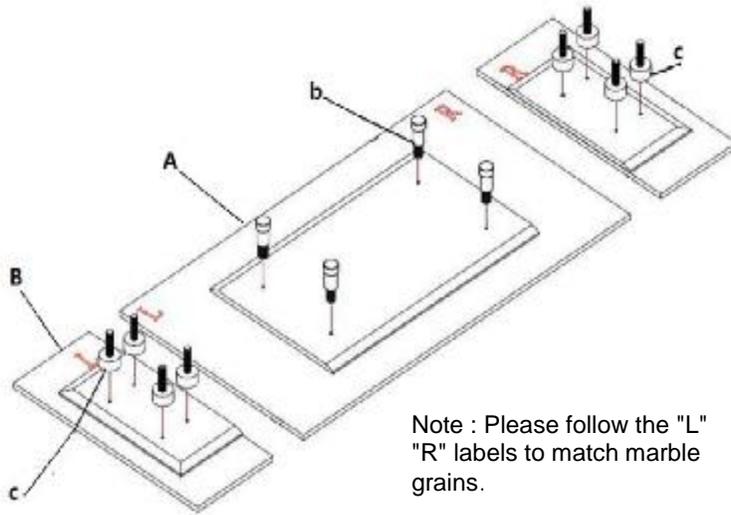


Note : Please follow the "L" "R" labels to match marble grains.

### PART LIST


NO	DESC	SIZE (MM)	SKETCH	QTY
A	DT-T	1600X1050 X18		1 PC
B	DT-EXT	1050X300X 18		2PC
C	DT-B	1400x376x 685		4PC

### STEP 2

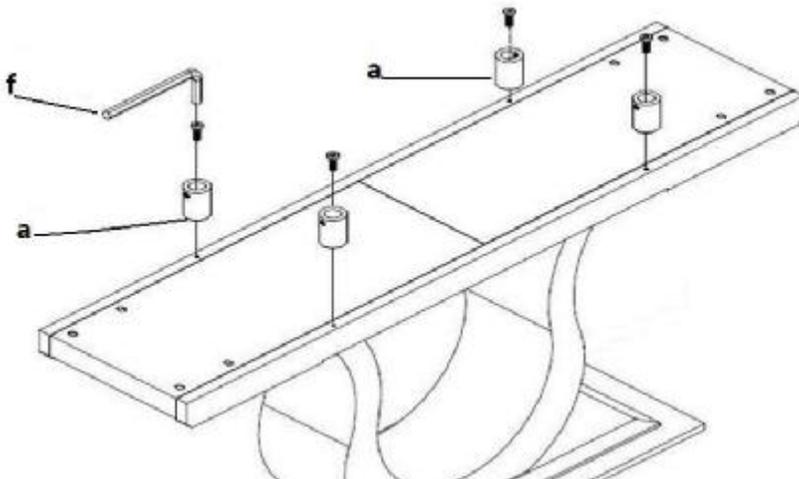


### PART LIST

NO	DESC	SIZE (MM)	SKETCH	QTY
a	ALUMINUM COLUMN	DIA 25X36-M6X15-M8X8		4SETS
b	PIN	DIA13x31-M8X11		4PCS
c	ADJUSTABLE NUT	DIA25x12-M8*45		8SETS
d	WASHER AND NUT	DIA19X1.2-M8		8SETS

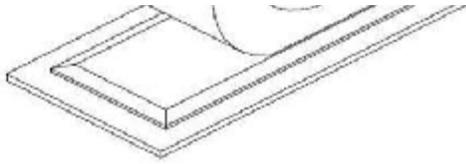




<b>e</b>	PLASTIC PAD	20X6X1		4PCS
<b>f</b>	ALLEN WRENCH	5MM		1PC
<b>g</b>	ALLEN WRENCH	3MM		1PC

**STEP 3**

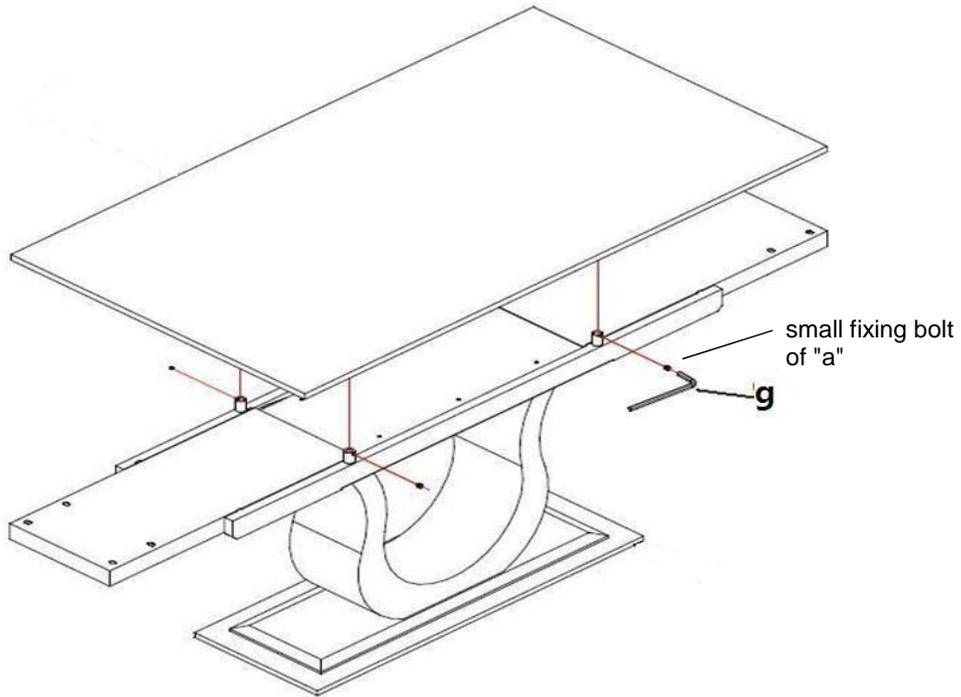

**STEP 4**

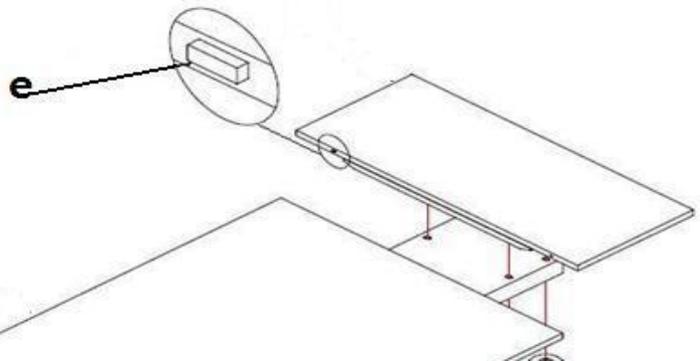

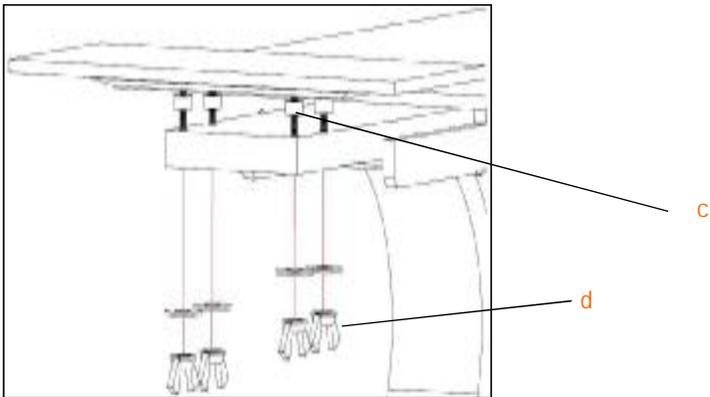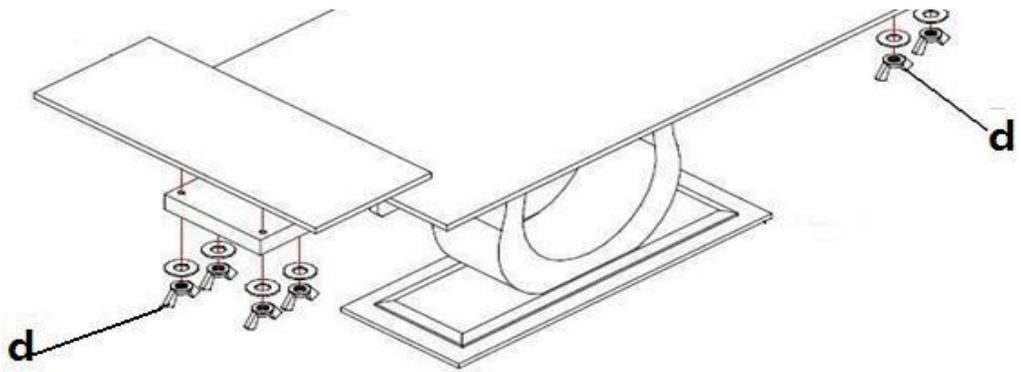

Note : before fully tighten "d", please move the extension marble more left or right , or adjust "c" to make it more up or down so that the extension can be align with the middle marble well.

MADE IN CHINA

---