# **ASSEMBLY INSTRUCTIONS**

**CVFDR1038** 


# **PARTS**


S.NO.	DESCRIPTION		QNT
А		TOP	01
В		LEGS	04
С		SHELF	01

# **HARDWARE**

S.NO.	DESCRIPTION		QNT
D		WASHER	12
E	Ø	SPRING WASHER	12
F		JCBC M6 x 40	12
G		ALLEN KEY	01

#### STEP - 1

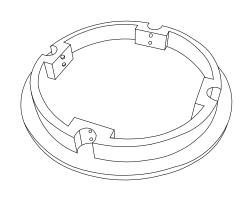


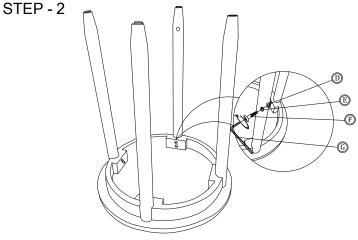

Put the TOP (A) on the floor upside down


Attach to the 4 legs (B), adjust to the mount on the top(A), then attach the JCBC M6 x 40 (F) with washer (D) and spring washer (E), (tighten with allen key (G))

## STEP - 3

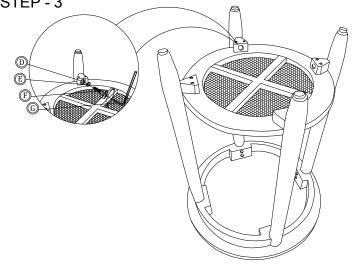

Install the shelf (C) on the legs according to the hole in the leg, Install the JCBC M6 x 40 (F) along with the washer (D) and spring washer (E), (tighten with an allen key (G))

### **COMPLETED**

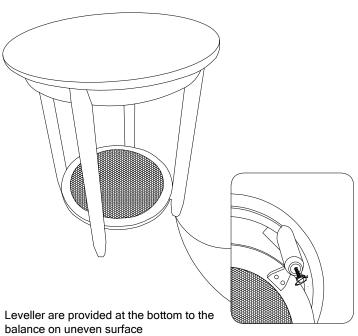

# MADE IN INDONESIA