


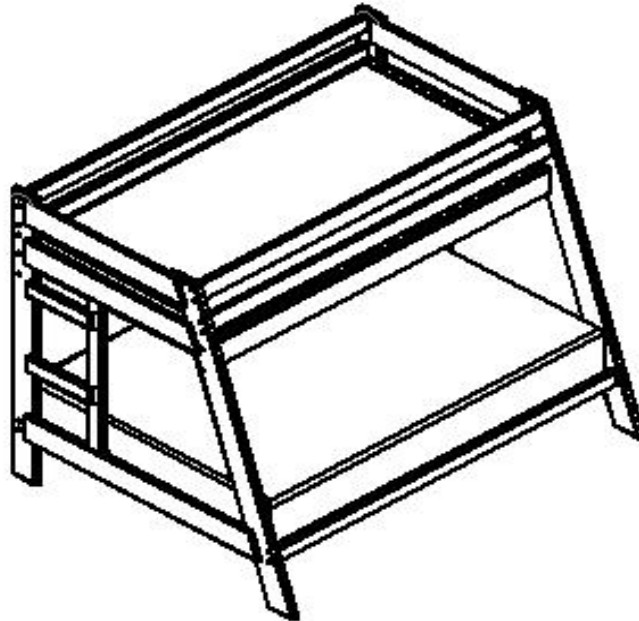

COASTER TETON TWIN/FULL BUNK

7030-00397

4859/4860



PARTS LIST:

- A) 32-4 1/4" Lag Bolts
- B) 32-Black Steel Washers
- C) 2 -End Assemblies
- D) 2 -3 1/4" x 75" Mattress Rails w/Support Cleats
- E) 2 -5" x 75" Mattress Rails w/Support Cleats
- F) 4 -3 1/4" x 75" Guard Rails
- G) 3 -3 1/2" x 38 1/2" Mattress Supports
- H) 3 -3 1/2" x 53 1/2" Mattress Supports
- I) 12-1 1/4" Wood Screws

TOOLS REQUIRED:

- 1) 7/16" Wrench or Socket Wrench
- 2) Phillips Head Screwdriver

NOTE: Tool recommended: Electric driver with 7/16" socket


ASSEMBLY INSTRUCTIONS:

NOTE:


Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.

- 1) Attach two 3 1/4" x 75" mattress rails(D) to the lower portion of two end assemblies(C) with 8 lag bolts and 8 washers, and tighten.
- 2) Attach two 5" x 75" mattress rails(E) and four guard rails(F) to the top portion of the end assembly with 16 lag bolts and 16 washers, and tighten.
- 3) **Place 3 short mattress supports on mattress rail support cleats on top bed assembly, with one support in the center, and a support pushed tightly against each end assembly. Repeat with 3 long mattress supports on bottom bed assembly.**
- 4) **Secure mattress supports with 12 wood screws.** A FOUNDATION IS REQUIRED WITH 3 SLAT CONFIGURATION
- 5) Add bunk boards for proper support and thickness of the innerspring bunk mattresses. See dealer for details.

When used with a slot roll, the three individual slats should be placed evenly in the gaps and underneath the strapping before fastening.

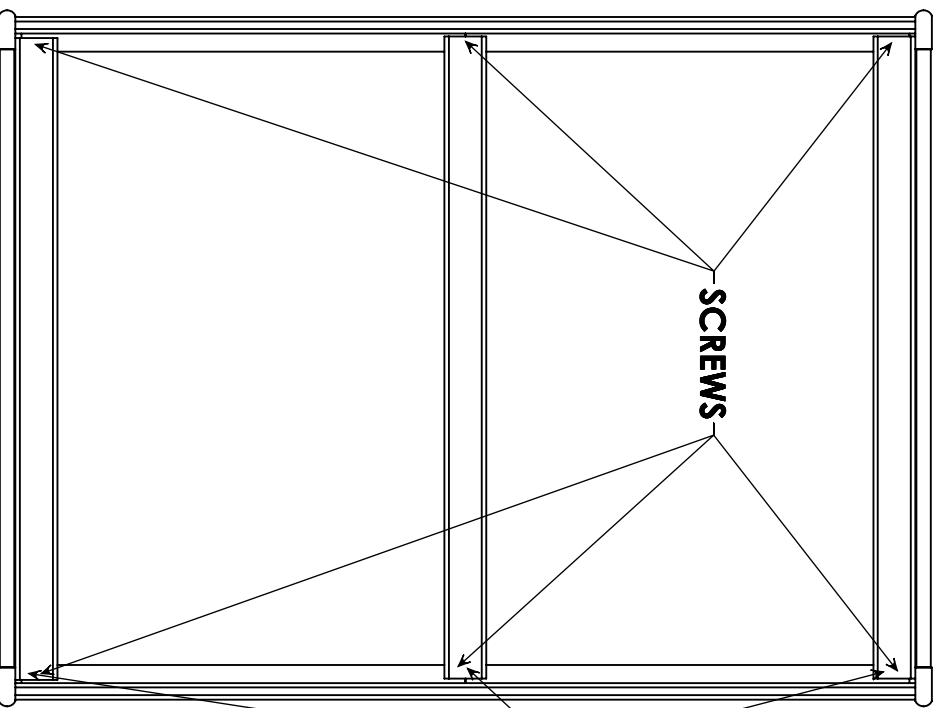

Installation of individual slats for use with Bunkie Board (Bunkie Board sold separately) See your retailer for purchase of Bunkie Board

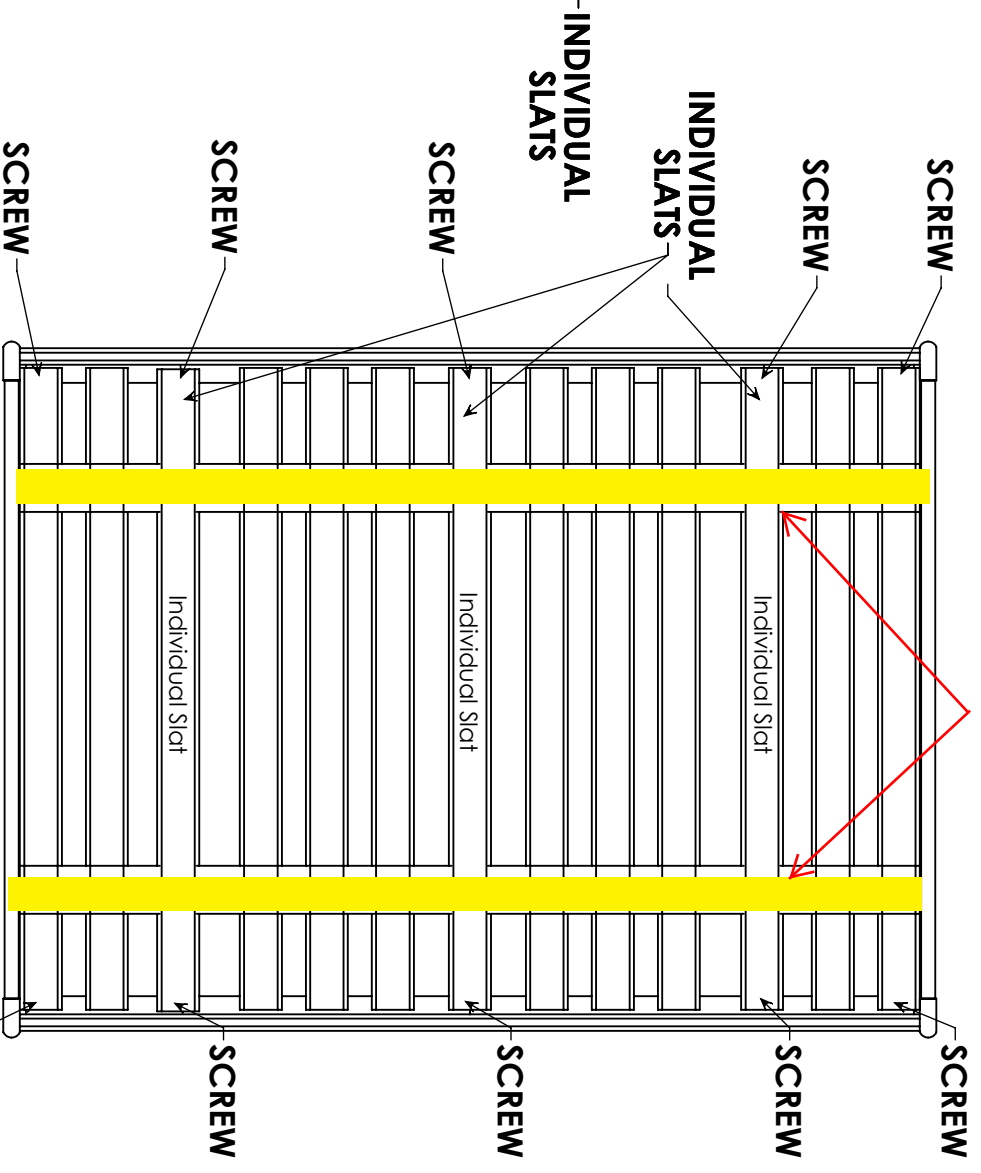

Installation of individual slats for use with Slot Roll (Slot roll sold separately) See your retailer for purchase of Slot Roll