


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

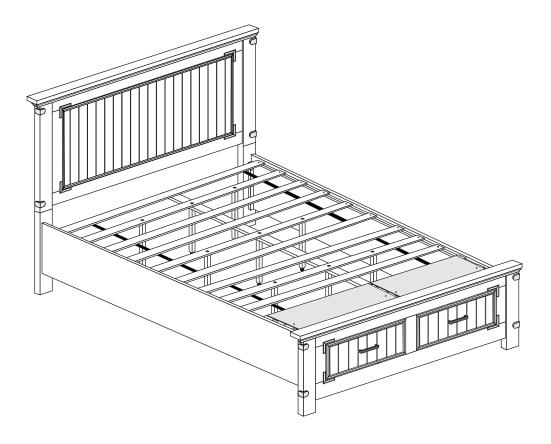

Fine Furniture for every stage of life

205260KE (B1-B3) <u>Eastern King Storage Bed</u>

REVISION 0:07/27/2016 REVISION 1:11/20/2018 REVISION 2:11/08/2019

COASTERFURNITURE.COM

PAGE 1 OF 8

ITEM: 205260KE (B1 - B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1 . Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

40 MINUTES

PARTS IDENTIFICATION

FAILTS IDENTIFICATION								
<u>B1</u> A	HEADBOARD PANEL	1PC	С	LEFT HEADBOARD ↓ · · · · · · LEG	1PC			
В	RIGHTHEADBOARD &	1PC	D	WOOD CLEAT	2PCS			
<u>B2</u>	2 (BOX 2) STORAGE FOOTBOARD				1PC			
B 3	3 (BOX 3)							
F	BED RAIL	2PCS	L	BED SLAT SUPPORT WITH LEVELER (WITHOUT HOLE)	6PCS			
G	HEADBOARD ROLL SLAT (6PCS)	1SET	М	BED SLAT SUPPORT WITH LEVELER (WITH HOLE)	2PCS			
Н	FOOTBOARD ROLL SLAT (6PCS)	1SET	N	CONCEAL PANEL	2PCS			
1	CENTER RAIL	1PC	нв	205260KE (B1) FROM BOX 1 HEADBOARD COMPLETE	1PC			
J	CENTER RAIL SUPPORT WITH LEVELER (WITHOUT HOLE)	3PCS	E	205260KE (B2) FROM BOX 2 STORAGE FOOTBOARD	1PC			
K	CENTER RAIL SUPPORT WITH LEVELER (WITH HOLE)	1PC		SIORAGE FOOTBOARD				

ITEM: 205260KE (B1 - B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.


HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 205260KE (B3)


1	LONG BOLT (M6 x 60mm - RBW)		16PCS
2	SHORT BOLT (M6 x 40mm - RBW)		20PCS
3	BIG FLAT WASHER (M6 x 19mm - RBW)		12PCS
4	SMALL FLAT WASHER (M6 x 13mm - RBW)		12PCS
5	LOCK WASHER (M6 x 13mm - RBW)		24PCS
6	LONG FLAT HEAD SCREW (M4 x 30mm - RBW)	Dime	27PCS
7	SHORT FLAT HEAD SCREW (M4 x 16mm - RBW)	1) min	8PCS
8	ALLEN WRENCH (M4 x 58mm- BLK)		1PC
9	WOOD DOWEL (Ø 10 x 30mm)		8PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

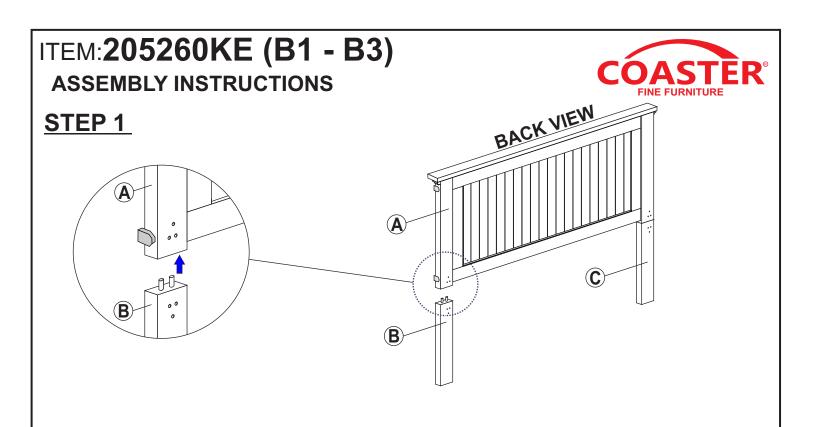


STEP 2

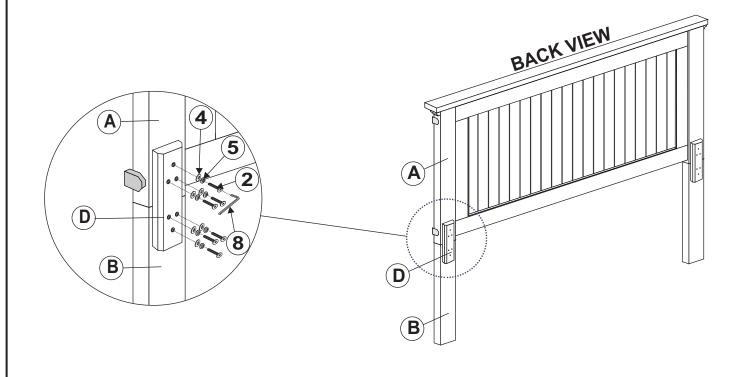


ITEM: 205260KE (B1 - B3) ASSEMBLY INSTRUCTIONS



STEP 3

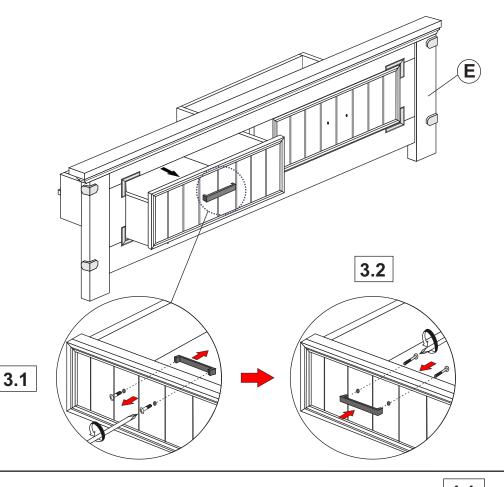

STEP 4

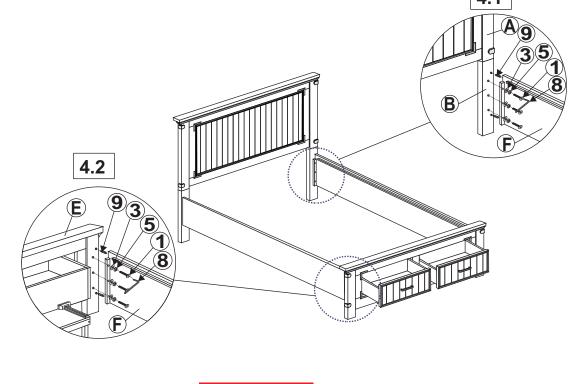

PAGE 5 OF 8


COASTERFURNITURE.COM


ITEM:205260KE (B1 - B3)


ASSEMBLY INSTRUCTIONS







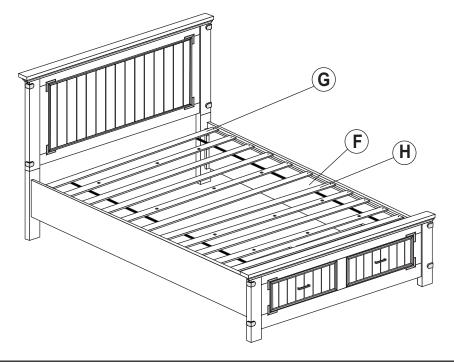


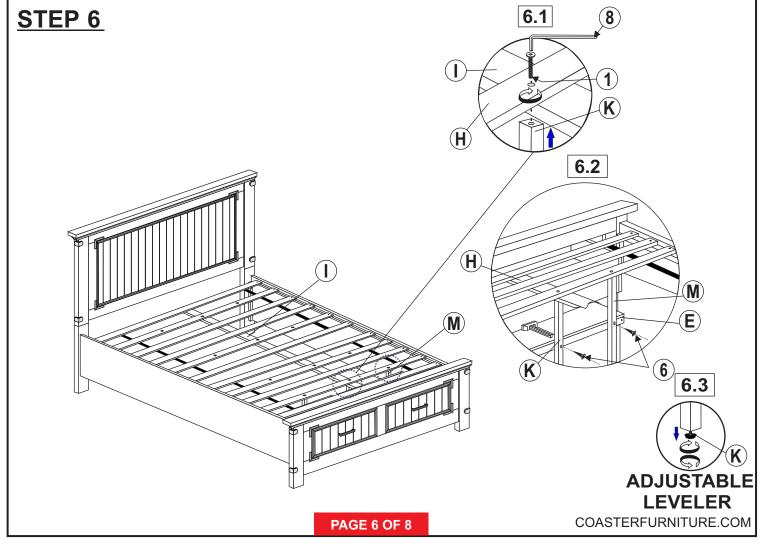

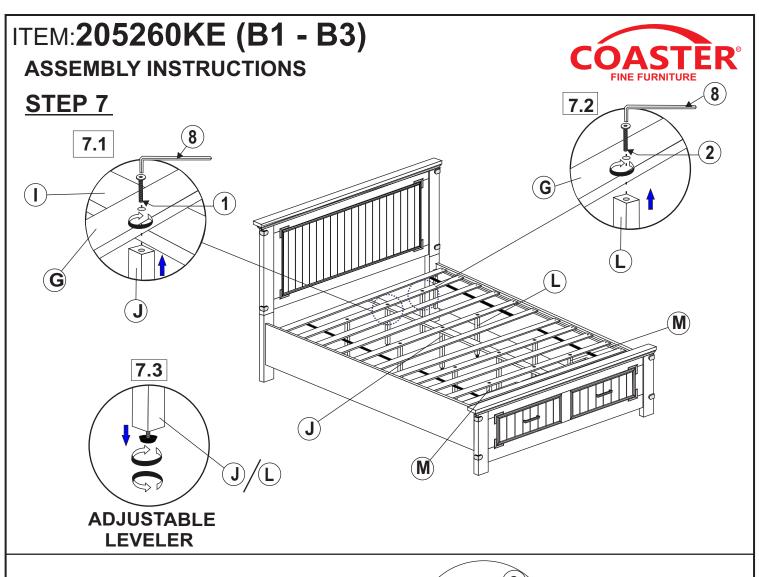

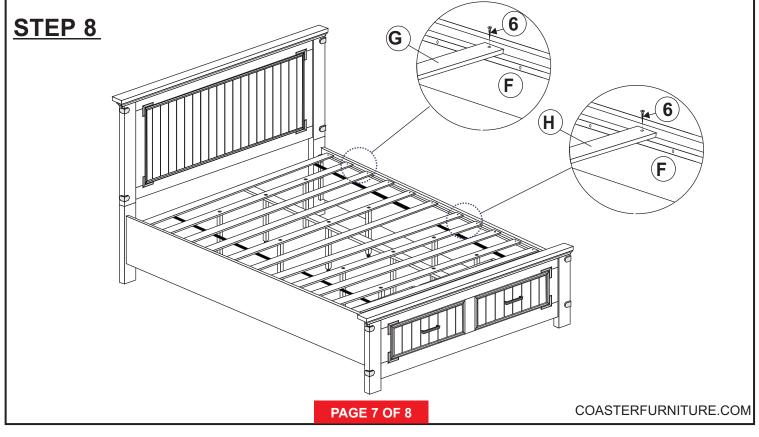


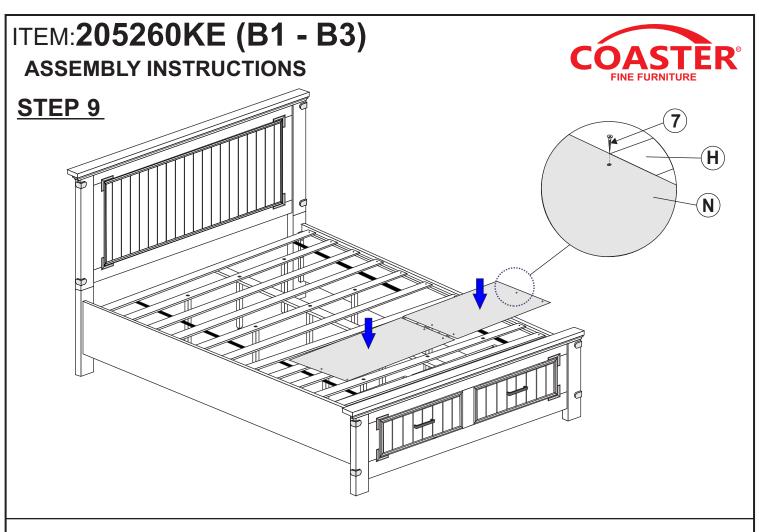

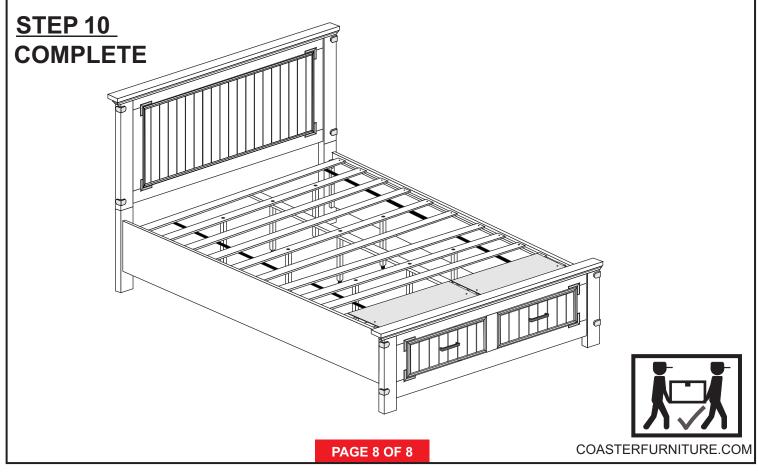

ITEM:205260KE (B1 - B3)



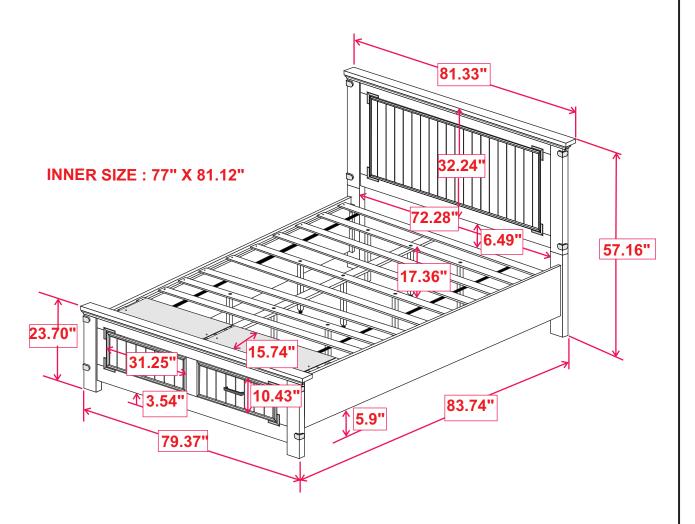

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM