


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

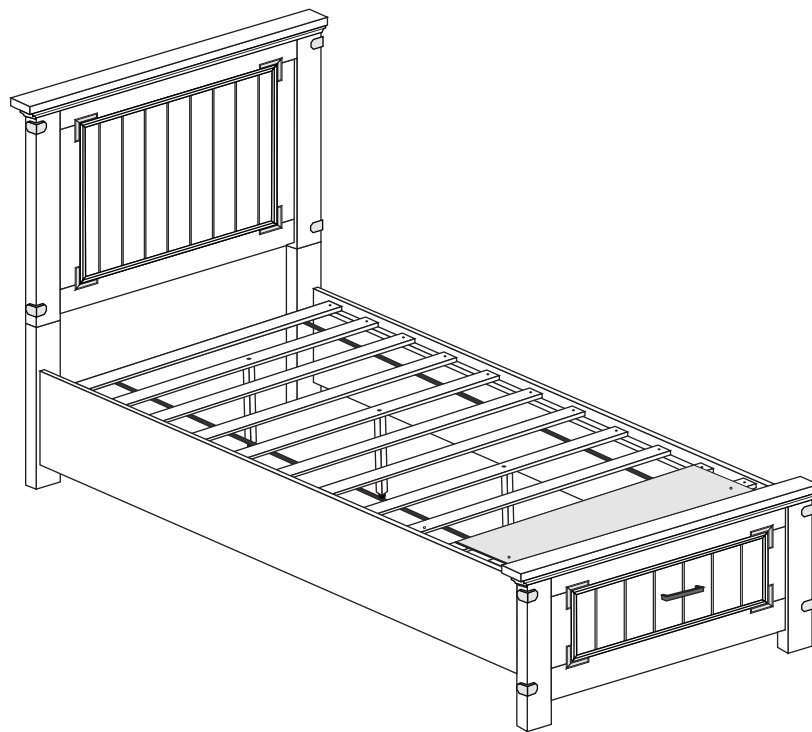

Fine Furniture for every stage of life

205260T (B1-B3)
Twin Storage Bed

REVISION 0:07/27/2016

REVISION 1:11/20/2018

REVISION 2:11/08/2019

COASTERFURNITURE.COM

ITEM: 205260T (B1 - B3)

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1 . Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly.
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2 . This product is for home use only and not intended for commercial establishments.

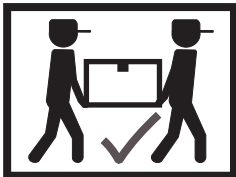

ASSEMBLY TIME

40 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A	HEADBOARD PANEL		1PC
B	RIGHT HEADBOARD LEG		1PC
C	LEFT HEADBOARD LEG		1PC
D	WOOD CLEAT		2PCS

B2 (BOX 2)

E	STORAGE FOOTBOARD		1PC
---	-------------------	--	-----

B3 (BOX 3)

F	BED RAIL		2PCS
G	HEADBOARD ROLL SLAT (6PCS)		1SET
H	FOOTBOARD ROLL SLAT (6PCS)		1SET
I	CENTER RAIL SUPPORT WITH LEVELER (WITHOUT HOLE)		3PCS
J	CENTER RAIL SUPPORT WITH LEVELER (WITH HOLE)		1PC
K	CONCEAL PANEL		1PC
HB	205260T (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC
E	205260T (B2) FROM BOX 2 STORAGE FOOTBOARD		1PC

ITEM:205260T (B1 - B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1 . Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly.
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.












WARNING!

- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2 . This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 205260T (B3)

1	LONG BOLT (M6 x 60mm - RBW)		12PCS
2	SHORT BOLT (M6 x 40mm - RBW)		16PCS
3	BIG FLAT WASHER (M6 x 19mm - RBW)		12PCS
4	SMALL FLAT WASHER (M6 x 13mm - RBW)		12PCS
5	LOCK WASHER (M6 x 13mm - RBW)		24PCS
6	LONG FLAT HEAD SCREW (M4 x 30mm - RBW)		25PCS
7	SHORT FLAT HEAD SCREW (M4 x 16mm - RBW)		4PCS
8	ALLEN WRENCH (M4 x 58mm- BLK)		1PC
9	WOOD DOWEL (Ø 10 x 30mm)		8PCS

NOTE :


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 205260T (B1 - B3)


ASSEMBLY INSTRUCTIONS



STEP 1

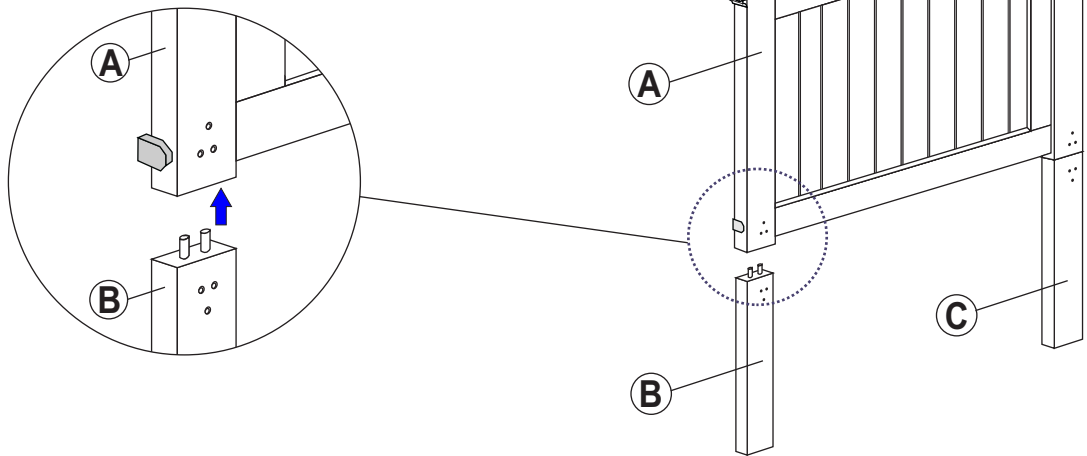

STEP 2

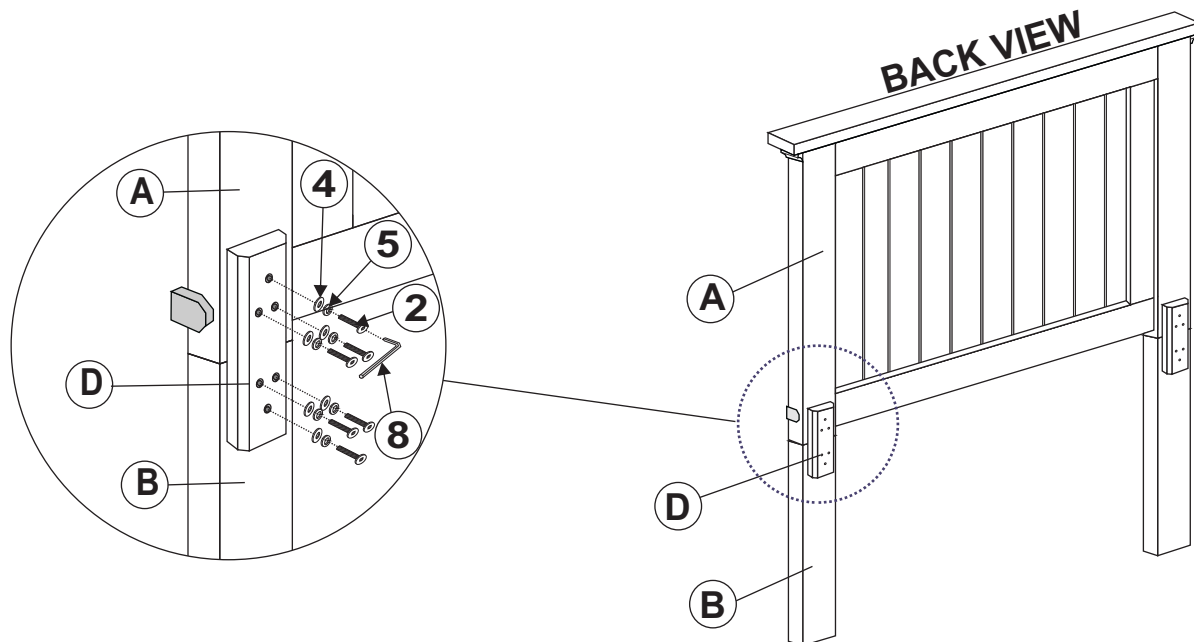


ITEM: 205260T (B1 - B3)


ASSEMBLY INSTRUCTIONS



STEP 3

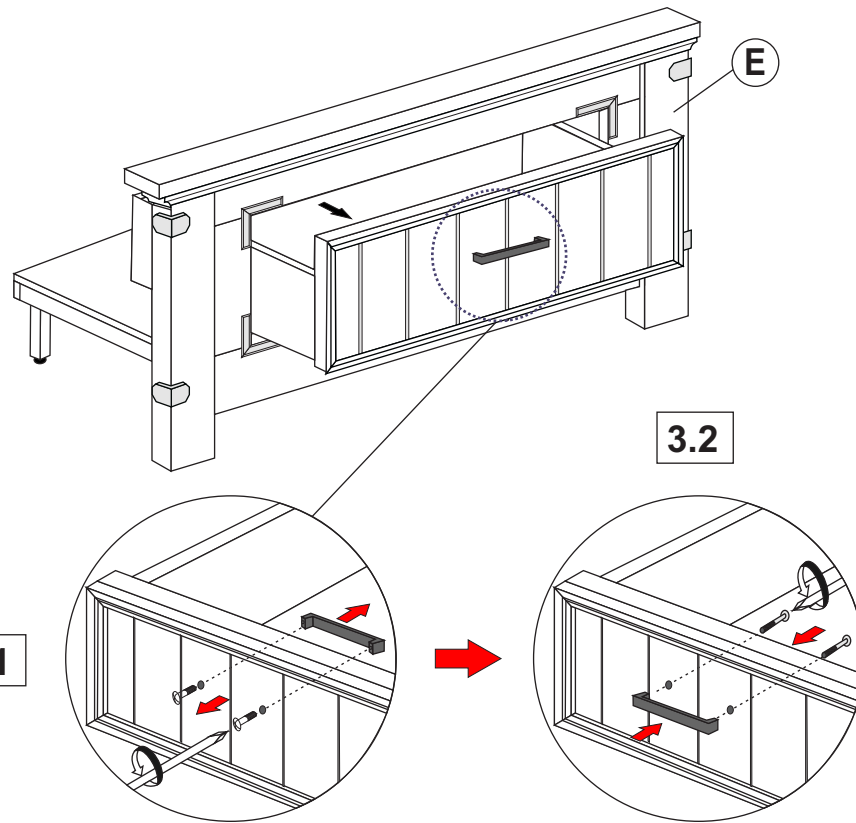

STEP 4

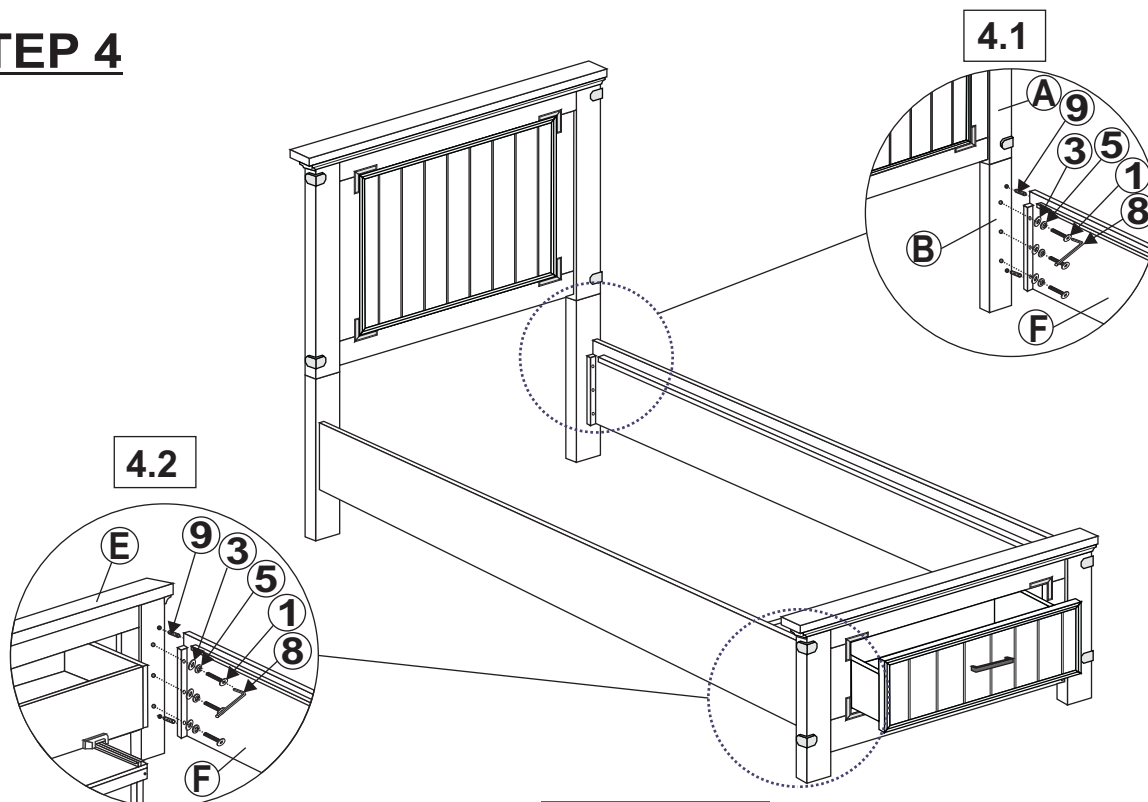


ITEM: 205260T (B1 - B3)


ASSEMBLY INSTRUCTIONS



STEP 5

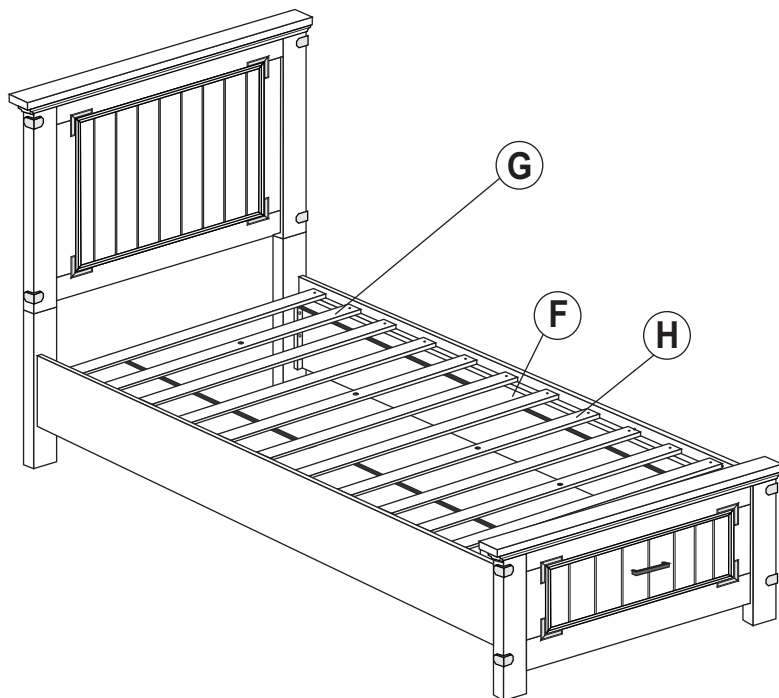

STEP 6

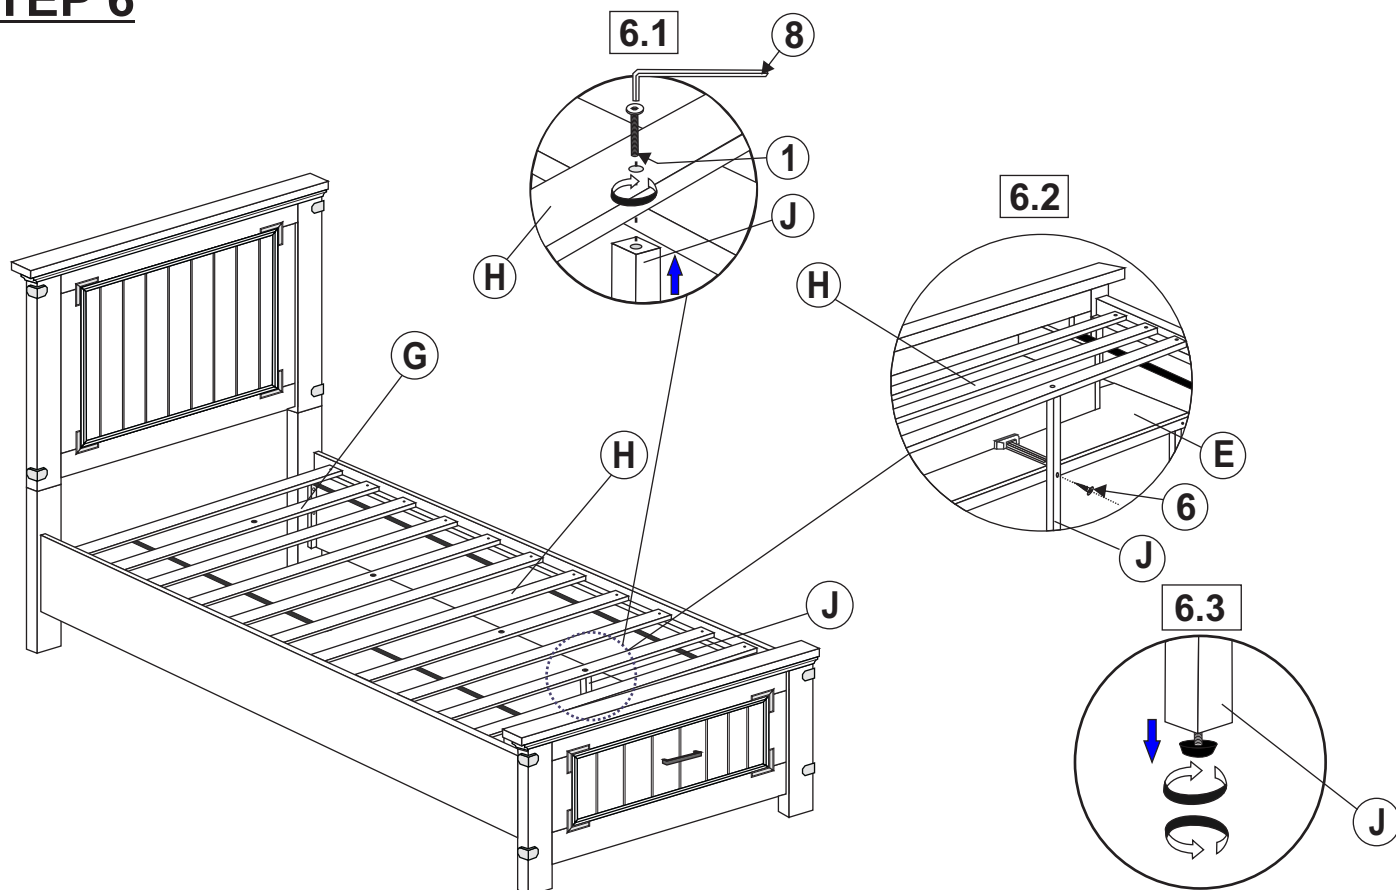


**ADJUSTABLE
LEVELER**

ITEM: 205260T (B1 - B3)

ASSEMBLY INSTRUCTIONS




STEP 7

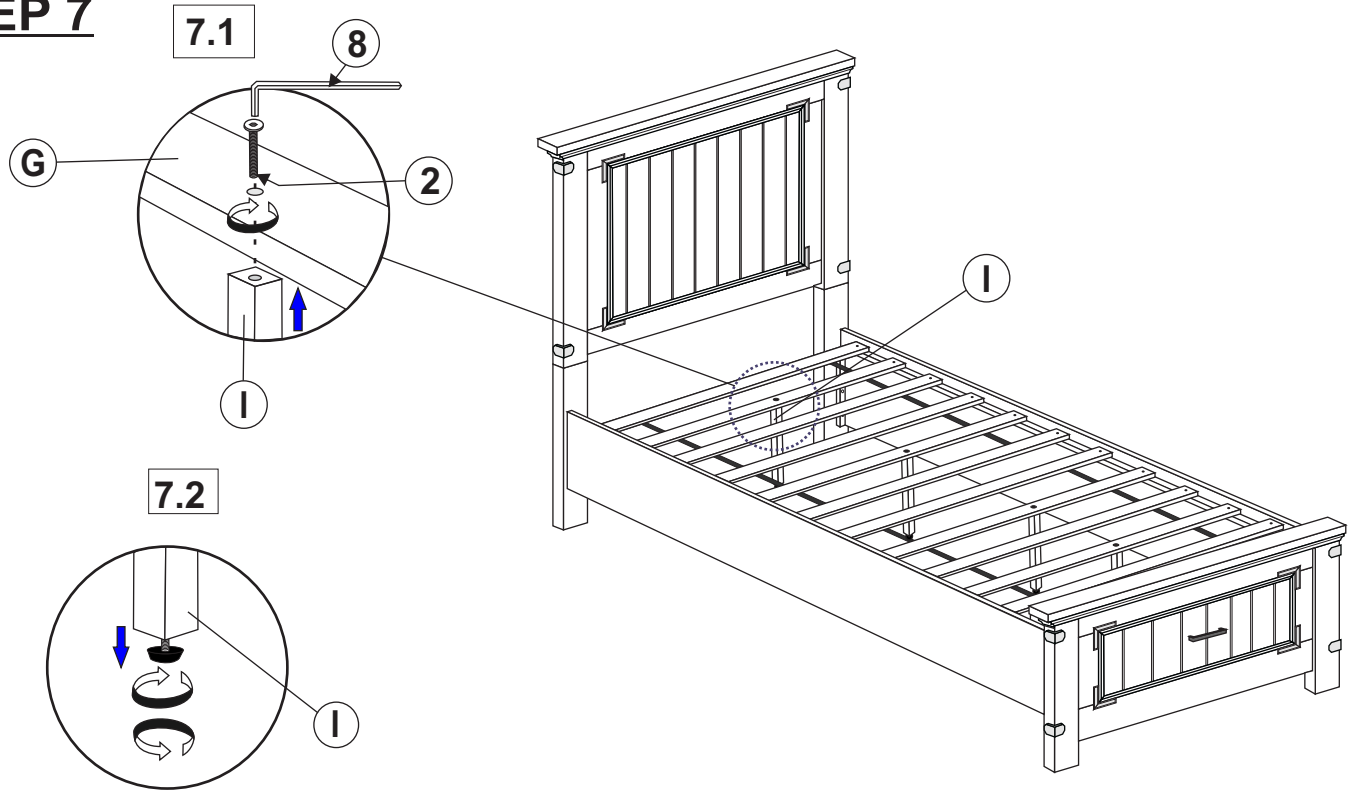

**ADJUSTABLE
LEVELER**


STEP 8

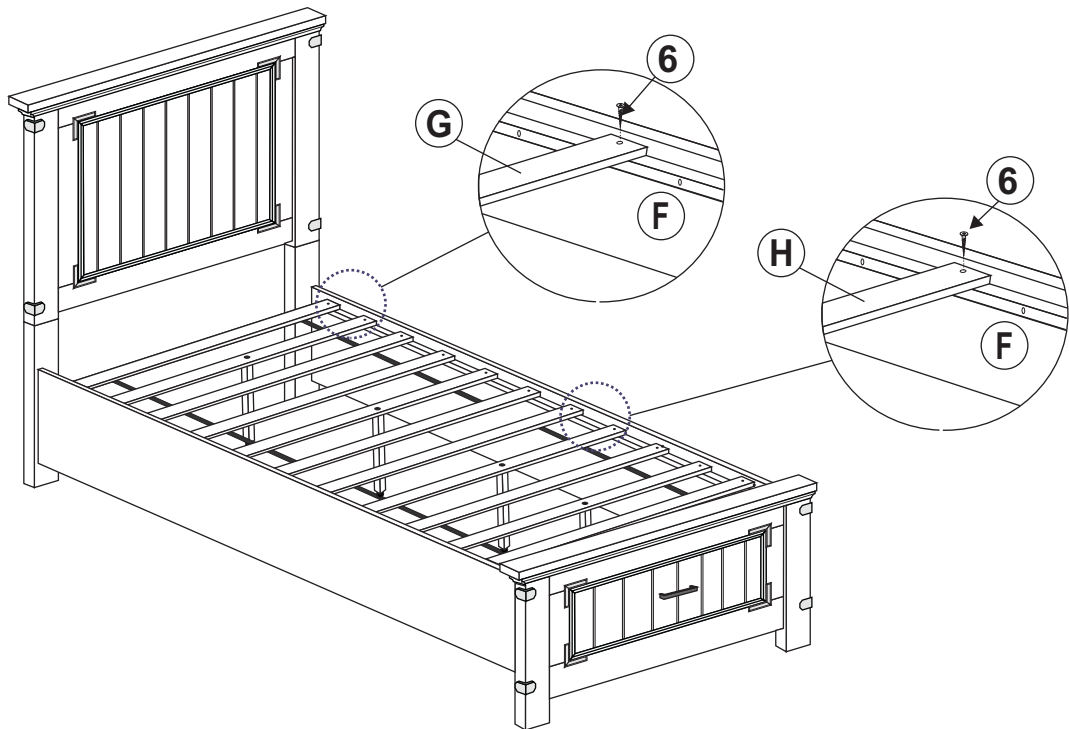



ITEM: 205260T (B1 - B3)

ASSEMBLY INSTRUCTIONS


STEP 9

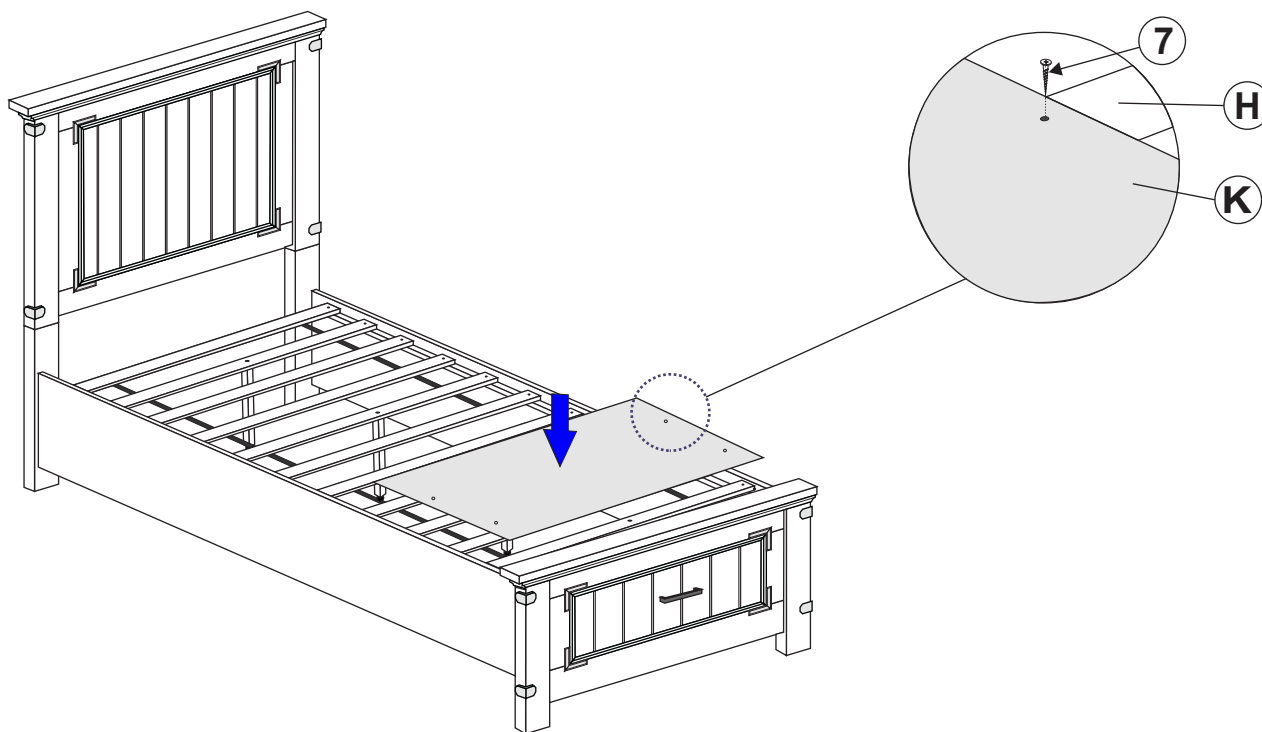

STEP 10
COMPLETE

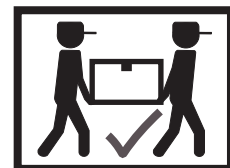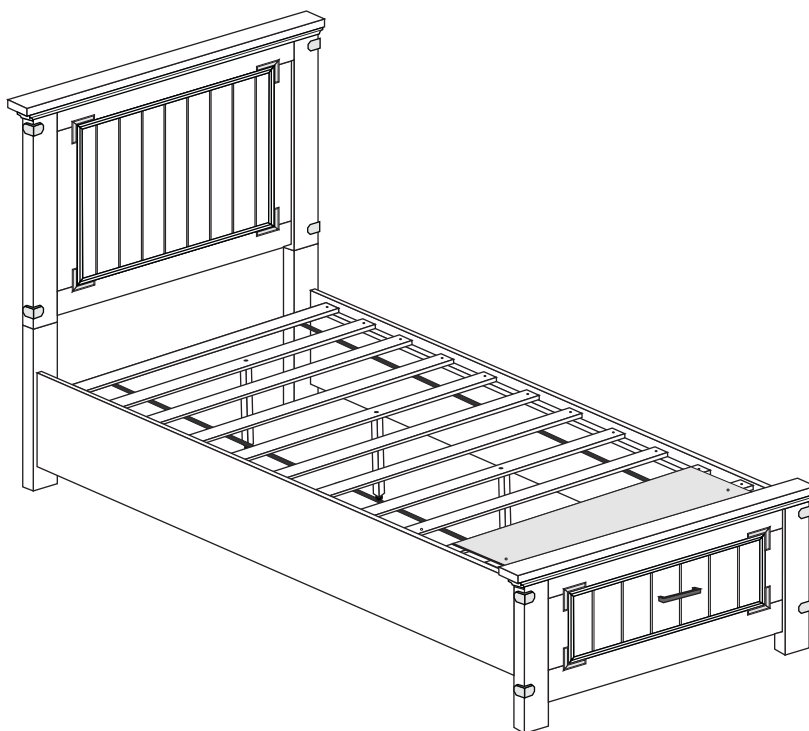

ITEM:205260T (B1 - B3)

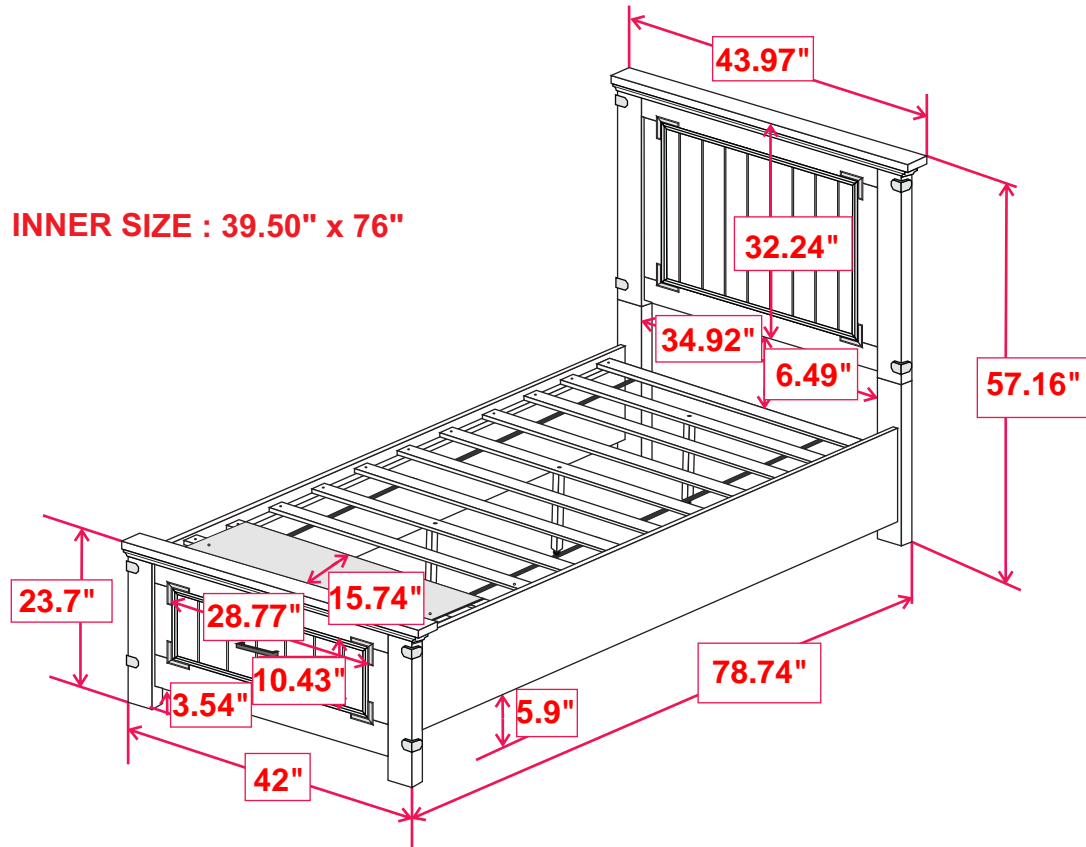

Note : Dimension tolerance $\pm 5\%$