


**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**

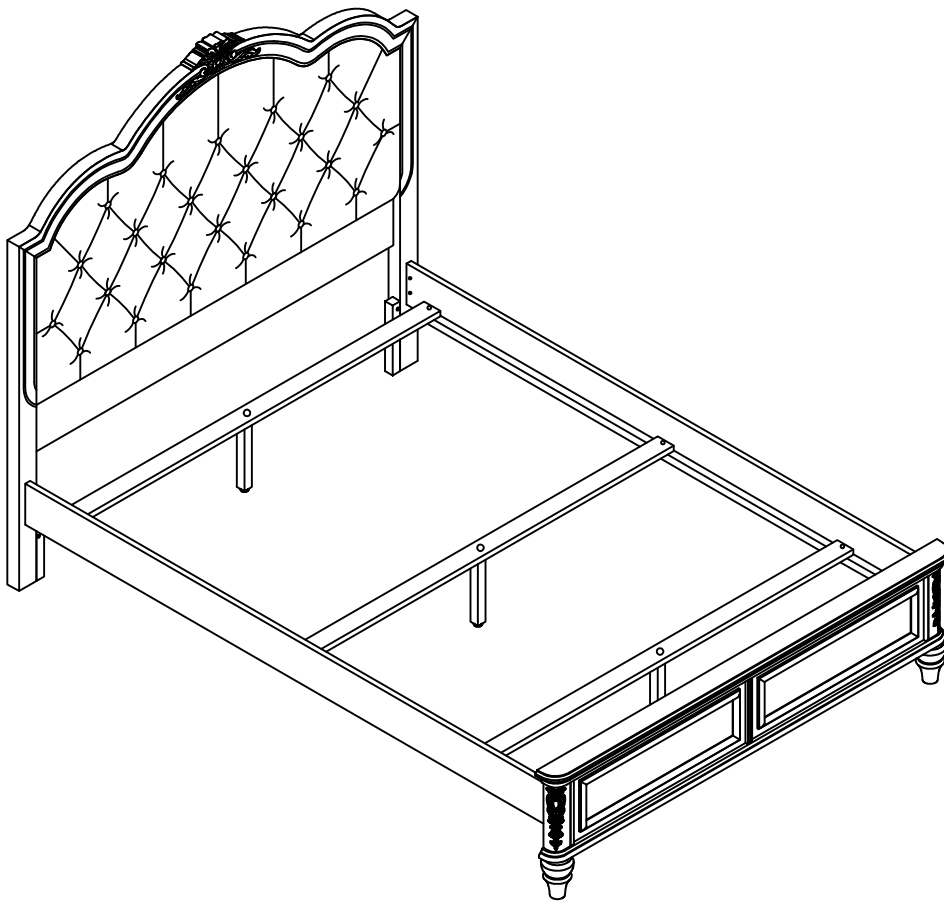

*Fine Furniture for every stage of life*

**400890F (B1-B3)**  
***Full Bed***

# ITEM: 400890F (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION

### B1 ( BOX 1 )


AN HEADBOARD

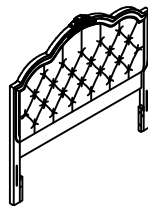

1PC

### B2 ( BOX 2 )

BN FOOTBOARD PANEL

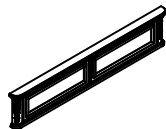

1PC


CN BUN FOOT



2PCS


### B3 ( BOX 3 )

DN BED RAIL

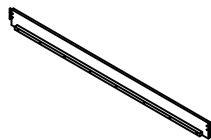


2PCS

EN BED SLAT




3PCS

FN BED SLAT SUPPORT WITH LEVELER




3PCS

AN 400890F (B1) FROM BOX 1 HEADBOARD

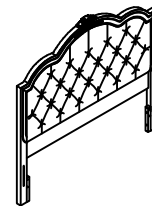

1PC

FBN 400890F (B2) FROM BOX 2 FOOTBOARD COMPLETE

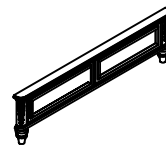

1PC

## HARDWARE IDENTIFICATION

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 400890F (B3)

1 FLAT HEAD SCREW (Ø4 x 30mm - RBW)  6PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **400890F (B1-B3)**

**ASSEMBLY INSTRUCTIONS**

**STEP 1**

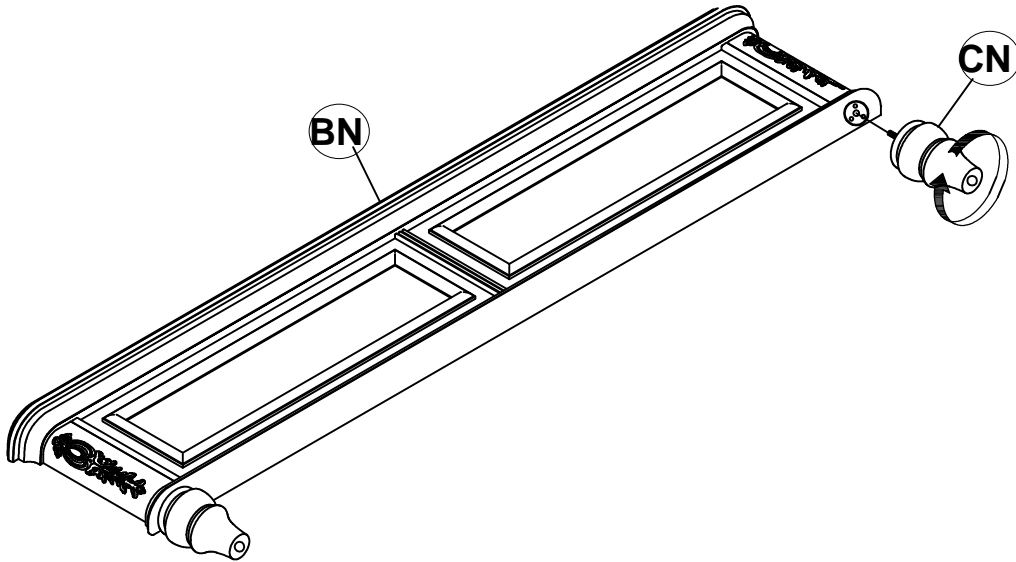


**STEP 2**

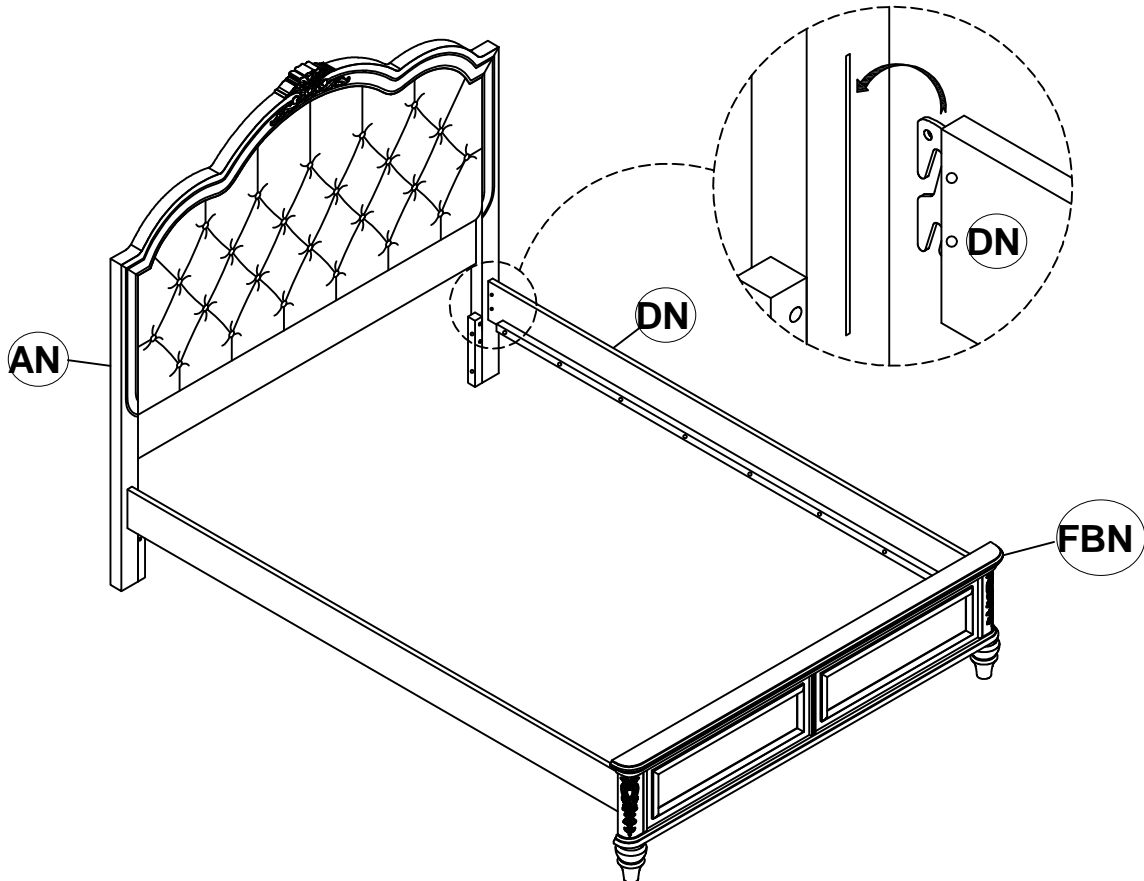


ITEM: **400890F (B1-B3)**

**ASSEMBLY INSTRUCTIONS**

**STEP 3**

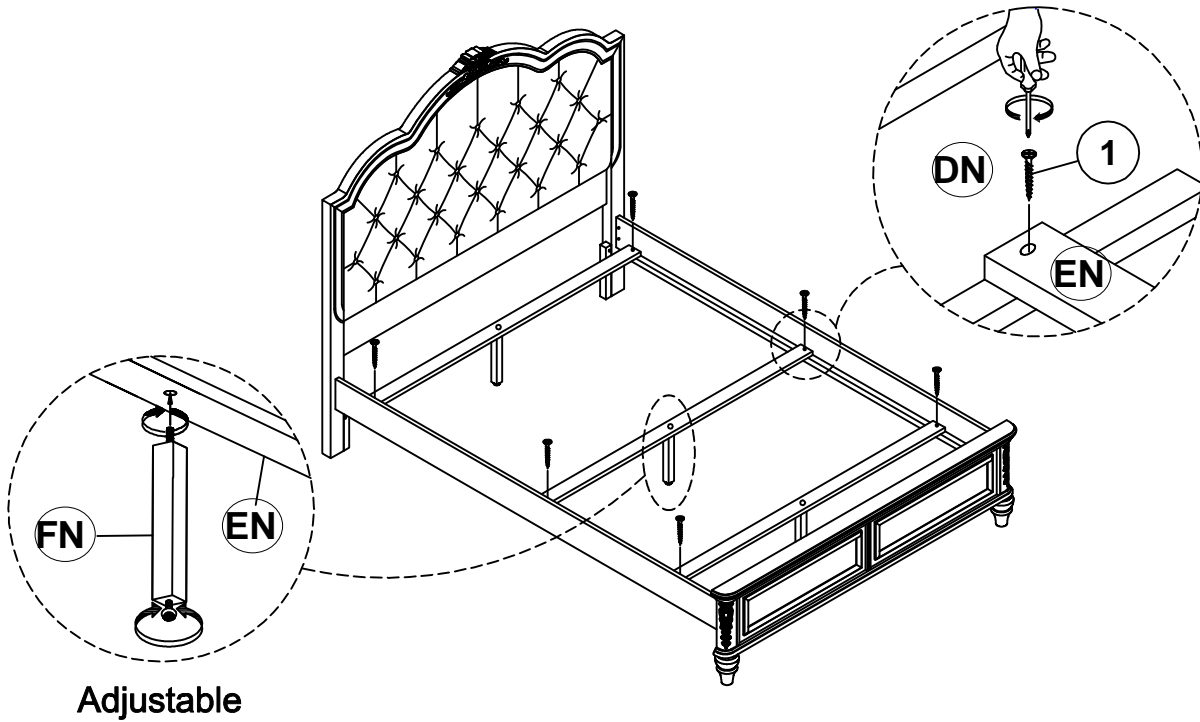


**STEP 4**  
**COMPLETE**

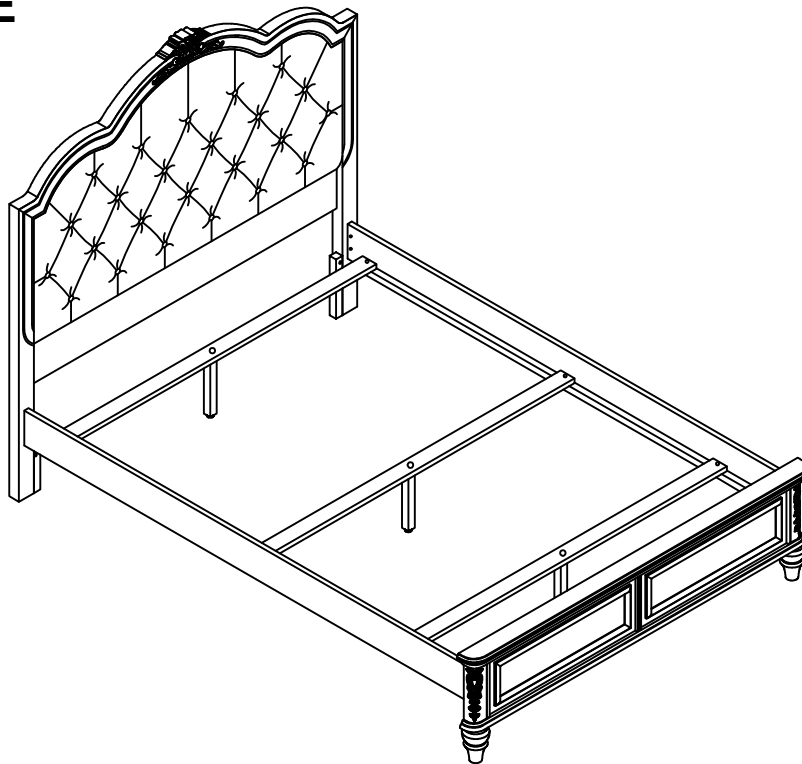

# ITEM: 400890F (B1-B3)

**INNER SIZE : 76" X 55"**

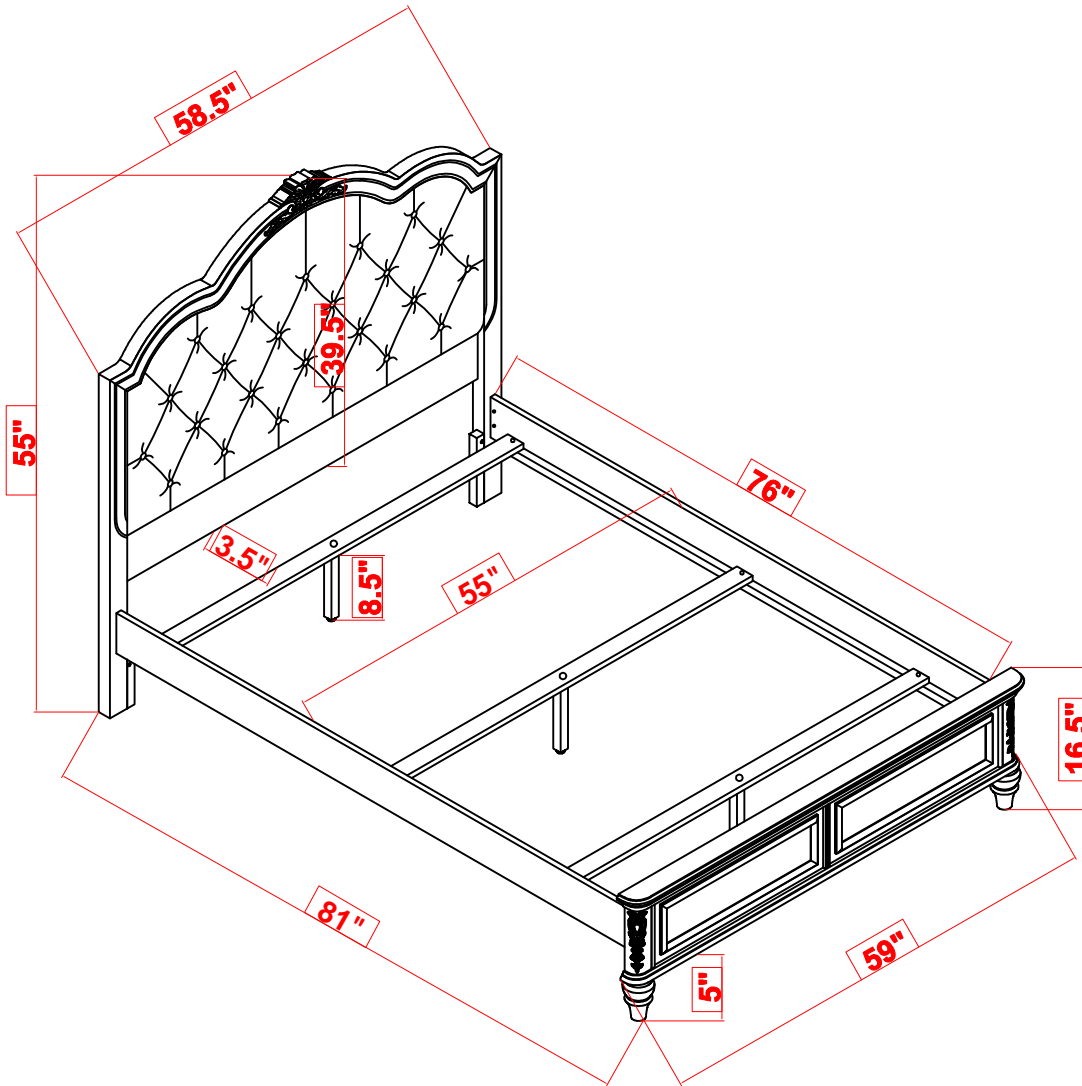

**Note :** Dimension tolerance  $\pm 5\%$