


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

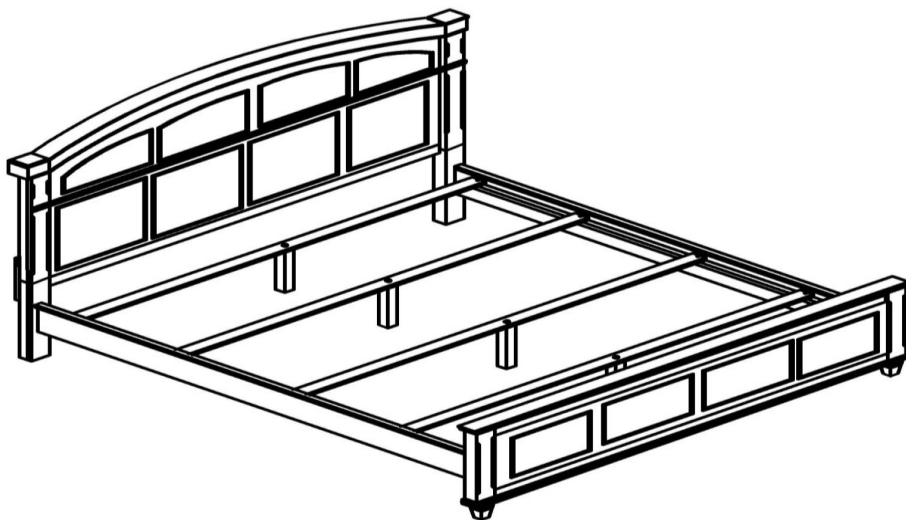

Fine Furniture for every stage of life

222871Q (B1-B3)
Queen Bed

ITEM: 222871Q (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A	HEADBOARD PANEL		1PC
B	LEFT HEADBOARD LEG		1PC
C	RIGHT HEADBOARD LEG		1PC

B1 (BOX 2)

D	FOOTBOARD		1PC
---	-----------	--	-----

B1 (BOX 3)

E	BED RAIL		2PCS
F	BED SLAT SUPPORT WITH LEVELER		4PCS
G	BED SLAT		4PCS
HB	222871Q (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC
D	222871Q (B2) FROM BOX 2 FOOTBOARD		1PC

ITEM: 222871Q (B1-B3)



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.








WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 222871Q(B3)


1	BOLT (M8 X 40mm - RBW)		10PCS
2	LOCK WASHER (M8 - RBW)		10PCS
3	FLAT WASHER (M8 - RBW)		10PCS
4	ALLEN WRENCH (M5 - BLK)		1PC
5	FLAT HEAD SCREW (CSK M4 X 30mm - BLK)		8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

STEP 1

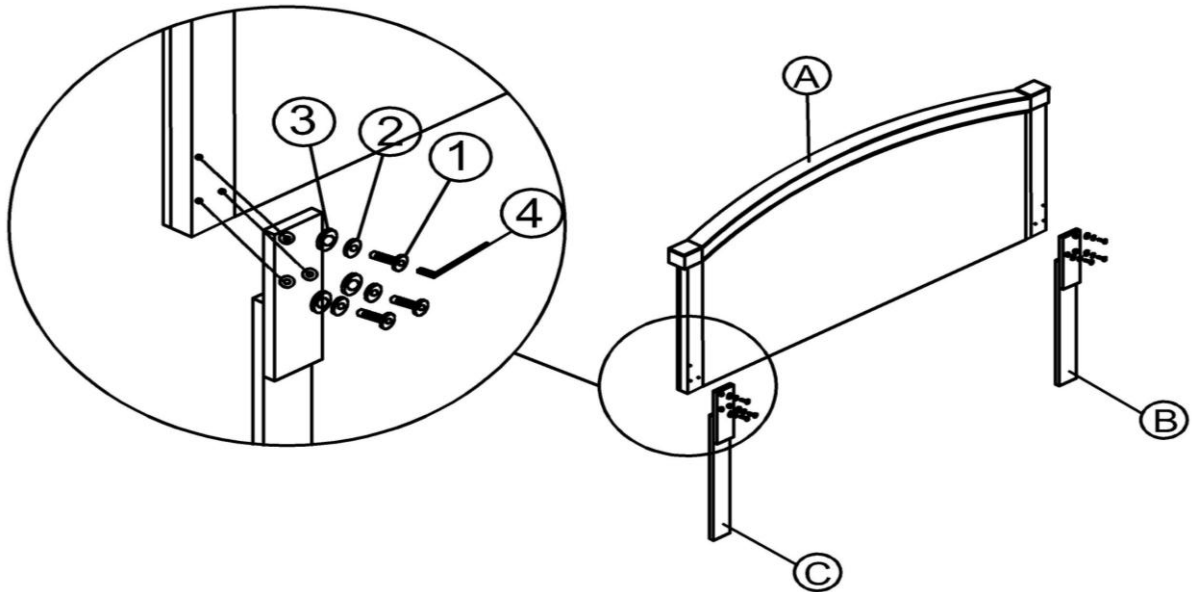

STEP 2

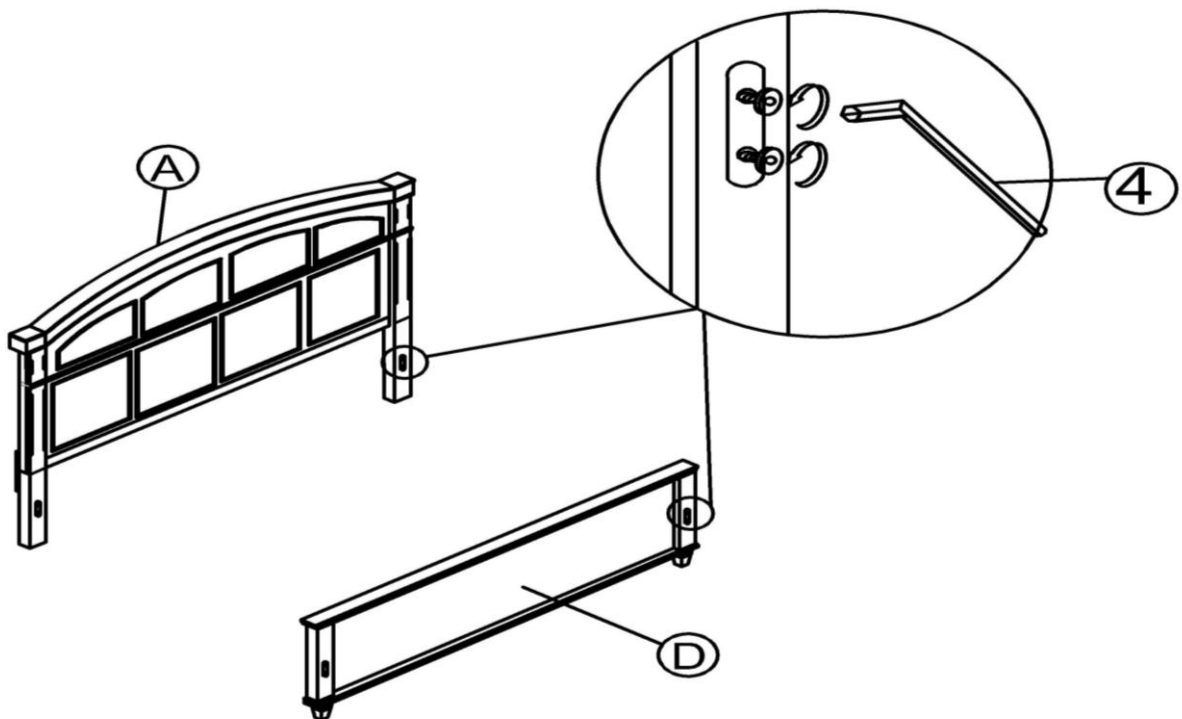


ITEM: **222871Q (B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 3

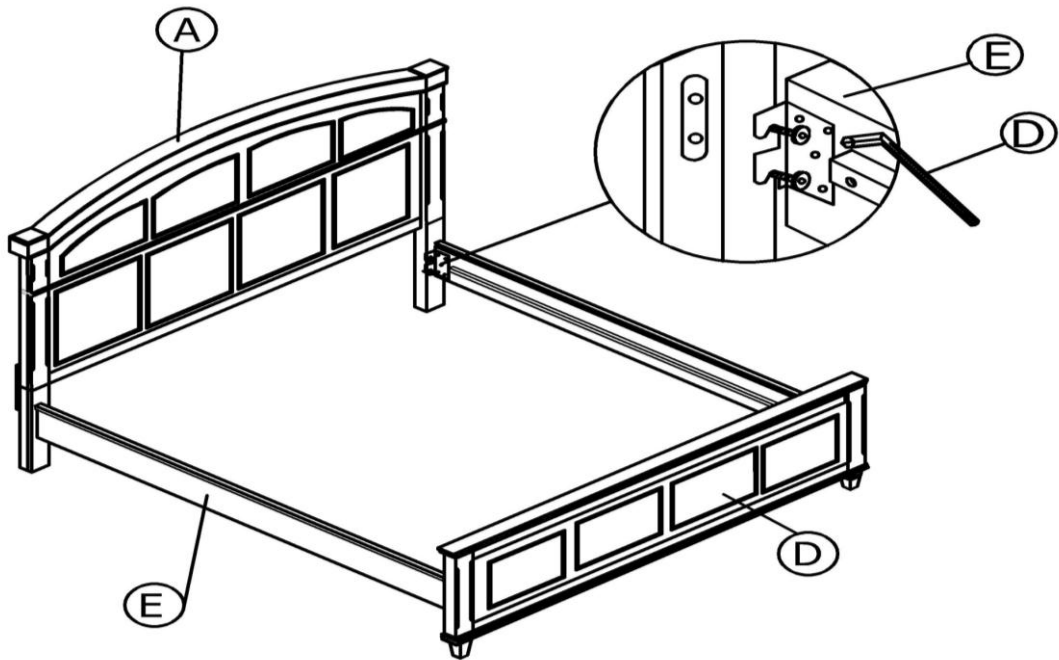

STEP 4

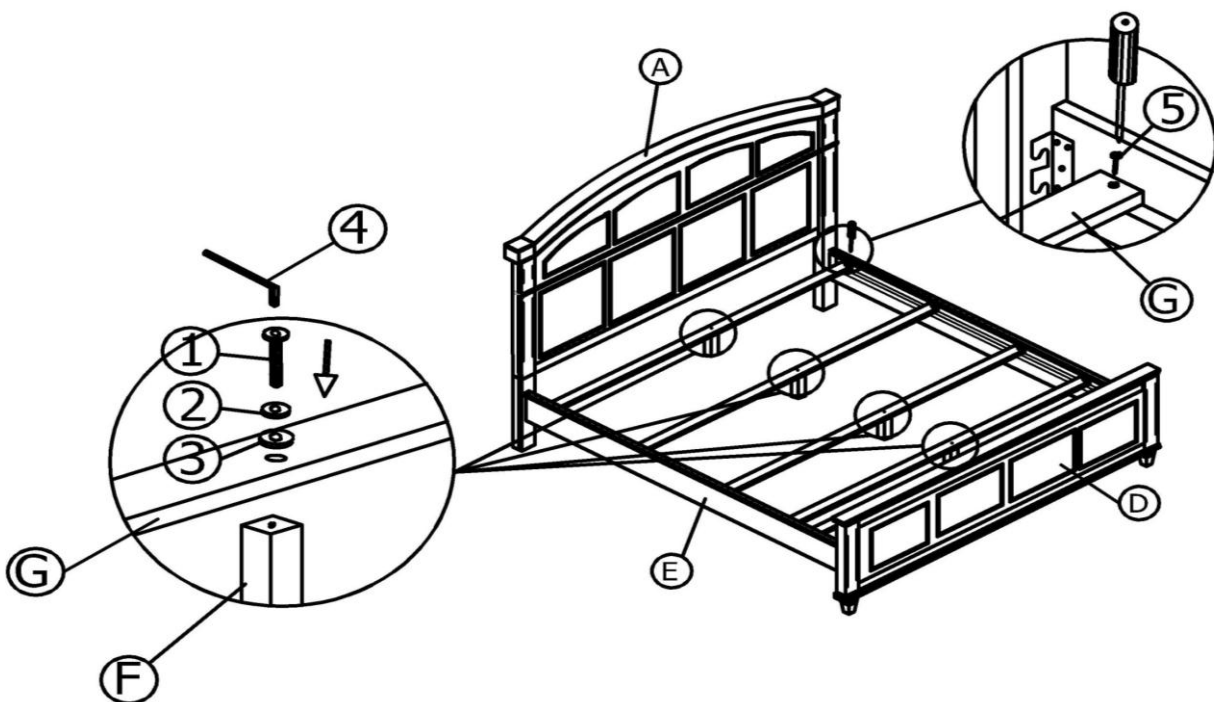


ITEM: **222871Q (B1-B3)**



ASSEMBLY INSTRUCTIONS


STEP 5

COMPLETE

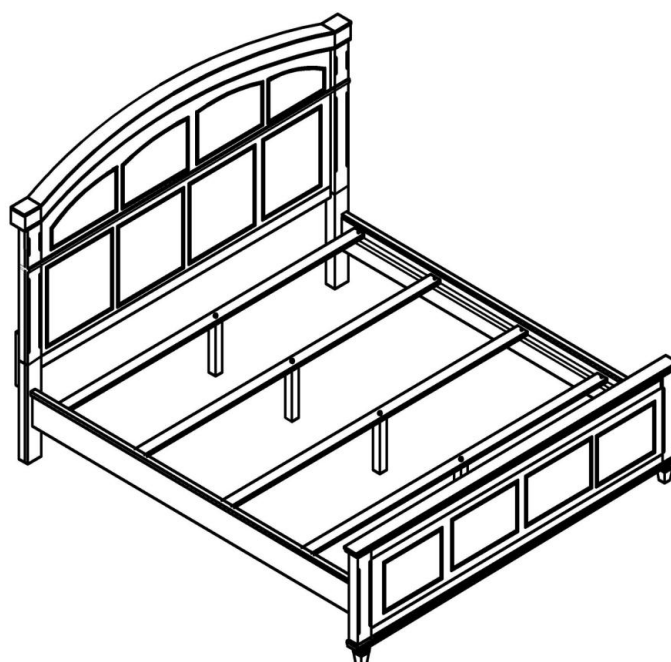

ITEM: 222871Q (B1-B3)

INNER SIZE: 61" X 81"

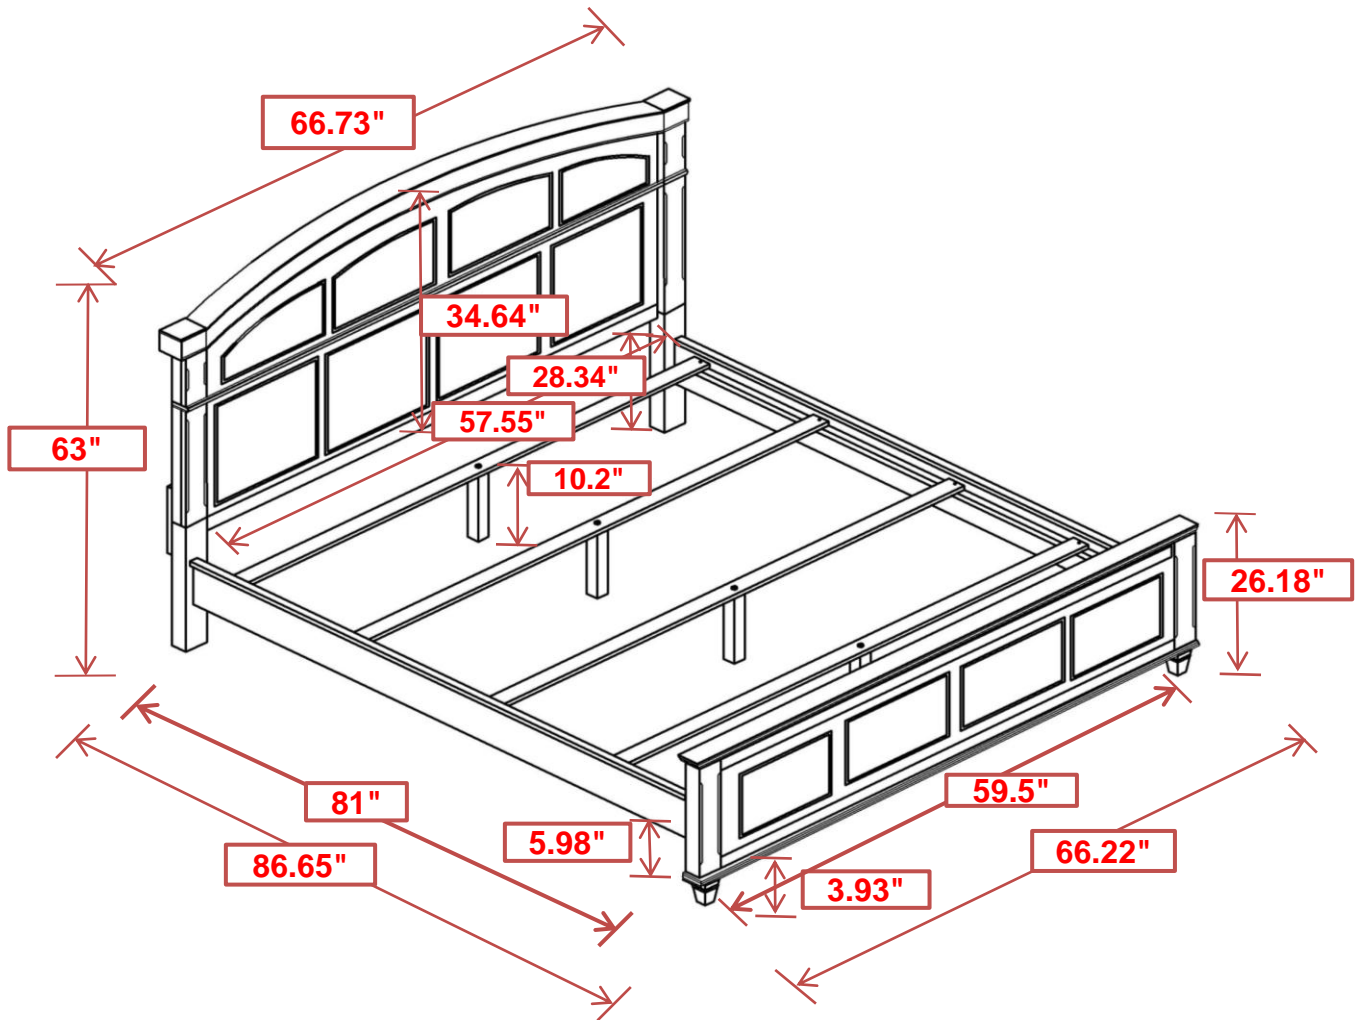

Note : Dimension tolerance $\pm 5\%$