


ASSEMBLY INSTRUCTIONS

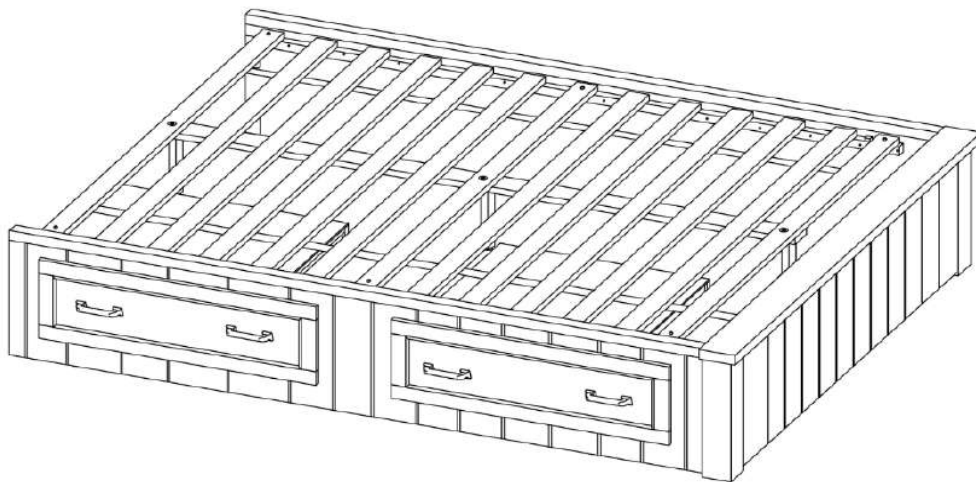

Fine Furniture for every stage of life

400931F(B1-B3) Full Storage Bed

REVISION 0 : 10/20/2016
REVISION 1 : 03/10/2020

ITEM: 400931F (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME


30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A

FOOTBOARD



1PC

B2 (BOX 2)

B

ROLL SLAT (13PCS)



1SET

C

CENTER RAIL



1PC

D

BED SLAT SUPPORT
WITH LEVELER



3PCS

E

RIGHT BED RAIL



1PC

F

LEFT BED RAIL




1PC

B3 (BOX 3)

G

DRAWER

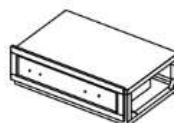

2PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 400931F (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2 (BOX2) HARDWARE PACK IS LOCATED IN 400931F(B2)

1	BOLT (Ø1/4" x 40mm - RBW)		8PCS
2	FLAT WASHER (Ø1/4" x 22D x 2mm - RBW)		8PCS
3	LOCK WASHER (Ø1/4" x 10D x 1.1mm - RBW)		8PCS
4	FLAT HEAD SCREW (Ø8 x 25mm)		6PCs
5	ALLEN WRENCH (4mm - RBW)		1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **400931F (B1-B3)**




ASSEMBLY INSTRUCTIONS
STEP 1

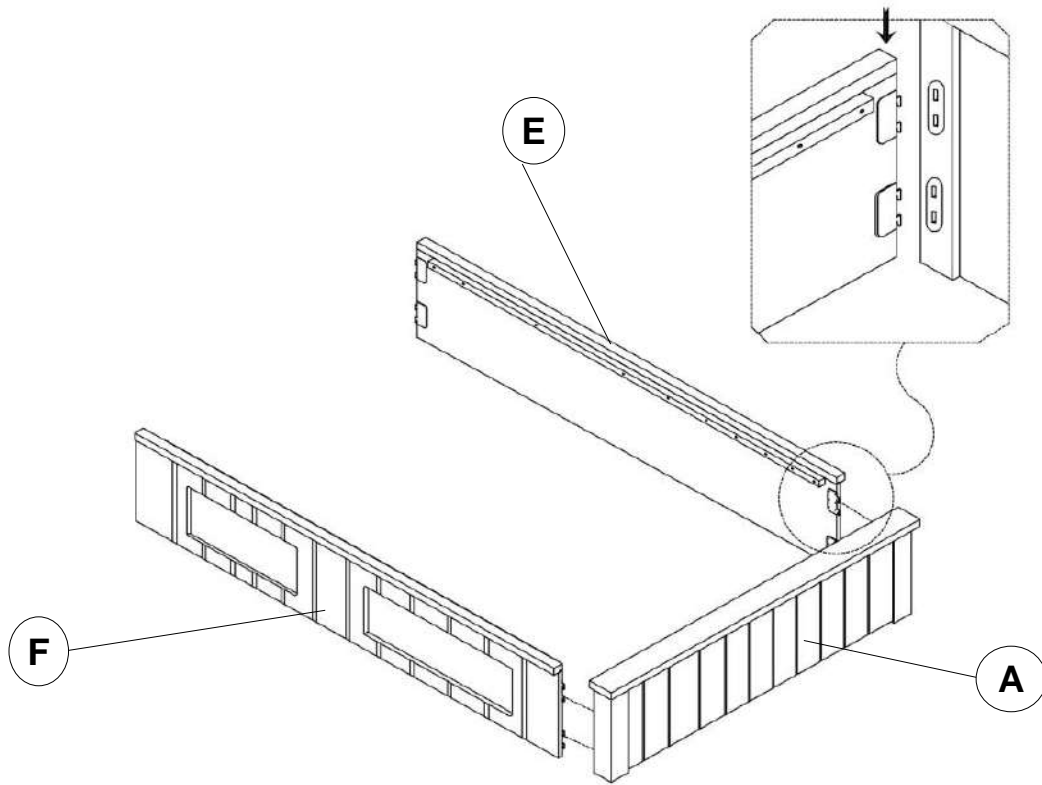


STEP 2

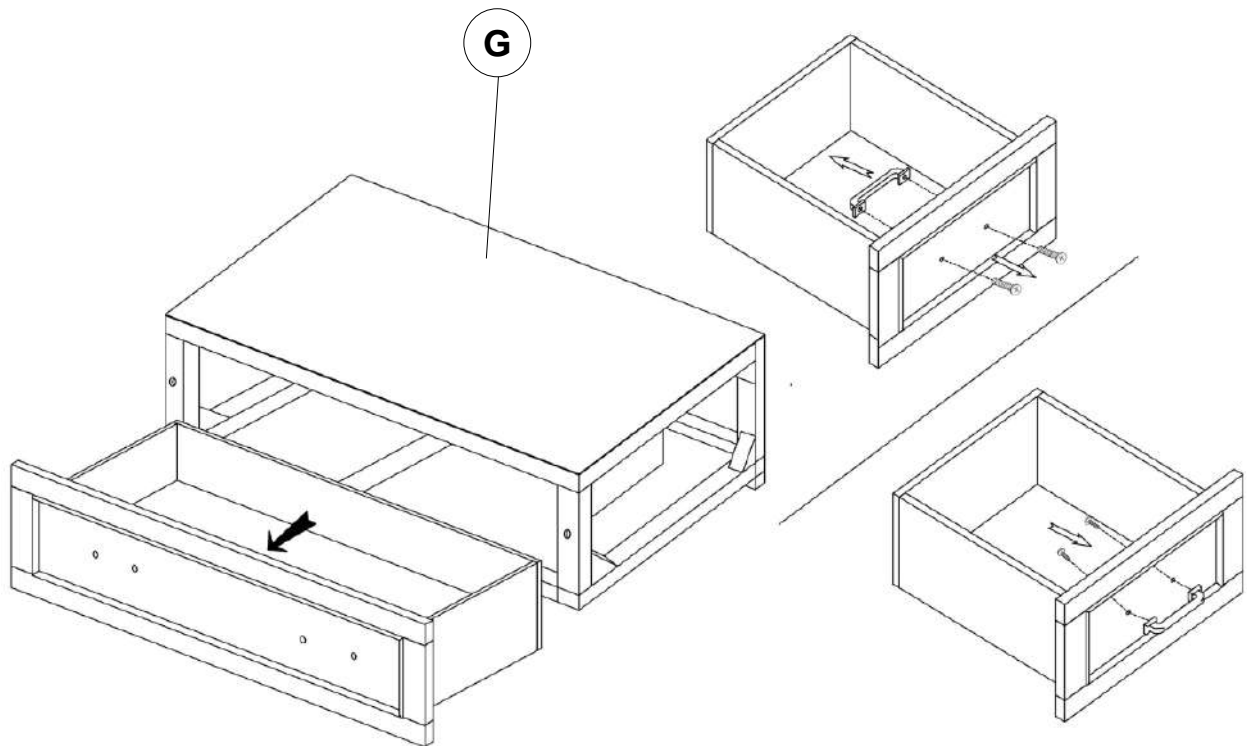

STEP 3

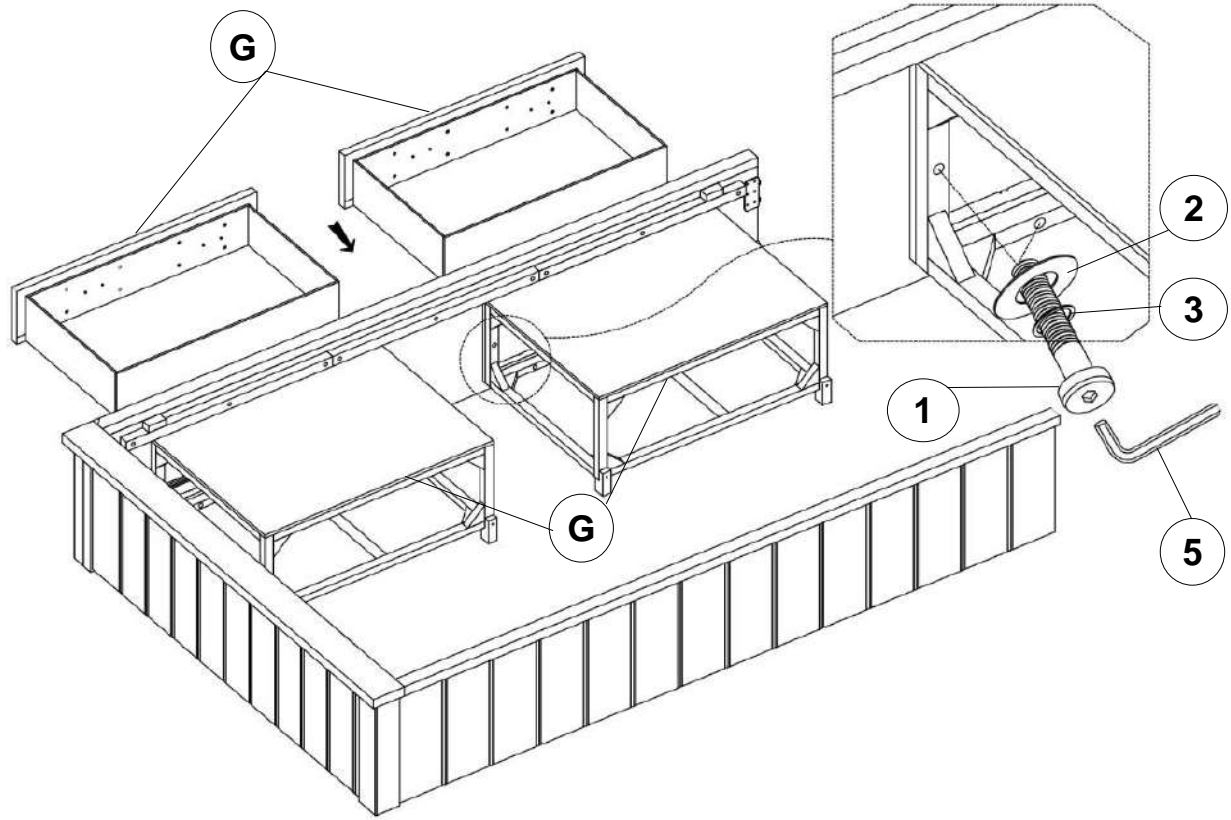


STEP 4

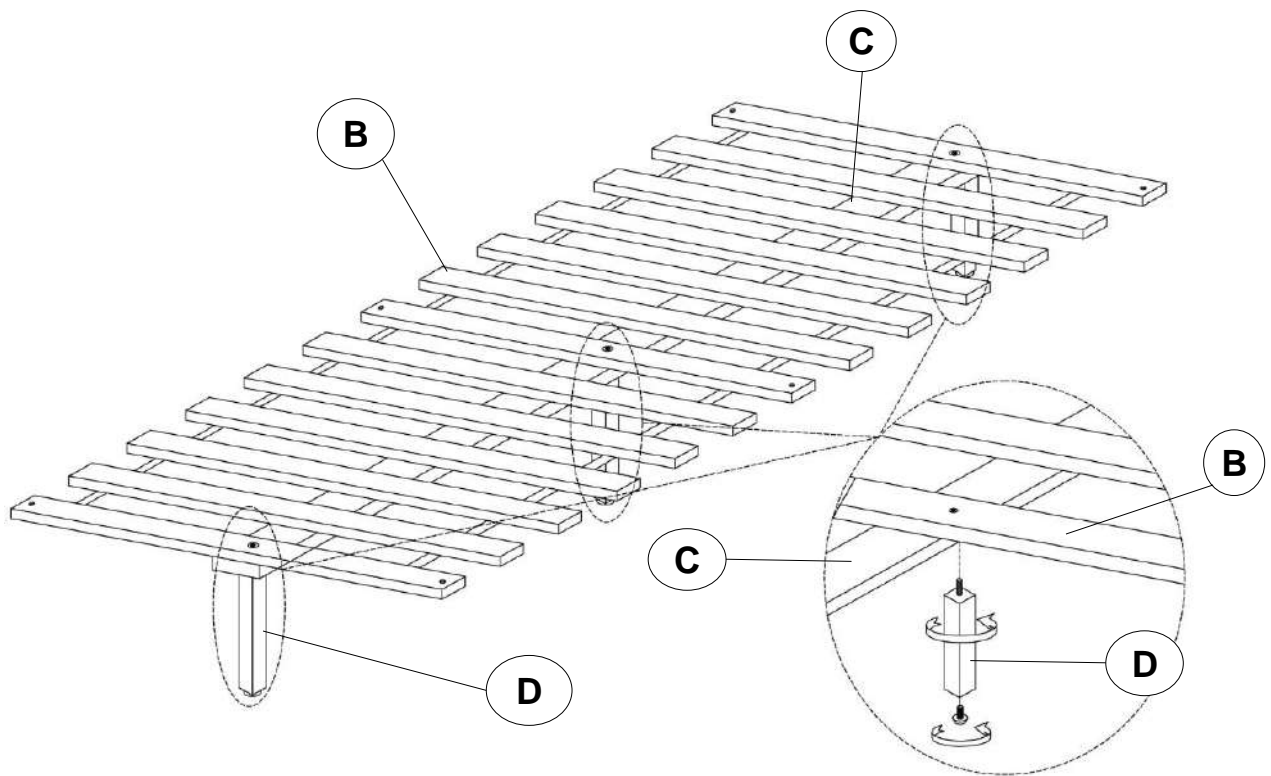


ITEM: **400931F (B1-B3)**



STEP 5

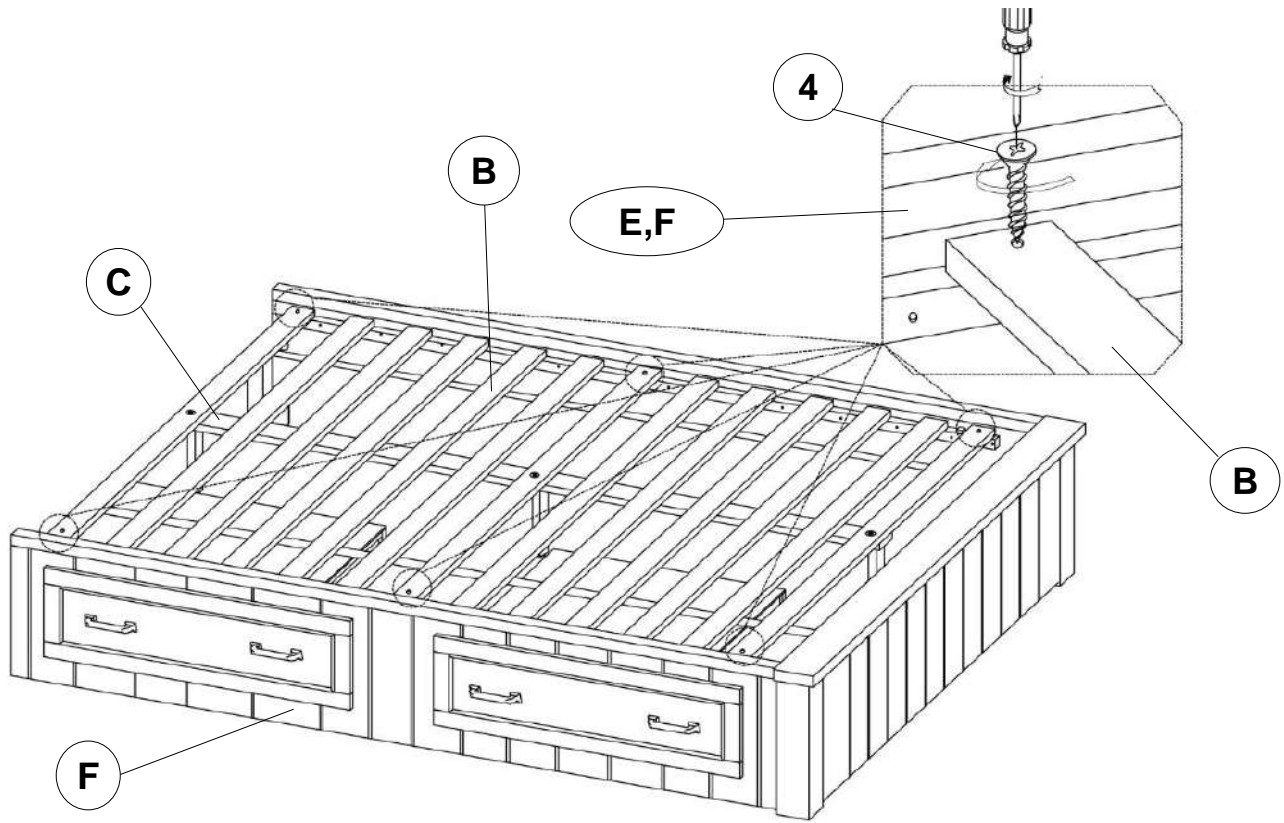


STEP 6
COMPLETE

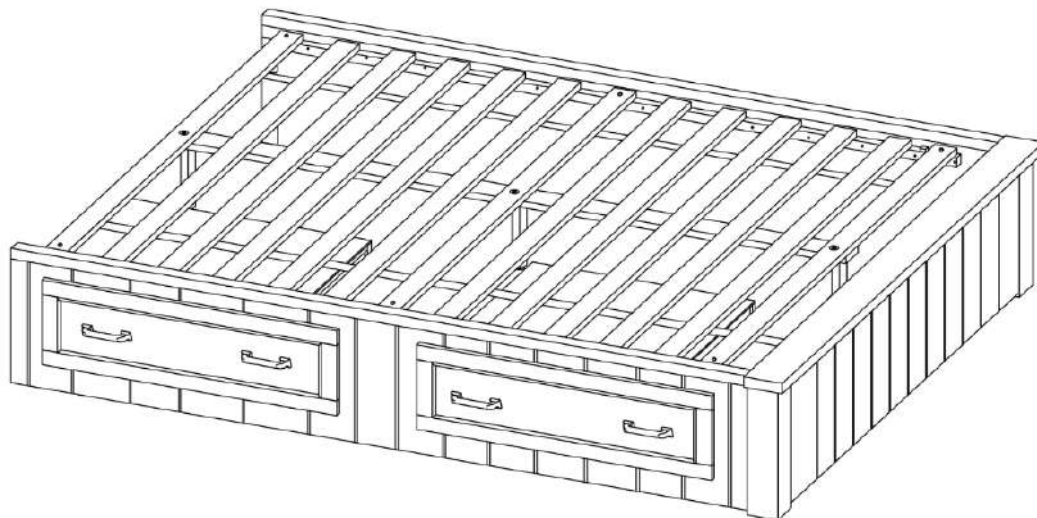

ITEM: **400931F (B1-B3)**



INNER SIZE OF DRAWER : 17" x 23" x 6"
INNER SIZE OF BED : 74" x 53"

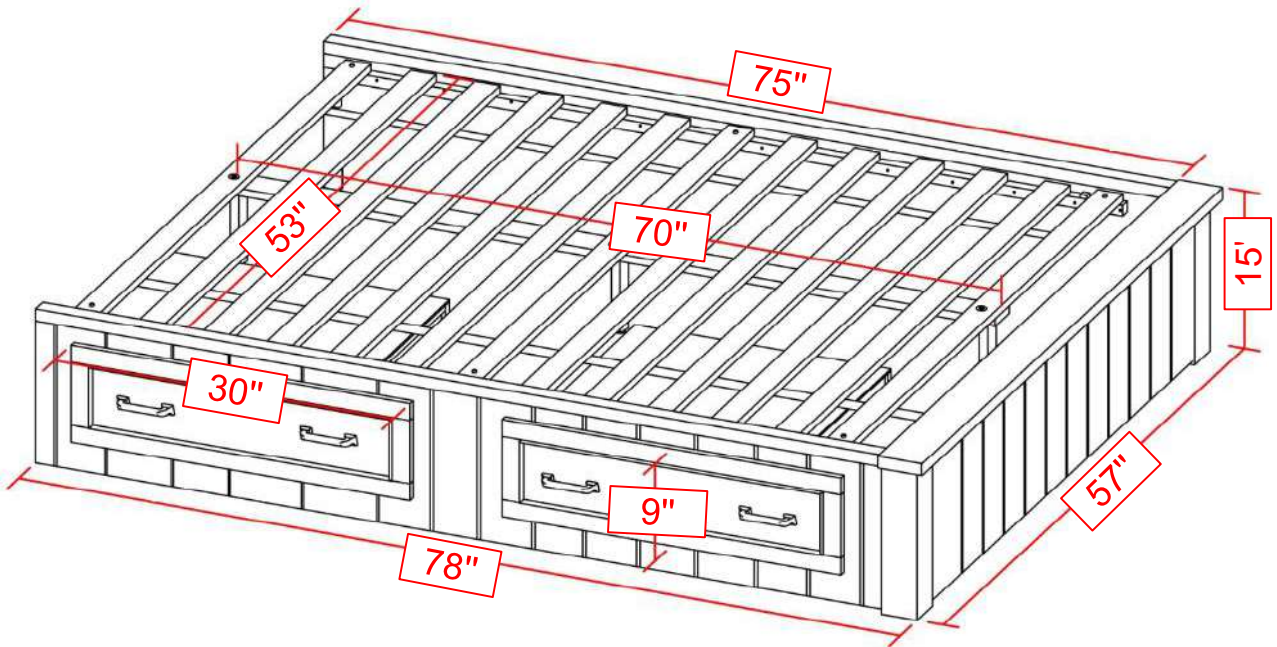

Note : Dimension tolerance $\pm 5\%$