


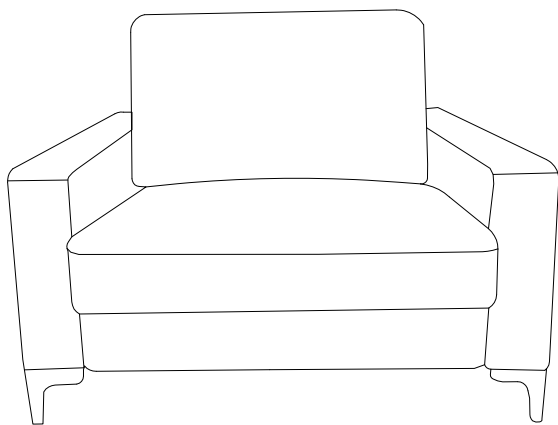




Thank you for purchasing the **MODWAY CHAIR** !

Before you start, here is some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the chair, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe and environmentally friendly way.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all fitting out of reach of children.



Hardware:

A		Bolt M8 x35mm	x8
B		Flat Washer M8	x8
C		Screw M4x25mm	x8
D		Allen Wrench M5	x1
		Phillips Head Screwdriver (Not included)	

Components:

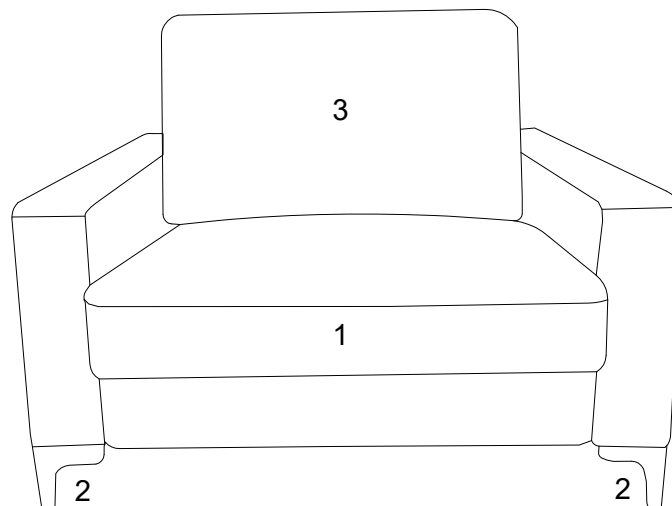

1 Chair Body x1	2 Chair Leg x4	3 Back Cushion x1
-----------------	----------------	-------------------

STEP 1:

Put **Chair Body (1)** upside down on a carpeted or padded surface.


Place 1 piece of **Chair Leg (2)** to the bottom of **Chair Body (1)** as shown.






Insert 2 pieces of **Bolts (A)** with 2 pieces of **Flat Washers (B)** into the pre-drilled holes on **Chair Body (1)** through the pre-drilled holes on **Chair Leg (2)**.

Insert 2 pieces of **Screws (C)** into the bottom of **Chair Body (1)** through the pre-drilled holes on **Chair Leg (2)**.

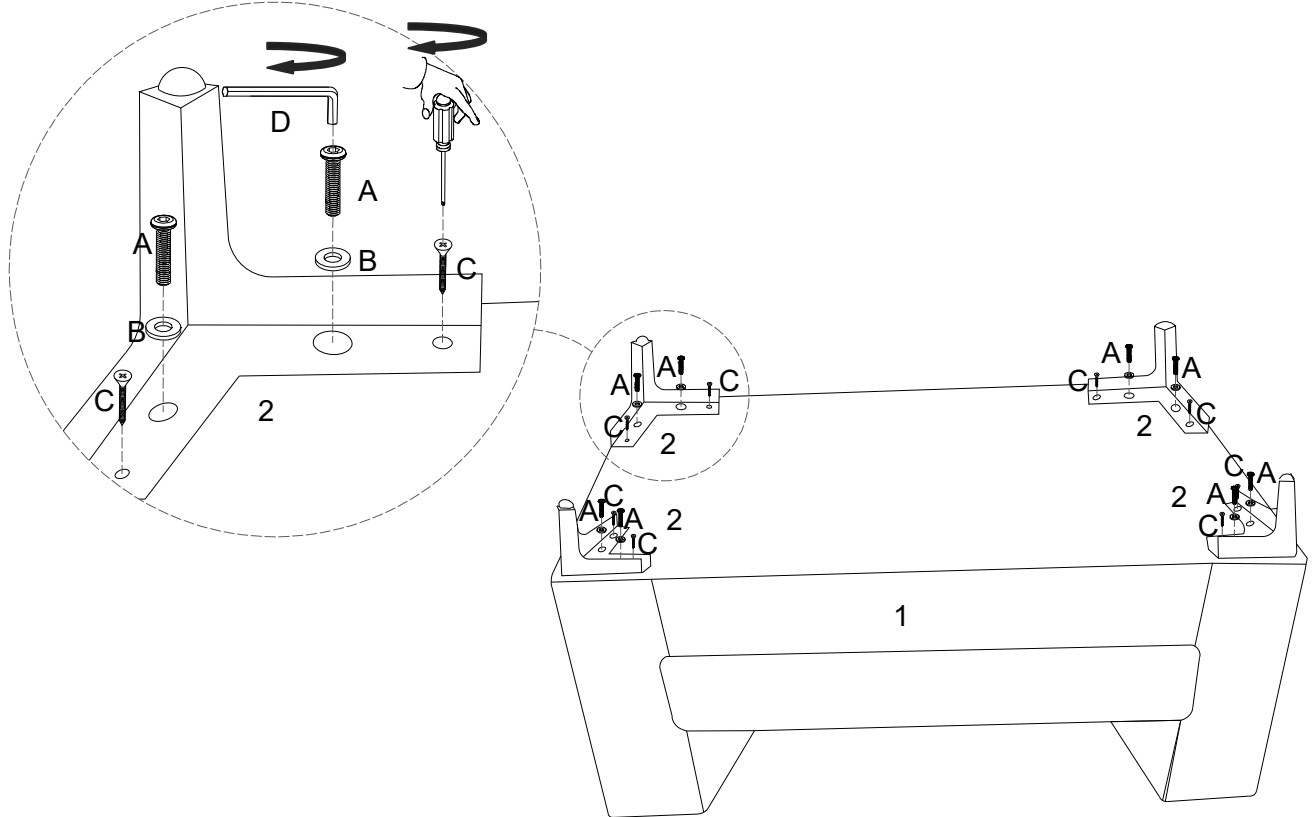Use **Allen Wrench (D)** to tighten **Bolts (A)** and **Phillips Head Screwdriver (Not provided)** to tighten **Screws (C)** clockwise until secure.

Repeat the same steps for the remaining **Chair Legs (2)**.




				
Ax8	Bx8	Cx8	Dx1	Phillips Head Screwdriver (Not included)

Hardware & Tools required

STEP 2:

Carefully turn over the assembled chair.

Put **Back Cushion (3)** to the assembled **Chair Body (1)** as shown.

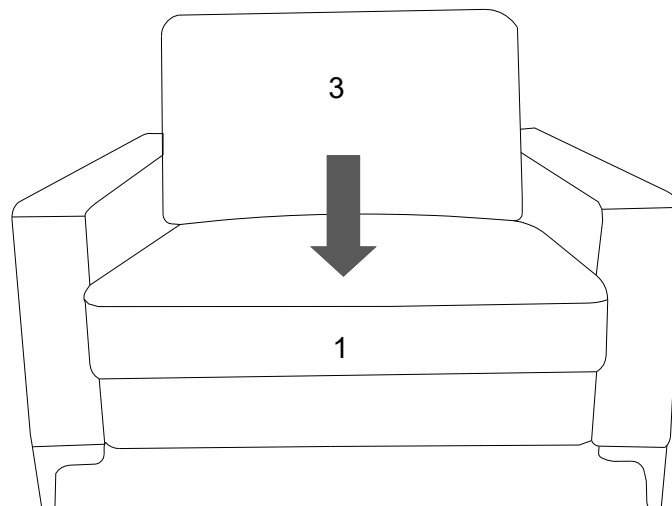

Assembly is complete. Your chair is ready to be used now!