

ASSEMBLY INSTRUCTION

ITEM NO. : EEI - 3616

*modway

3 PARTS: Chair, Support Base And Cushion

You will find the hardware packed and attach the chair

(A)



Bolt x 3

(B)



Nut x 3

Step 1

Take out the hardware package tied to the chair. Insert **Chair Back** to **Chair Seat**, make sure holes are aligned then insert **Bolt** (A) and attach the **Nut** (B) then tighten.

Step 2

Insert the **Chair Seat** (1) to the **Support Base** (3) put the **Cushion** (4) into the chairs.


4 Cushion



2 Chair Back



1 Chair Seat

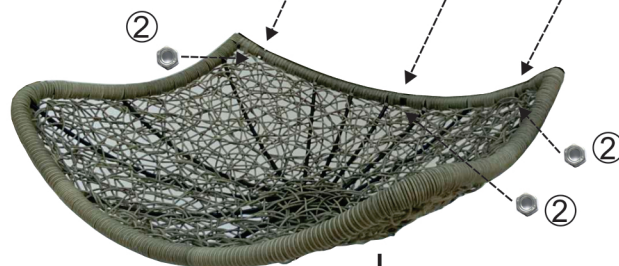

3 Support Base

