


Thank you for purchasing the MODWAY SIDE TABLE.

Before you start, here are some helpful advice:


- 1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- 2. Owing to the size and weight of the Top and Base, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
- 3. Please do not use any tools other than those provided or recommended in these instructions.
- 4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe and environmentally friendly way.
- 5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
- 6. Please keep all pieces out of reach of children.

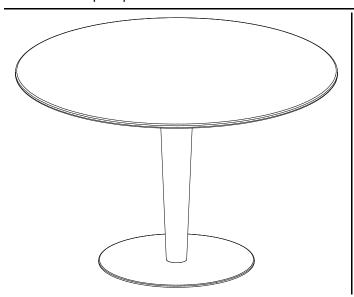

Hardware:

- A. (1) Bolt M8x30mm x6
- C. (Flat Washer x4
- D. Allen Wrench x1

Components:

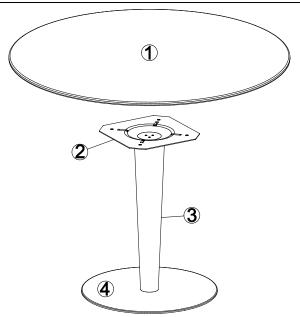

1. Top x1

2. Fixing Plate

3. Pole

x1

4. Base

x1


TOP SKU LIST: EEI-1115, EEI-1116, EEI-1122, EEI-1123, EEI-1124, EEI-1128, EEI-1129, EEI-1136, EEI-1139, EEI-1140, EEI-1117, EEI-1118, EEI-1125, EEI-1130, EEI-1131, EEI-1137, EEI-1832, EEI-1833, EEI-1834

x1




STEP 1:

- 1. Take out the hardware package from the carton of Base (4).
- 2. Adjust each three holes at the bottom of **Pole (3)** and **Base (4)** to be matched, then insert 3 pieces of **Bolts (A)** into the matched holes of the bottom of **Pole (3)** and **Base (4)** as shown.
- 3. Use Allen Wrench (D) to tighten all Bolts (A) clockwise as shown.

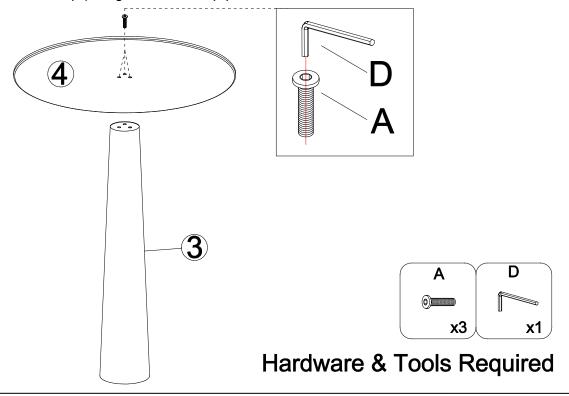

STEP 2:


- 1. Carefully turn over the assembled Pole (3) and Base (4).
- 2. Adjust each three holes of **Fixing Plate (2)** and **Pole (3)** to be matched, then insert 3 pieces of **Bolts (A)** into the matched holes of **Fixing Plate (2)** and **Pole (3)** as shown.
- 3. Use Allen Wrench (D) to tighten all Bolts (A) clockwise as shown.

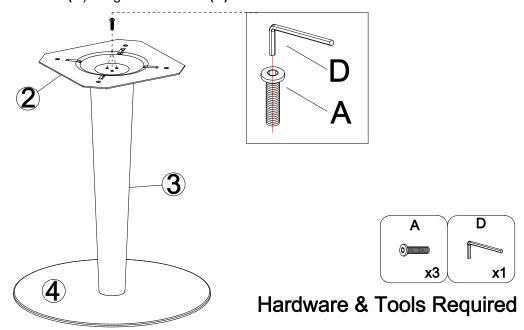



STEP 3:

- 1. Please put **Top (1)** upside down on a carpeted or padded surface.
- 2. Adjust each four holes of the bottom of **Top (1)** and **Fixing Plate (2)** to be matched, then insert 4 pieces of **Bolts (B)** with 4 pieces of **Flat Washers (C)** into the matched holes of the bottom of **Top (1)** and **Fixing Plate (2)** as shown.
- 3. Use Allen Wrench (D) to tighten all Bolts (B) clockwise as shown.

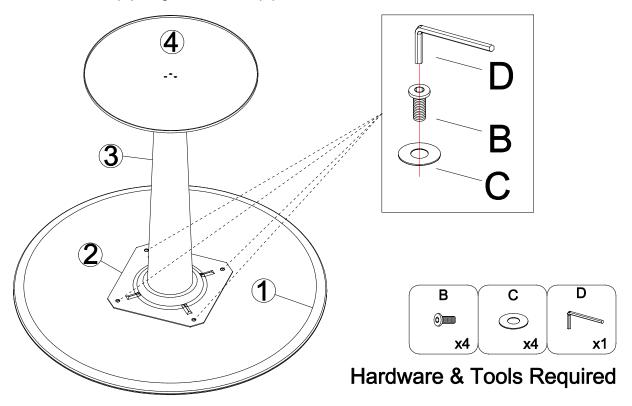

STEP 4:

Carefully turn over the assembled table.



Assembly is complete. Your table is ready to enjoy now!