
ASSEMBLY INSTRUCTIONS

EEI-5612

V1.08.06.21

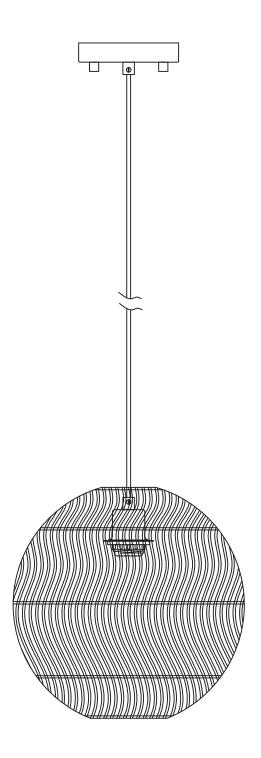

Let's get started!

*modway



Read through all of the instructions before starting



Make sure you have all parts and components before discarding any packing materials Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation. Check all parts and hardware for damage.

If the product is damaged, it should not be used.

We reccomend LED bulbs. LEDs are better for energy consumption and can prolong the life of the fixture.

Allow the fixture to cool before changing the bulb. Fixture may get hot when in use.

Provided hardware:

A		Mounting plate	х1	С	Wire Connector	х3
В	Quunn	Long Screw	x2	D	Screw Caps	x2
E		Lamp Socket Ring	x1			

CARING FOR YOUR ITEM

Indoor use only.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.


You may also need:

- + Ladder
- + Electrical Tape
- + Wire Strippers or Cutters

What you need:


One (1) E26 (medium-base) Light Bulb (MAX. 60W) Bulb not included



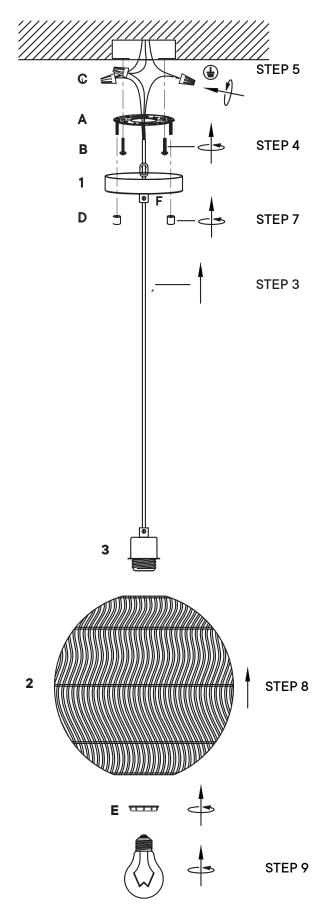


For safety, please consult a local electrician or code professional before installing your new fixture.

Before beginning TURN OFF POWER to th ht o th u o ut a

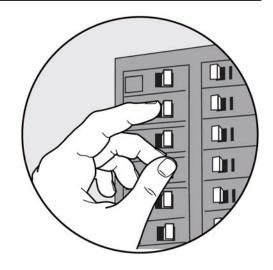



Step 2

Un-screw the Screw Cap (D) to dismantle Mounting Plate (A) from the Ceiling Canopy (1)

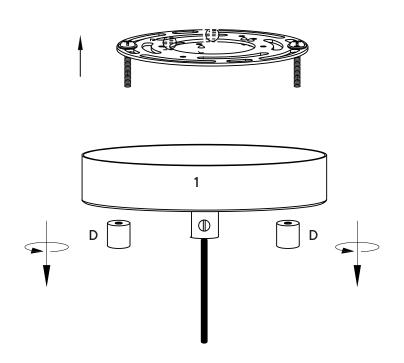

Determine your desired total drop of the Lamp Cord (2). Total drop is the distance from the ceiling to where you would like the bottom of the pendant to hang. Once decided, secure the Lock Sleeve (F) at the Ceiling Canopy (1).

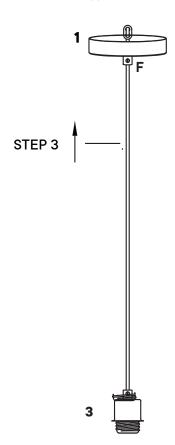

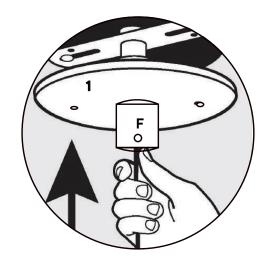


Step 4



Attach the Mounting Plate (A) to the outlet box. Insert Long Screws (B) into each hole on mounting plate and align with holes in electrical box. Tighten all screws.

Pull out all three wires from the outlet box.

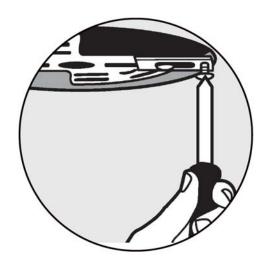



Connect wires with matching polarity.


Attach the wires from the outlet box to the wires from the light fixtures.


The black fixture wire connector to the black supply wire (Live Wire) (L) and the white fixtures wire to the white supply wire (Neutral Wire) (N).




If there is no supply ground wire, attach the cooper fixture wire to the **Mounting Plate (A)** to ground.

Make the appropriate electrical connection according to your local state, and/or country code requirements.

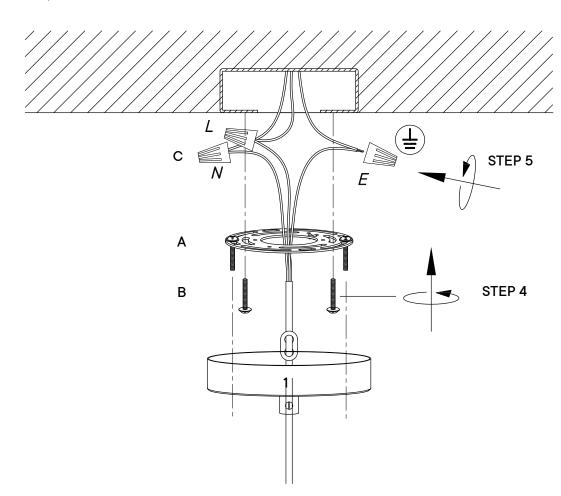

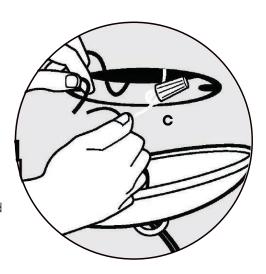


Continue to support fixture. Make sure all connected wires are carefully placed inside of box and canopy.

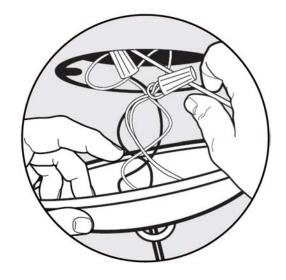


Step 7



Attach the Ceiling Canopy (1) to the Mounting Plate (A). Place the exposed ends of the two 1-Inch screws through the holes in the canopy and tightly attach the two Screw Caps (D)

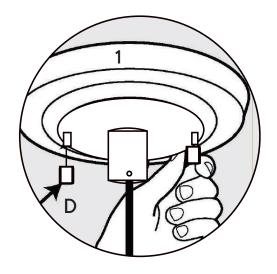

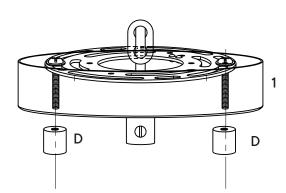



E Lamp Socket Ring

Attach the Lamp Shade (2) by securing the Lamp Socket Ring.(E) to the

x1

Step 9

Bulb Socket (3).

Install the light bulb according to the wattage label (E26, MAX. 60W, bulb not included).

STEP 8 STEP 9

ATTENTION: To avoid the risk of fire, do not exceed the recommended wattage indicated on the wattage label.

Great job!

Your new light fixture is ready for use.



CARING FOR YOUR ITEM

Indoor use only.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US! (a)







Tag us @modway_furniture and #modway for a chance to be featured.

