


ASSEMBLY INSTRUCTIONS

EEI-6023

V1.03.07.22

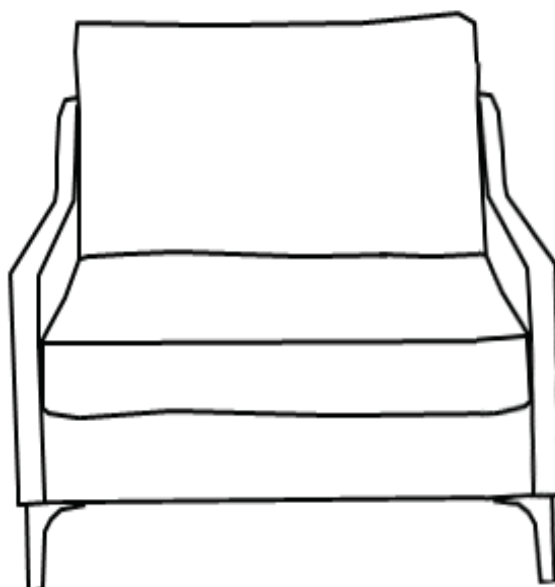

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.




Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.




Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

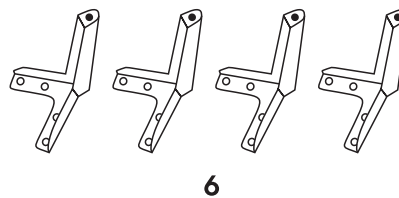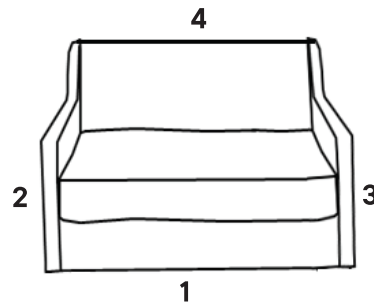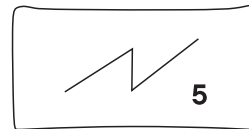1	Armchair Seat	x1
2	Left Arm	x1
3	Right Arm	x1
4	Armchair Back	x1
5	Back Cushion	x1
6	Metal Leg	x4



Provided hardware:

A		Bolt M8 x 60mm	x12
B		Flat Washer M8	x12
C		Allen Wrench M5	x1


Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

COMPONENTS

- | | | |
|---|---------------|----|
| 1 | Armchair Seat | x1 |
| 2 | Left Arm | x1 |
| 3 | Right Arm | x1 |
| 5 | Back Cushion | x1 |
| 6 | Metal Leg | x4 |

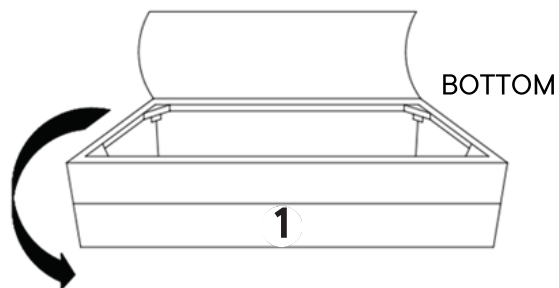


Unzip the bottom cover and locate the Left Arm (2) + Right Arm (3) + Back Cushion (5) + 4 Metal Leg (6) + Hardware package.

Step 2

COMPONENTS

- | | | |
|---|---------------|----|
| 1 | Armchair Seat | x1 |
| 2 | Left Arm | x1 |
| 3 | Right Arm | x1 |

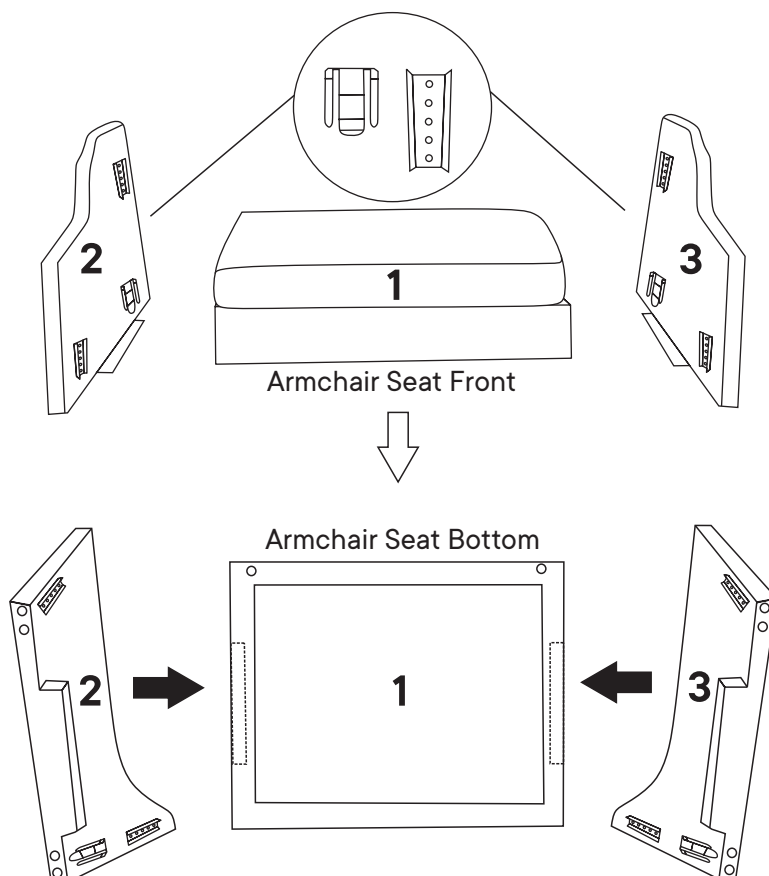


Step 3

HARDWARE

A	Bolt M8 x 60mm	x6
B	Flat Washer M8	x6
C	Allen Wrench M5	x1

COMPONENTS


1	Armchair Seat	x1
2	Left Arm	x1
3	Right Arm	x1
6	Metal Leg	x2

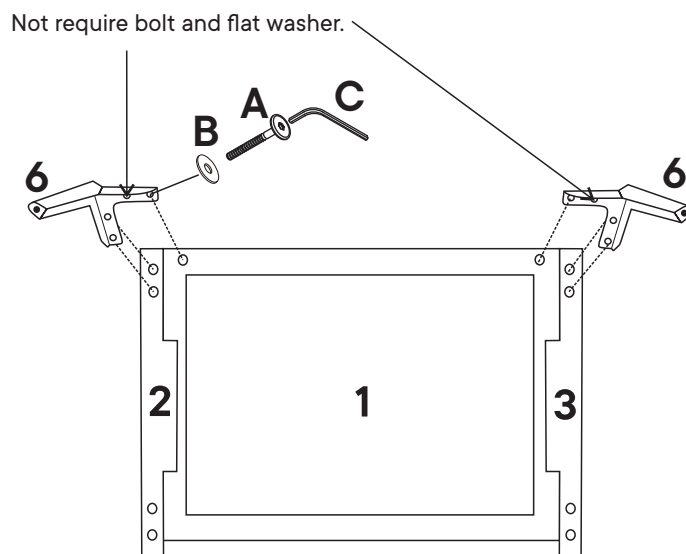

Step 4

COMPONENTS

1	Armchair Seat	x1
2	Left Arm	x1
3	Right Arm	x1
4	Armchair Back	x1

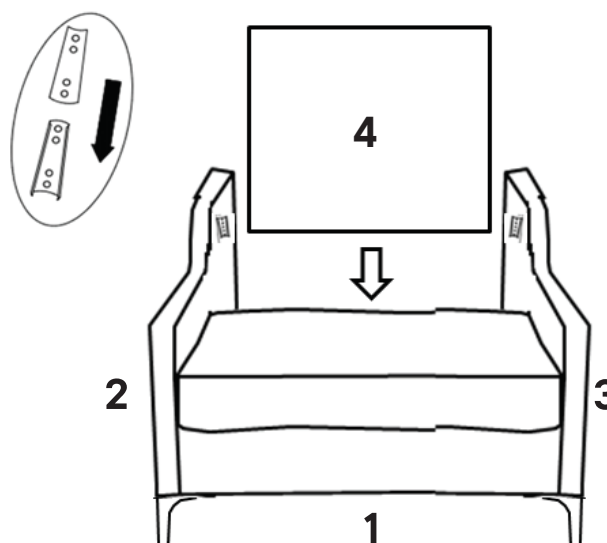


Step 5

HARDWARE

A	Bolt M8 x 60mm	x6
B	Flat Washer M8	x6
C	Allen Wrench M5	x1

COMPONENTS


1	Armchair Seat	x1
2	Left Arm	x1
3	Right Arm	x1
4	Armchair Back	x1
6	Metal Leg	x2

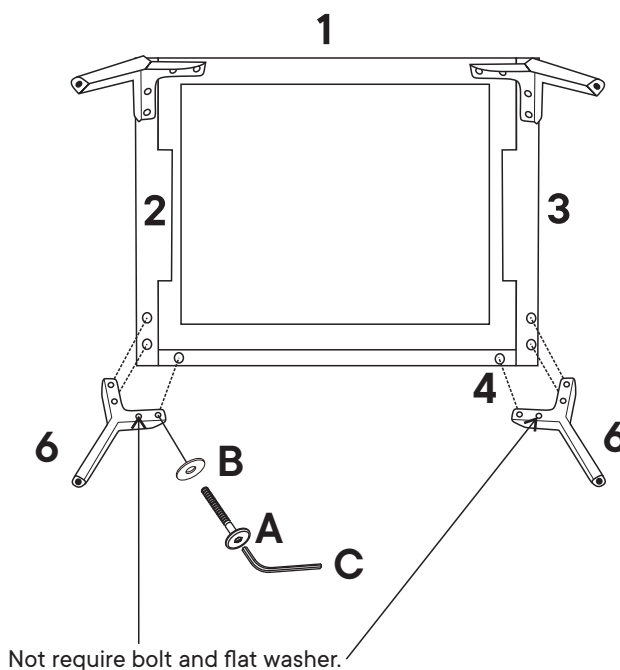

Step 6

COMPONENTS

5	Back Cushion	x1
----------	--------------	----

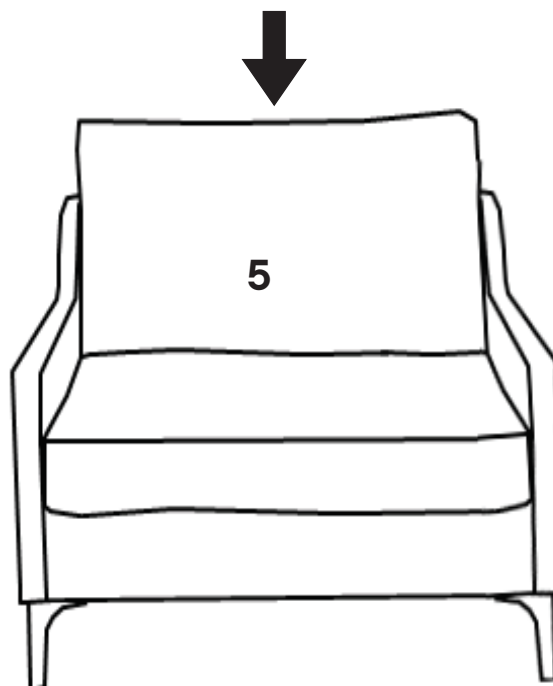

Great job!

Your Armchair is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

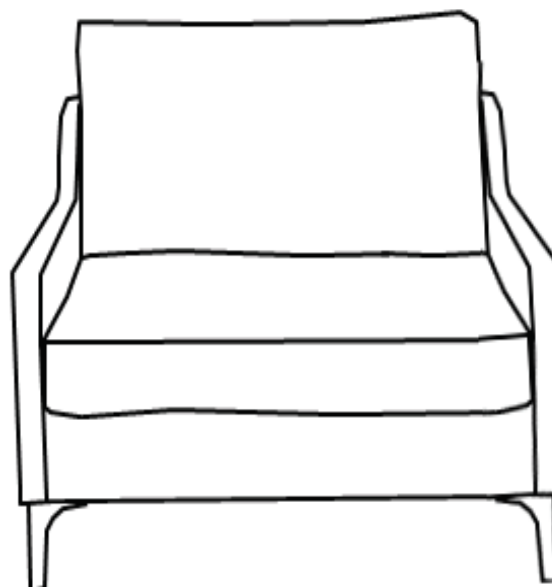

CONNECT WITH US!   

Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.