

ASSEMBLY INSTRUCTIONS


EEI-6221

V1.30.11.22

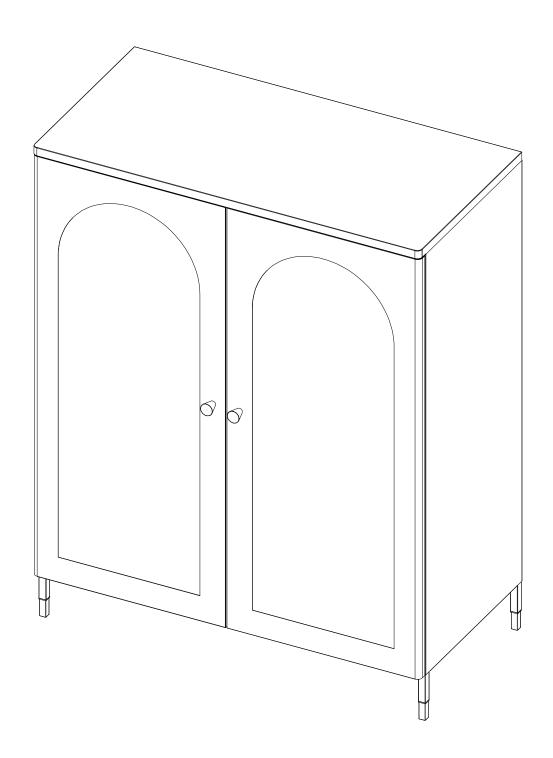



Let's get started!





Read through all of the instructions before starting



Approx. 30 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials **Only use hand tools to assemble this item.** Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.


Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

Α	Left Panel	x1
В	Right Panel	x1
С	Back Left Panel	x1
D	Back Right Panel	x1
E	Top Panel	x1
F	Bottom Panel	x1
G	Shelf	x2
н	Front Leg	x1
I	Back Leg	x1

J	Left Door Panel	x1
К	Right Door Panel	x1

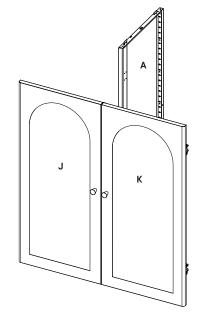

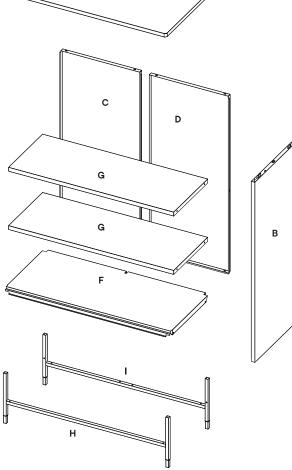

Provided hardware:

0		Door Hinge Set	x4
Р		Plastic Cap	x15
Q		Pan Head Screw M4 x 25mm	x2
s		Foot Protectors	x4
т	\bigcirc	Door Handle	x2
U		Shelf Holder	x8
٧		Shelf Stopper	х8
W		Adjustable Foot Pads	x4
х		Magnet Bar Set	x4








Missing parts or hardware? Need assistance? Contact us before returning your item. We're here to help! 609.256.9000 • cs@modway.com

COMPONENTS A Left Panel x1 B Right Panel x1 E Top Panel x1

Notes: Make sure the arrow direction for the Top Panel and Left/Right Panel is the same, then can fasten. If wrongly assembled, it won't be easy to disassembly.

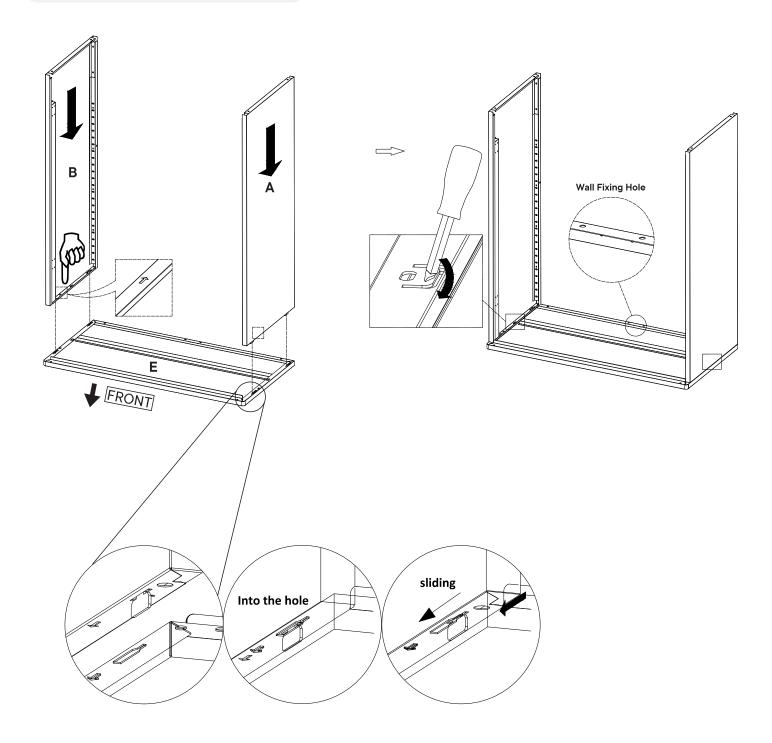


Steb	3		$s \rightleftharpoons w \rightleftharpoons$
СОМ	PONENTS		
A	Left Panel	x 1	
В	Right Panel	x1	
•	Front Leg	x1	
0	Back Leg	x 1	
HARD	OWARE		H L
8	Foot Protectors	x4	
W	Adjustable Foot Pads	x4	B A


Option

Step 3

сом	PONENTS	
A	Left Panel	x1
B	Right Panel	x1
HARD	WARE	
P	Plastic Cap	x4

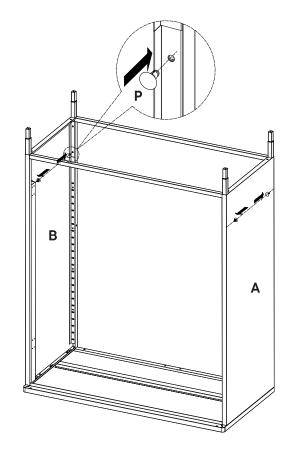


A	Left Panel	x1
B	Right Panel	x1
0	Back Left Panel	x1
D	Back Right Panel	x1
HARI	OWARE	
P	Plastic Cap	x11

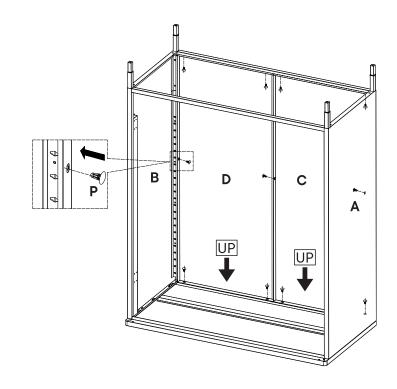


Step 5


A	Left Panel	х1
В	Right Panel	x1
0	Back Left Panel	x1
D	Back Right Panel	x1
ß	Bottom Panel	x1

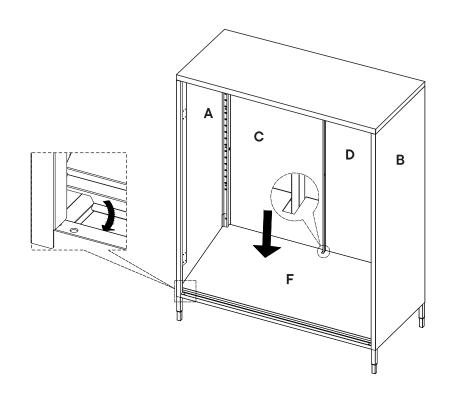


СОМ	IPONENTS	
A	Left Panel	x1
B	Right Panel	x1
0	Back Left Panel	x1
D	Back Right Panel	x1
HARI	DWARE	
0	Shelf Holder	x8

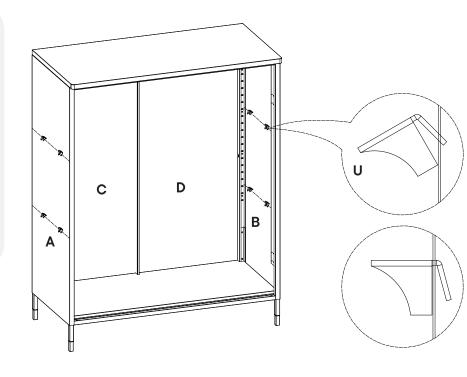


Step 7

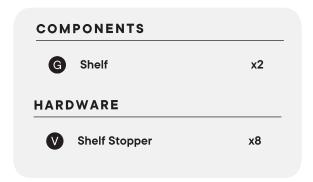

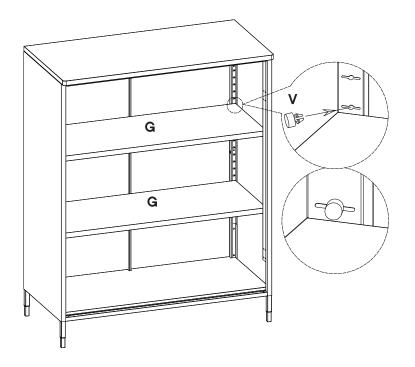


PONENTS	
Left Door Panel	x1
Right Door Panel	x1
WARE	
Door Hinge Set	x4
	Right Door Panel

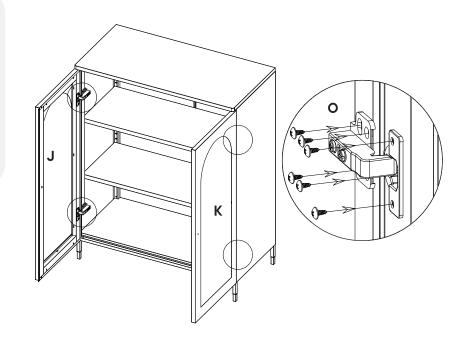

Step 9

COMPONENTS		
0	Left Door Panel	x1
K	Right Door Panel	x1
HARD	WARE	
Q	Pan Head Screw M4 x 25mm	x2
0	Door Handle	x2
X	Magnet Bar Set	x4
W	Adjustable Foot Pads	x4

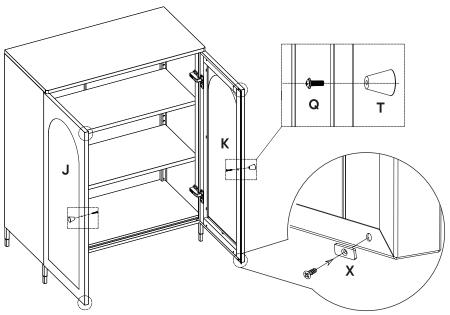

Notes: If there is a gap in the door, it may be caused by an uneven floor, which can be adjusted by adjustable foot pads (W).



Great job!

Your cabinet is complete.



CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.










Tag us @modway_furniture and #modway for a chance to be featured.

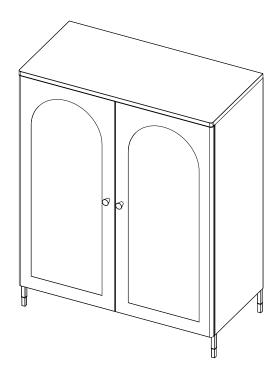


Guide to hinges adjustment facilities


Warning: To ensure all hinges continue to work smoothly, pls check them regularly and adjust them necessary.

Question 1

How to adjust the two door are not aligned and lower with screw adjustment?

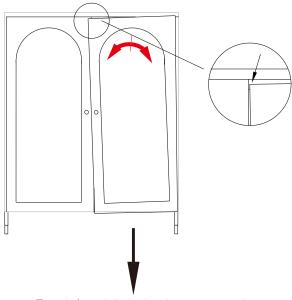


Turn left middle bolt adjuster properly until door is balanced

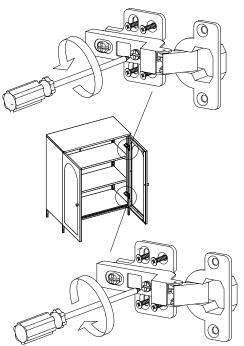


Turn right middle bolt adjuster properly until door is balanced

Question 2

How to adjust the two door are not aligned and higher with screw adjustment?

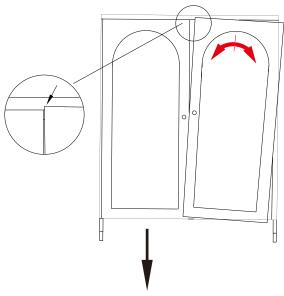

Turn right middle bolt adjuster properly until door is balanced

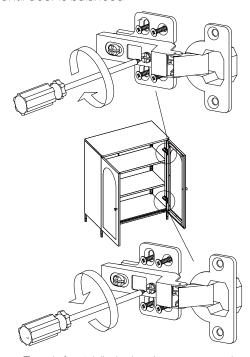


Turn left middle bolt adjuster properly until door is balanced

Guide to hinges adjustment facilities

Warning: To ensure all hinges continue to work smoothly, pls check them regularly and adjust them necessary.


Question 3

How to adjust the door gap at side with screw adjustment?

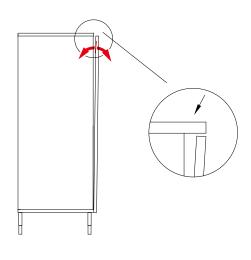




Turn left the adjuster properly until door is balanced

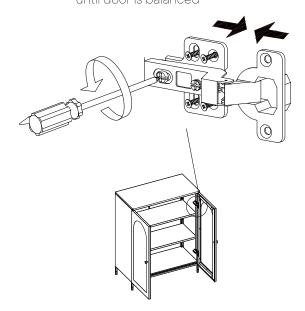


Question 4

How to adjust the door gap at at front with screw adjustment?

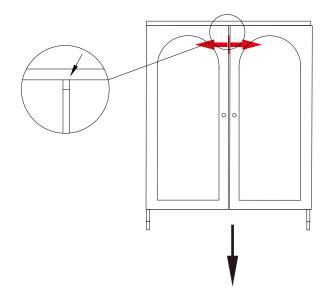

Turn right middle bolt adjuster properly until door is balanced

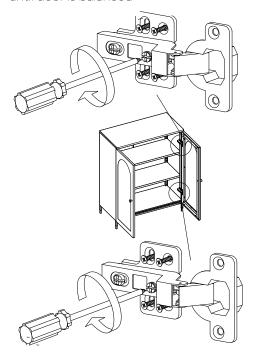


Turn right middle bolt adjuster properly until door is balanced


TIPPING RESTRAINTS KIT (Z) INSTALLATION GUIDANCE


Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.



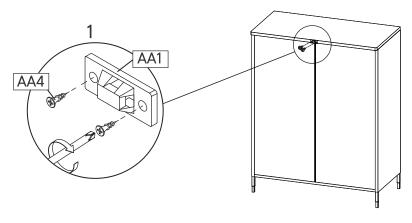

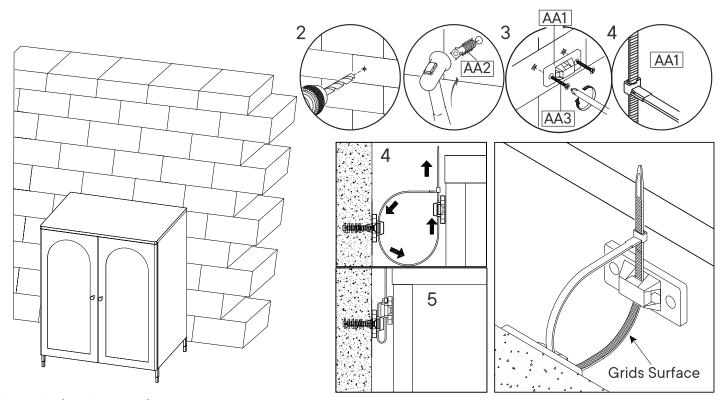

Installation Instructions:

- 1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided.
- 2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
- 3. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the at end through the locking end and draw it through until all slack is removed.
- 4. Make sure that the strap is securely laced & locked.