ASSEMBLY INSTRUCTIONS

EEI-6277

V1.15.01.23





Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

x2

Approx. 60 minutes assembly time




for assembly

Furniture components:

1	Top Panel	x1	10	Back Panel - R	х1
2	Bottom Panel	x1	11	Spice Rack Side - L	х1
3	Side Panel - L	x1	12	Spice Rack Side - R	x1
4	Side Panel - R	x1	13	Spice Rack Bottom	х1
5	Center Panel	x1	14	Shelf Panel	x1
6	Middle Panel - 1	x2	15	Drawer Front	x2
7	Middle Panel - 2	x1	16	Drawer Back	x2
8	Middle Support	х4	17	Drawer Side - L	x2
9	Back Panel - L	x1	18	Drawer Side - R	x2

20	Door Panel	x1
	17 16	18
	17/	_

Drawer Bottom




M Round Pipe

K2 🗮

L1

L2

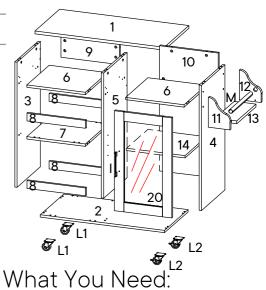

Phillips Head Screwdriver*

Provided hardware:

A 1		Cam Lock	x34
A2		Minifix Screw	x34
АЗ		Plastic Cap	x34
В		Wood Dowel M8 x 30mm	x44
С		CSK Cap Wood Screw M6 x 50mm	x11
D		Allen Key M4	x 1
E	- Panamana-	C.B Screw M3.5 x 16mm	x56
F	D ammannan-	C.B Screw M4 x 25mm	х6
G	D amminimin	C.B Screw M4 x 38mm	x16
Н		Metal Shelf Support	x4
ı		PVC Handle 00036	х3

Soft Closing 7/8 Hinges	x2	•
12" Drawer Slide - L/R	x4	*N
12" Drawer Slide - L/R	x4	•
Nylon Caster	x2	•
Nylon Caster With Stopper	x2	•


x1

*Not included	




Missing parts or hardware? Need assistance? Contact us before returning your item. We're here to help! 609.256.9000 · cs@modway.com


HARDWARE		
A2	Minifix Screw	х8
COMPONENTS		
0	Top Panel	x1

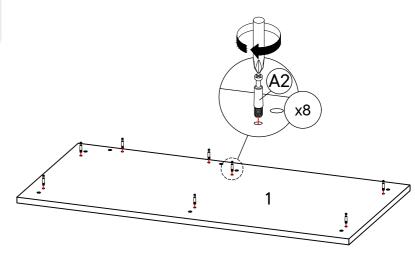


A1	Cam Lock	х6
A2	Minifix Screw	x20
B	Wood Dowel M8 x 30mm	x12
СОМ	PONENTS	
3	Side Panel - L	x1
4	Side Panel - R	x1
5	Center Panel	x1

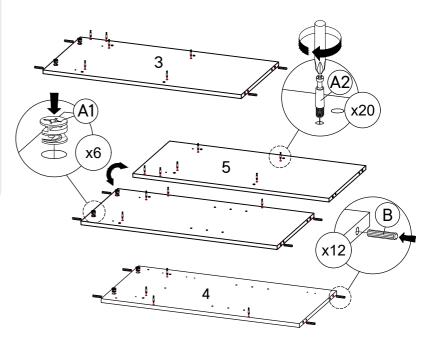


	DWARE	
A1	Cam Lock	x12
B	Wood Dowel M8 x 30mm	x12
СОМ	PONENTS	
6	Middle Panel - 1	x2
7	Middle Panel - 2	x1

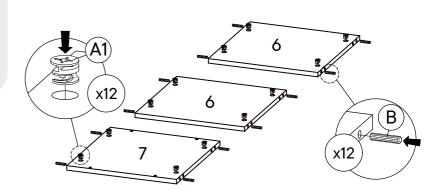

A1	Cam Lock	x10
В	Wood Dowel M8 x 30mm	x12
ОМІ	PONENTS	
8	Middle Support	x4
9	Back Panel - L	x1
10	Back Panel - R	x 1

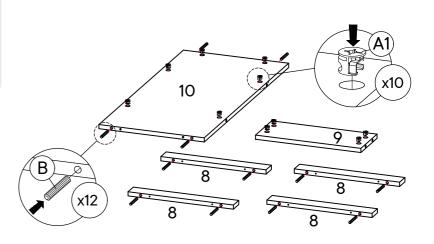

A1	Cam Lock	х6
A2	Minifix Screw	х6
B	Wood Dowel M8 x 30mm	x8
ОМ	PONENTS	
1	Spice Rack Side - L	x1
12	Spice Rack Side - R	x1
13	Spice Rack Bottom	x1
15	Drawer Front	x2
7	Drawer Side - L	x2
18	Drawer Side - R	x2

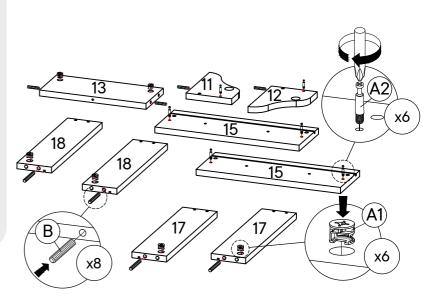


Step 6

B	C.B Screw M3.5 x 16mm	x12
K1	12" Drawer Slide - L	x2
K1	12" Drawer Slide - R	x1
СОМ	IPONENTS	
3	Side Panel - L	x1
4	Side Panel - R	x1
5	Center Panel	x1

Notes

K1	© 000000000000000000000000000000000000	12" Drawer Slide - L
K1	000000000000000000000000000000000000000	12" Drawer Slide - R

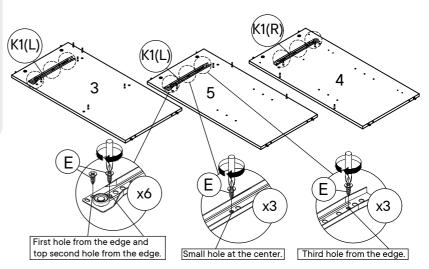


*modway

Step 7




Notes




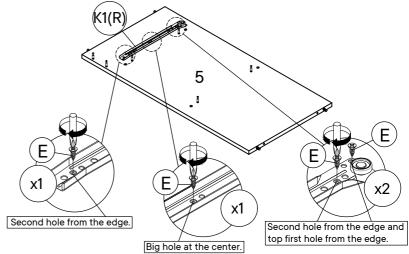


HARDWARE		
G	C.B Screw M4 x 38mm	x4
COMPONENTS		
7	Middle Panel - 2	x1
8	Middle Support	x2

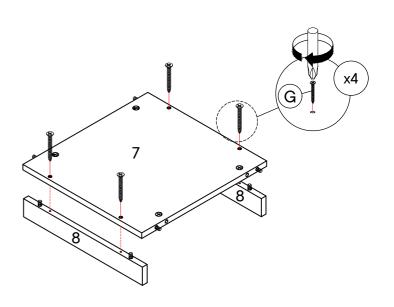


HARDWARE		
C.B Screw M4 x 38mm	x4	
PONENTS		
Bottom Panel	x 1	
Middle Support	x2	
	C.B Screw M4 x 38mm PONENTS Bottom Panel	

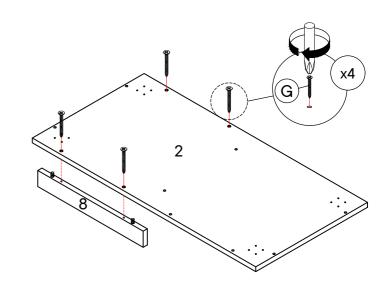


HARDWARE			
A3	Plastic Cap	х6	
сом	PONENTS		
3	Side Panel - L	x1	
6	Middle Panel - 1	x1	
7	Middle Panel - 2	x1	
9	Back Panel - L	x1	

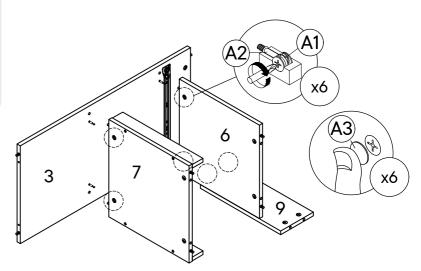


HARDWARE		
A3	Plastic Cap	х6
D	Allen Key M4	x1
сомі	PONENTS	
5	Center Panel	x1

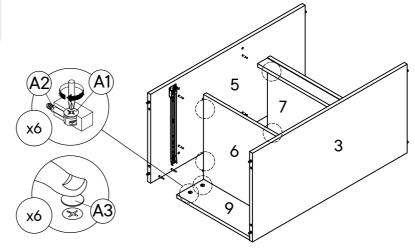


HARDWARE		
A3	Plastic Cap	x4
D	Allen Key M4	x1
СОМЕ	PONENTS	
6	Middle Panel - 1	x1
10	Back Panel - R	x1

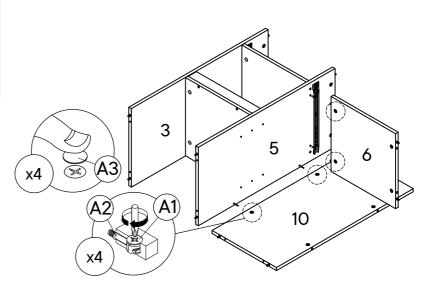


HARD	WARE	
A3	Plastic Cap	x4
сомі	PONENTS	
4	Side Panel - R	x1

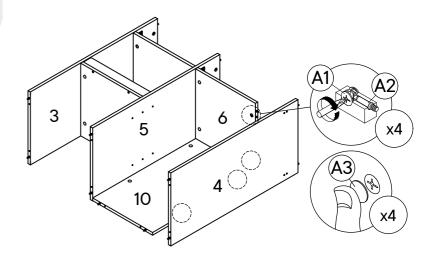


HARDW	ARE	
A3 P	lastic Cap	х8
СОМРО	NENTS	
1 T	op Panel	x1

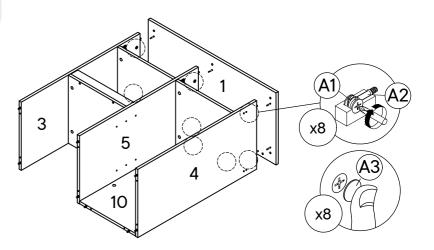


HARDWARE			
0	CSK Cap Wood Screw M6 x 50mm	x8	
D	Allen Key M4	x1	
COMPONENTS			
2	Bottom Panel	x1	

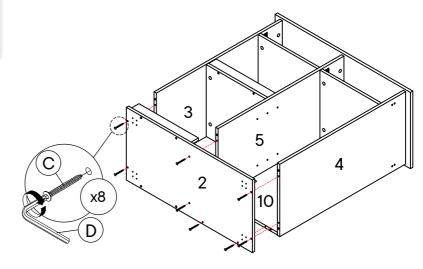


HARDWARE		
B	C.B Screw M3.5 x 16mm	x16
(1)	Nylon Caster	x2
12	Nylon Caster With Stopper	x2

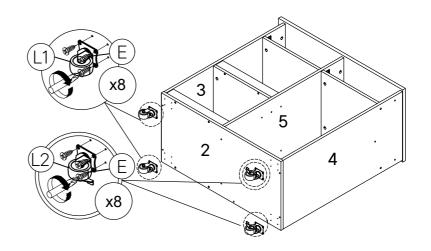


HARDWARE		
A3	Plastic Cap	x2
M	Round Pipe	x1
COMPONENTS		
1	Spice Rack Side - L	x1
12	Spice Rack Side - R	x1
13	Spice Rack Bottom	x 1

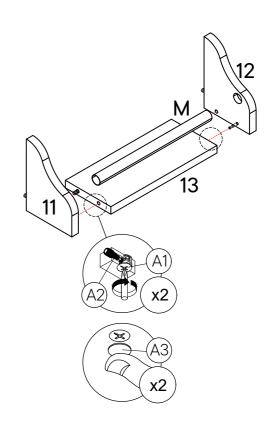


HARDWARE		
0	CSK Cap Wood Screw M6 x 50mm	х3
D	Allen Key M4	x 1

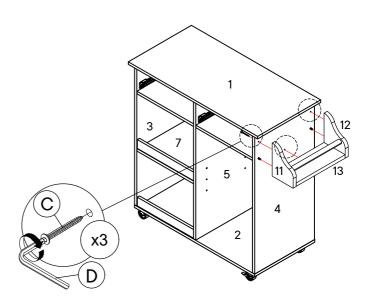




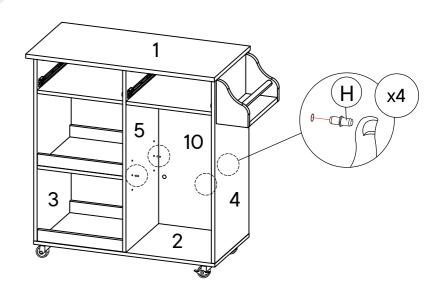




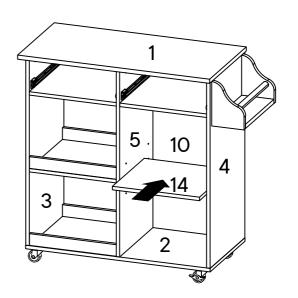


HARDWARE		
B	C.B Screw M4 x 25mm	x4
Ō	PVC Handle 00036	x2
сом	PONENTS	
15	Drawer Front	x2

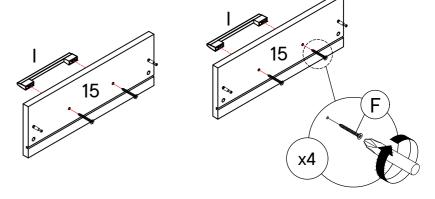


HARD	WARE	
G	C.B Screw M4 x 38mm	x8
СОМ	PONENTS	
16	Drawer Back	x2
17	Drawer Side - L	x2
18	Drawer Side - R	x2

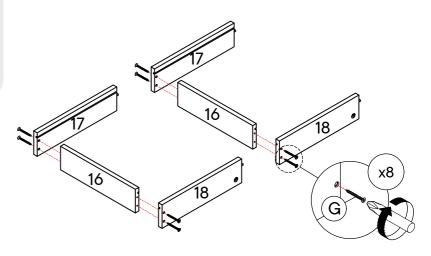



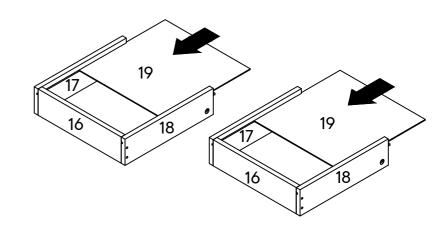


HARD	WARE		
A3	Plastic Cap	x4	
COMPONENTS			
15	Drawer Front	x2	

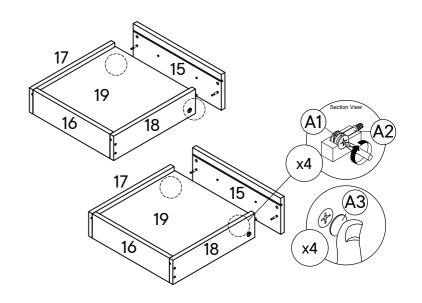


HARDWARE			
B	C.B Screw M3.5 x 16mm	x12	
K2	12" Drawer Slide - L	x2	
K2	12" Drawer Slide - R	x2	
_			

Notes

K2	© ••	0	•	12" Drawer Slide - L
K2	<u>o</u>	٥	•=	12" Drawer Slide - R

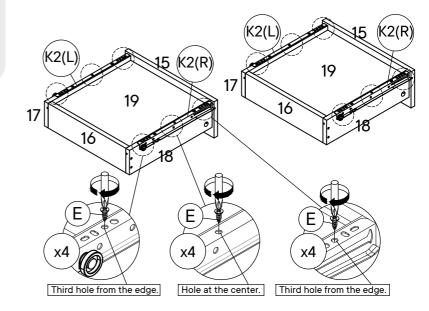


Step 26

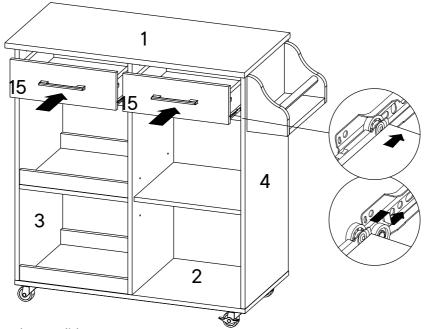

Put all the drawer in place along the drawer slides.

HARD	WARE	
B	C.B Screw M3.5 x 16mm	x4
(3)	C.B Screw M4 x 25mm	x2
0	PVC Handle 00036	x1
0	Soft Closing 7/8 Hinges	x2
СОМІ	PONENTS	
20	Door Panel	x1

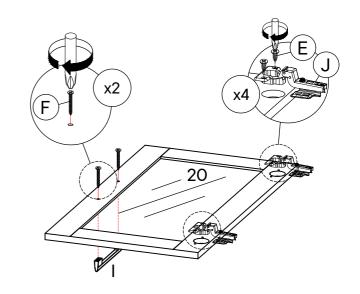


Step 28

HARDWARE C.B Screw M3.5 x 16mm x8

Fix hardware J into panel (4) by using hardware E. (Repeat 4 times for each hardware.)

Tighten or loosen the screw to adjust position of panel (20). (Do only when needed.)

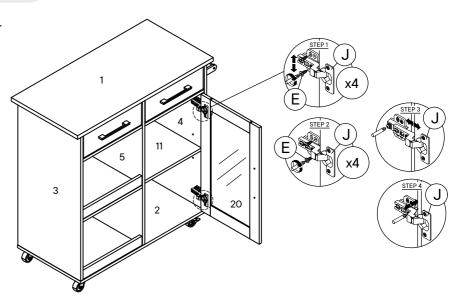

Great job!

Your new kitchen cart is ready.



CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

CONNECT WITH US! (1) (1)







Tag us @modway_furniture and #modway for a chance to be featured.

