


ASSEMBLY INSTRUCTIONS | TROPEZ OUTDOOR MODULAR SOFA

Step 1



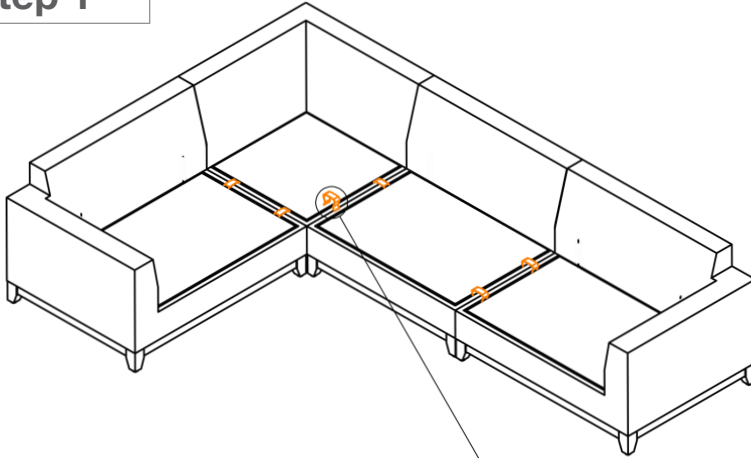


PARTS CHECKLIST

1



Stainless Steel Clamp
2 pcs for LF 1-Arm Sofa
2 pcs for RF 1-Arm Sofa
2 pcs for Corner Sofa
4 pcs for Armless Sofa

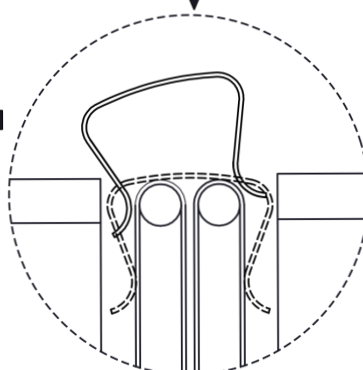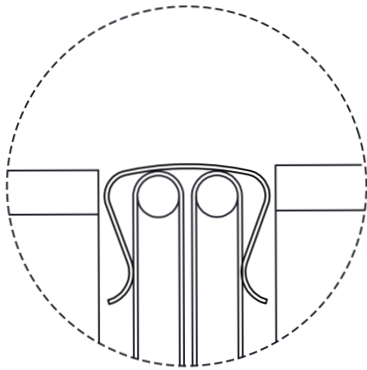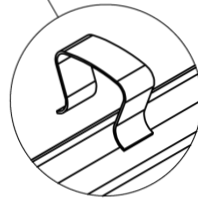

Finish

