

E-Commerce by Enitial Lab

## **ASSEMBLY INSTRUCTIONS**

#### MODEL#

## CM-BT6464

#### Questions?

GIVE US CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PST)



## **TOOLS REQUIRED**



#### Allen Wrench

(Included)



### **Phillips** Screwdriver

(Not Included)



2 - People Recommended

## ASSEMBLY RATING







The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 20-08-27





#### Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline Toll-Free 1-888-980-5122



WEBSITE www.foagroup.com









foagroi



Monday to Friday 8:30AM- 5:30PM (PST)



E-MAIL cs.ec@foagroup.com



FurnitureOfAmerica



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?	Prep Time!
Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

## PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





#### **Teamwork**

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### **Suitable Location**

Assembling near the area of the intended location is highly recommended.





#### **Sufficient Space**

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





#### **Flat Surface**

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

## ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

#### Note:

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




cam loci




cam bolt ca


cam lock screwdriver

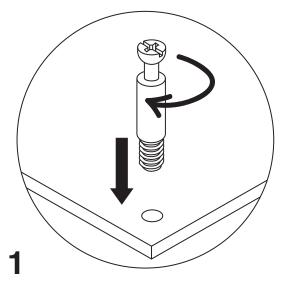


Screw the cam bolt into panel.

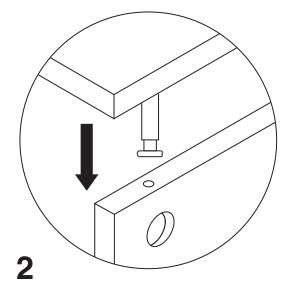

Insert the cam bolt into the bolt hole of joint panel.

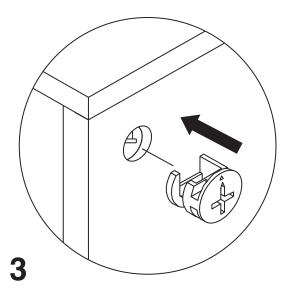

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

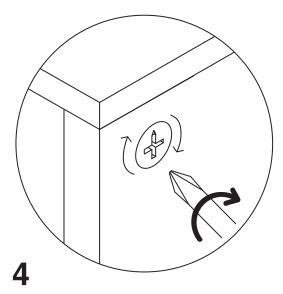

Turn the cam lock clockwise gently until it will not turn any more.


## **BAR TABLE**

CM-BT6464





## **PARTS**

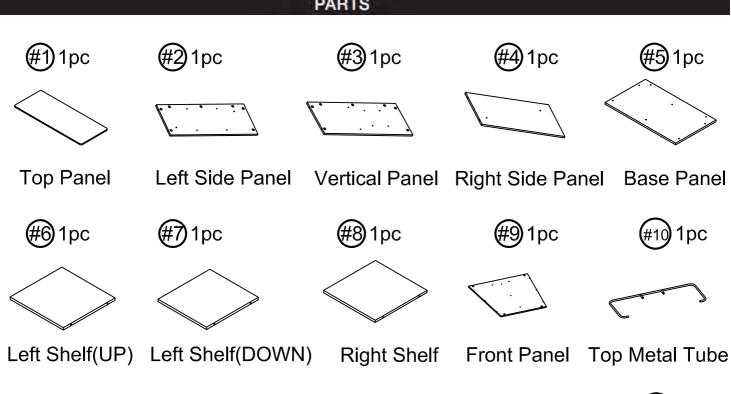

**Bottom** Metal Tube

1pc

(#12)2pcs

Support Leg

#13**)** 2pcs

**Bottom Metal Rack** 

#14)4pcs

Leg


(#5)1pc

**Base Panel** 

#10**) 1**pc

**Top Metal Tube** 

## **HARDWARE**

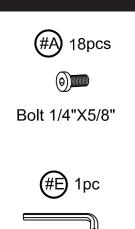









lt 1/4"X5/8" Bolt 1/4"X1-1/4"

Bolt 1/4"X1-5/8"

Flat Washer Ø13







Allen Wrench M4

*«шши*)

\_\_\_\_

ench M4 Wood Screw Ø4x16

Bolt 1/4"X1-5/8"

Cam Bolt









Cam-Look

Middle Washer

## **Exploded View**

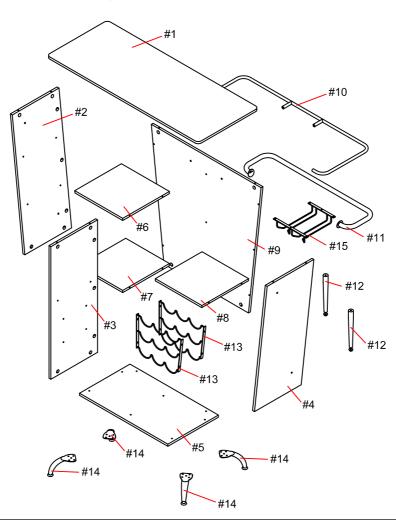


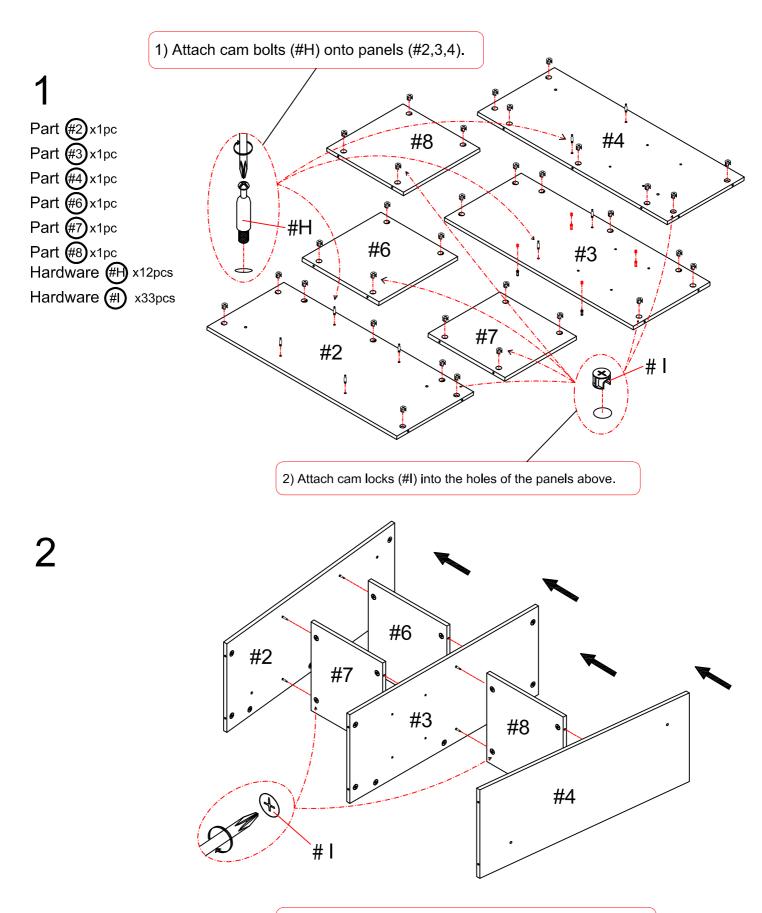


When attaching panels together, make sure to reference back to page 5 on how to properly fit cam bolts (#H) to cam locks (#I).

Align legs (#14) to the base panel (#5), then secure by using screws (#A,#F) and washer(#D). #E #A Part #14 x4pcs #14 #14 #D Hardware#A x4pcs #F Hardware#D x4pcs Hardware#F x 16pcs #5 #9 Part #1 x1pc Part #9x1pc # I Hardware (#I) x4pcs Hardware (#H x25pcs #1 #5 #H


5

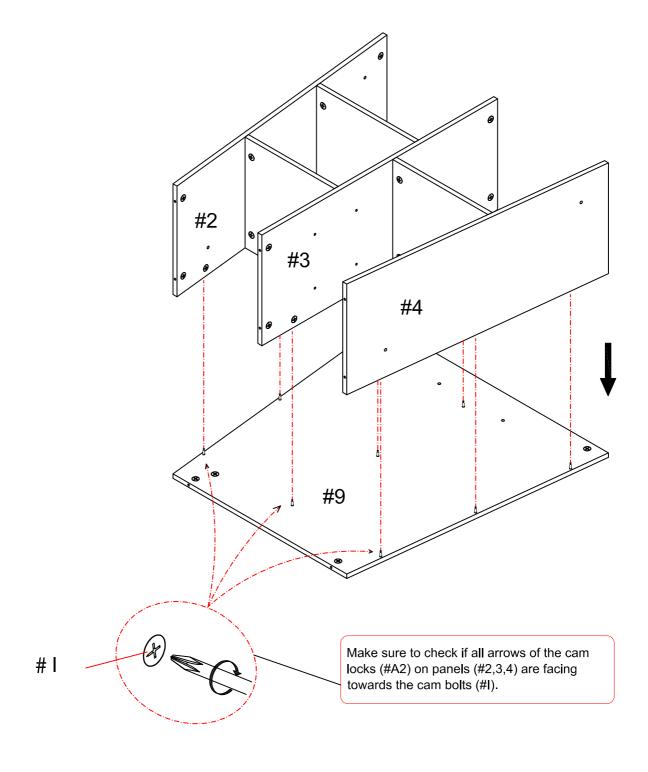



6

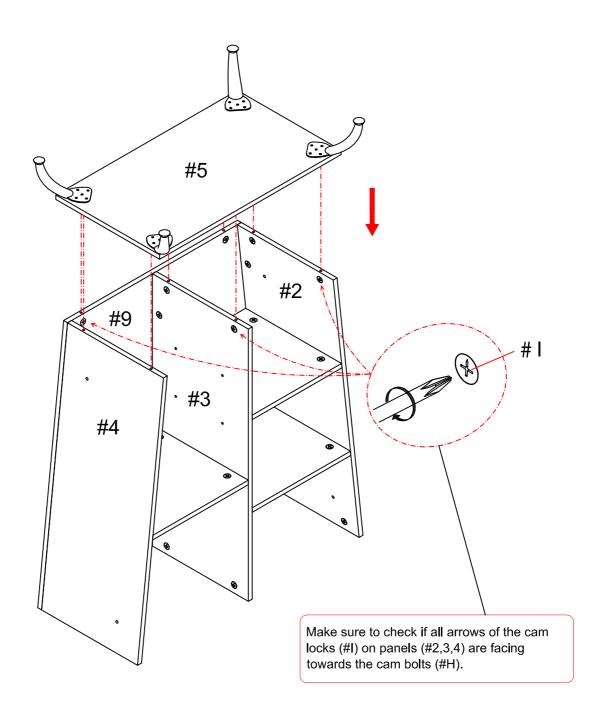


7

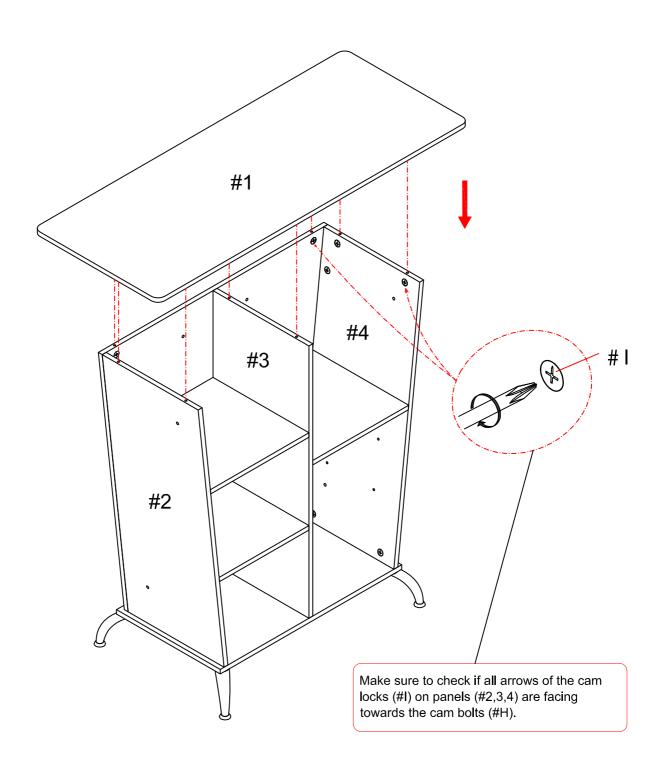

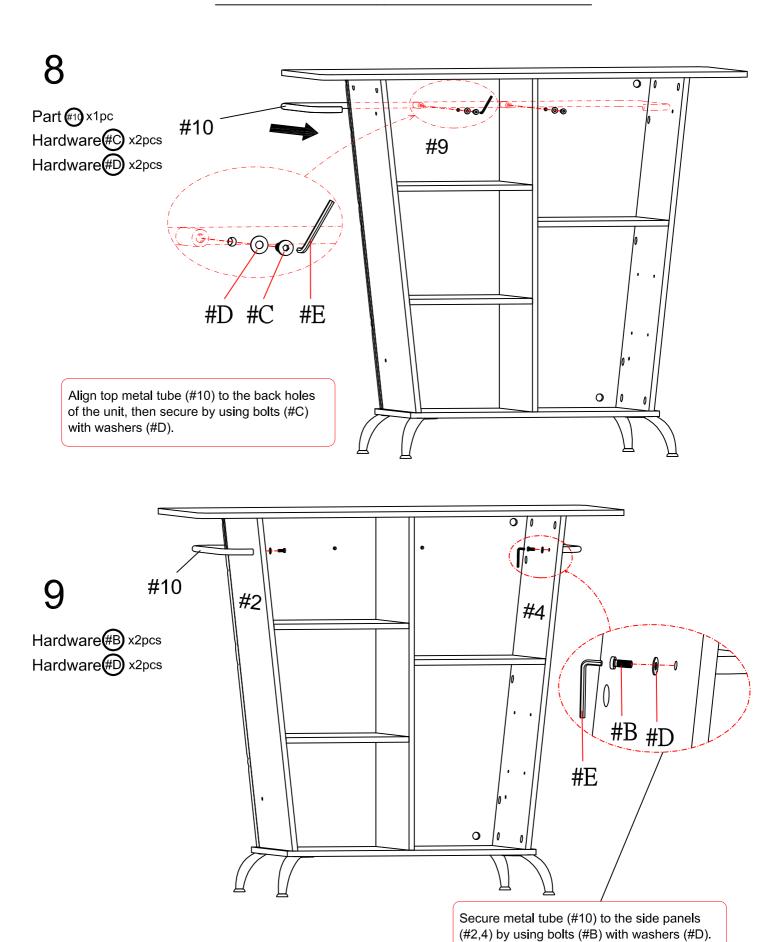

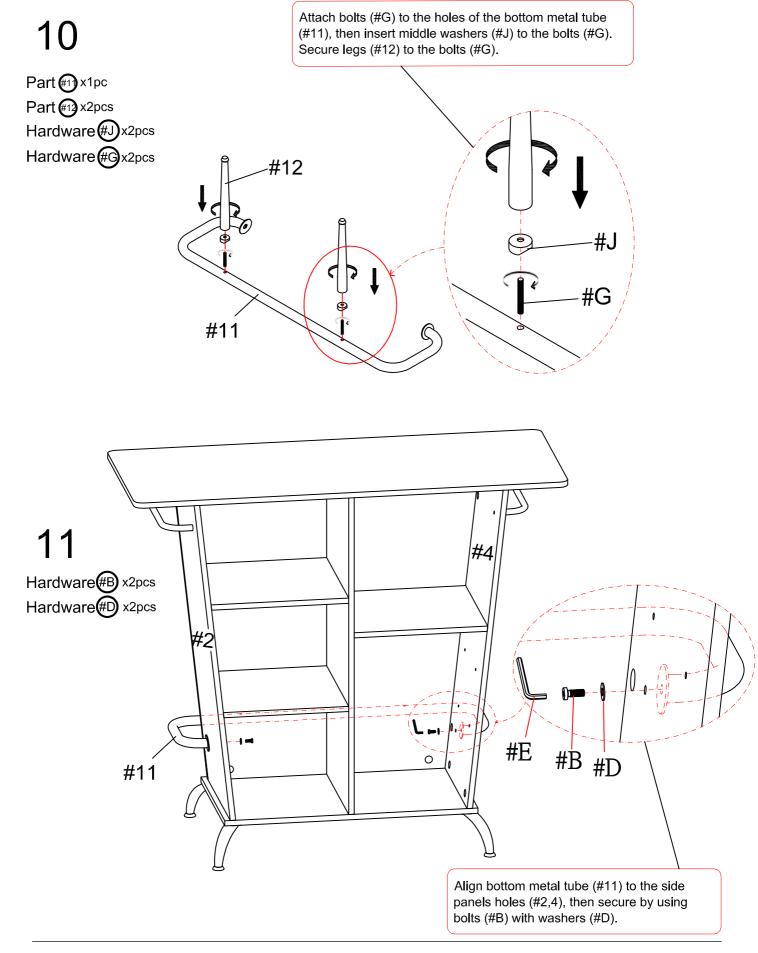

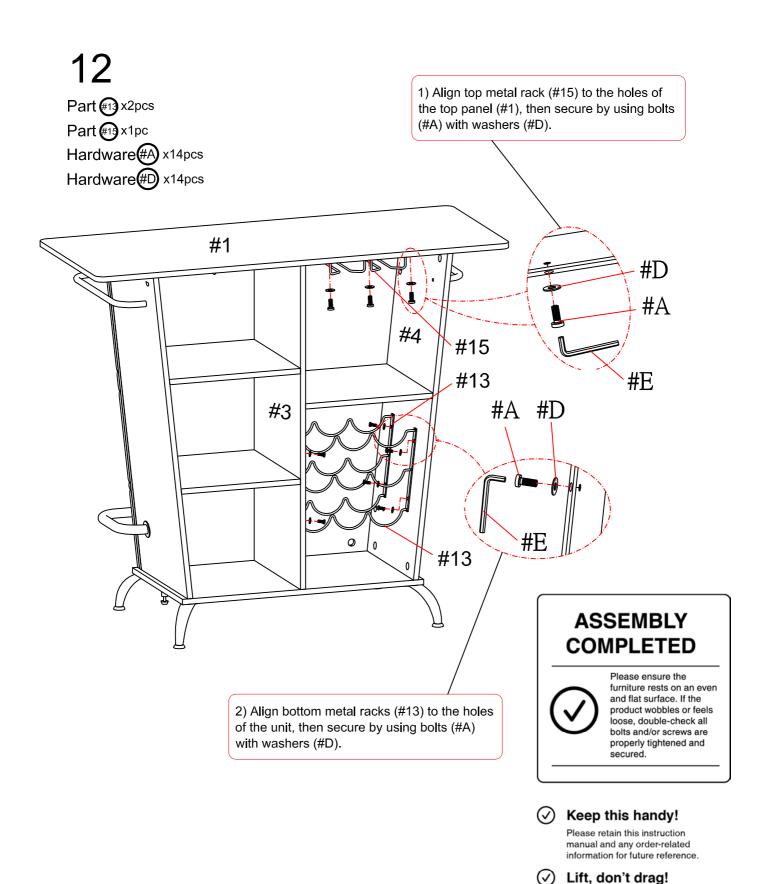

## To avoid damage to product

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.